

Werner.Herr@cern.ch

A MAD-X Primer

W. Herr and G. Sterbini, BE Department, CERN, 1211-Geneva 23

Abstract

The purpose of this note is to serve as an introduction to MAD-X for the novice user. It describes the basic building elements and the most important commands to define a machine and perform the most important calculations. It cannot replace a reference manual for the more advanced and demanding use of MAD-X, but should help starting up the design of a new accelerator lattice and to understand existing MAD-X input. This note is a writeup of a presentation given at a course on optics design at the Advanced course at the CERN Accelerator School.

The note is complemented by properly functioning examples.

Geneva, Switzerland

July 2017

1 Introduction

This note is based on a presentation given at a course on optics design at the CERN Accelerator School (CAS) [1].

The MAD-X (Methodical Accelerator Design) program is a general purpose accelerator and lattice design program. The main aim of this note is to allow the beginner to understand the main building blocks of MAD-X and to set up and use a basic machine. The most important features are described and discussed. Details and more advanced options must be left to the MAD-X reference manual [2].

The main objectives of an accelerator design program are:

- Read the elements and their sequence from a file.
- Calculate the optics parameters from a machine description.
- Define and compute (match) the desired properties of such a machine.
- Simulate and correct possible machine imperfections.
- Simulate the beam dynamics in the designed machine.

Both, circular and linear accelerators (or beam lines) are normally handled by such programs. The note is complemented by properly functioning examples.

1.1 What is needed as input to design an accelerator lattice ?

The design of a machine requires the definition of the machine and the basic ingredients are:

- Definition of the properties of all machine elements.
- Strength of all active machine elements.
- Position of all machine elements in the machine, i.e. the order in which they appear in the accelerator or beam line.

These definitions are helped by a well adapted and defined input language.

2 MAD-X language

For the definition of a machine and the execution of actions, an input language is used following a well defined syntax and grammar.

2.1 Coordinate system

A circular or linear machine in MAD-X is a sequence of elements placed along the reference orbit which is defined as the path through the ideal magnets of a charged particle with the reference momentum (Fig. 1). This defines the coordinate system (x, y, s) where x is the transverse coordinate in the bending plane (usually horizontal, positive values to the outside) and y is the orthogonal transverse coordinate (usually vertical, positive values upward). The local variable s is the tangent to the reference orbit. The coordinate system is therefore a local system moving along the reference path.

2.2 Conventions

Units:

For all computations MAD-X uses SI units, i.e. in particular metre and radian for length and angle.

Input:

The MAD-X input consists of a sequence of statements (commands, actions, or declarations etc.). All statements are free format with “,” as separators, can occupy any number of lines and are terminated by

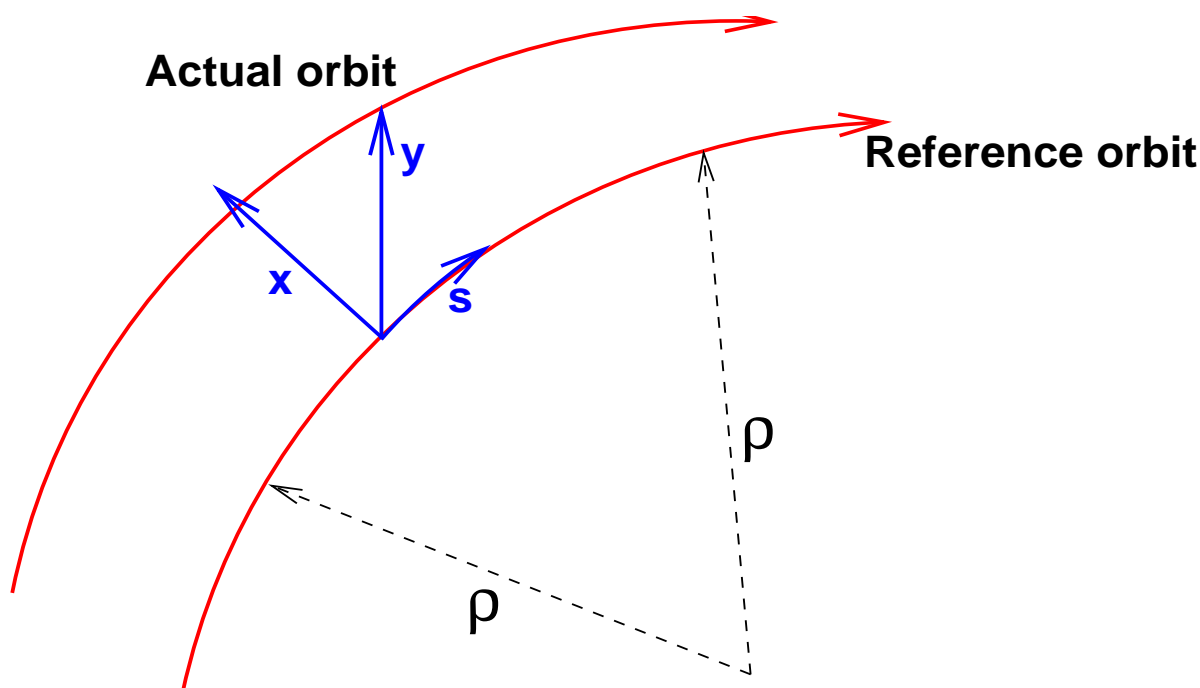


Figure 1: *Local coordinate system as used by MAD-X.*

a semicolon ”;”.

Blank lines have no effect. All statements are not case sensitive with the exception of strings enclosed in ” ”.

Commands or statements can be given a label which allows them to be used or re-used later on:

LAB01: *mycommand*;

Comments:

A single line (not a statement across several lines !) can be commented by ”!” or ”/”. A region of lines can be commented by enclosing them between ”/*” and ”*/”.

2.3 Variables and expressions

Parameter values:

Integer or floating point numbers can be assigned to named parameters and can be used in further declarations or commands, e.g.:

LENDIP = 8.0;

Various names (keywords used by MAD-X) are protected and cannot be used as variables or labels.

The numerical value of an assignment can be replaced by an expression, e.g.:

LNFX = 6912.00/(NCELL*(4*LBEND + 2*LQUAD));

Expressions:

Parameters and variables can be used in expressions, in particular to define dependent quantities. Standard arithmetic operations and functions such as SQRT(), EXP(), trigonometric functions etc. can be used in the expressions as well as random number generators [2].

E.g.: ANGLE = 2.0*PI/NBEND;

can compute the bending angle of a dipole, given the total number of bending magnets (*nbend*). The

constant PI is predefined in MAD-X, together with many other important constants and particle properties.

Deferred expressions:

The usual expressions are evaluated once when the parameter is used,

e.g. `DX = GAUSS()*0.001;`

assigns a random number following a Gaussian distribution with a width of 1 mm to the parameter DX. This value is kept in all computations.

A *deferred* expression is declared by `":="` instead of `"="` and is evaluated each time the parameter is used, e.g.:

`DX := GAUSS()*0.001;`

assigns a *different* random number everytime the parameter DX is used in the program

The distinction between normal and deferred expressions becomes important for error assignment and matching.

3 Machine description

All elements in the machine have to be described in order to be used by MAD. Strictly required are the element type and its position. When other properties are omitted, a default value is taken. One should consult the manual to avoid unphysical behaviour.

3.1 Thick and thin elements

For the calculations, the elements can be defined either as so-called thick lenses with a finite length or as so-called thin lenses with zero length. In the latter case, the effects of an element (e.g. a magnet) on the beam are represented as impulses (kicks) at a fixed position s on the reference orbit. This simplifies the treatment since it allows to treat the machine as a series of linear transformations separated by the "kicks" at the positions of the thin elements. This method is very fast and symplectic by construction and it is therefore best suited for particle tracking.

The disadvantage is the loss of precision when the magnets are very long (compared to the size of the machine) or when fringe fields are important. Part of this precision can be recovered by sub-dividing the magnets into *slices*, i.e. shorter sections, each representing a thin lens.

3.2 Element definition

Elements are defined using the concept of element classes. All quadrupoles in a machine belong to the class QUADRUPOLE. We can define subclasses with different properties with statements like:

`MQL: QUADRUPOLE, L=5.0;`

`MQS: QUADRUPOLE, L=1.5;`

where we define two classes (MQL and MQS) of quadrupoles of different length (thick elements). The definitions can be used to define the real quadrupoles like e.g.:

`QFL01: MQL; // Focusing quadrupoles`

`QFS01: MQS;`

`QDL01: MQL; // Defocusing quadrupoles`

`QDS01: MQS;`

The quadrupoles defined like this inherit all properties of the class unless they are specified explicitly, in which case they are overwritten. All numerical attributes in a class definition can be expressions.

Dipole magnets can be defined as rectangular (RBEND) or sector (SBEND) bending magnets. E.g.:

MBL: RBEND, L=14.3;

MBS: RBEND, L=5.0;

The length of a rectangular bending magnet is by default the arc length. All details on the definition of bending magnets are found in the reference manual [2].

3.3 Element strength definition

3.3.1 Dipoles

The strength of a bending magnet is specified by the bending angle or alternatively the dipole coefficient k_0 :

$$k_0 = \frac{1}{p/c} B_y \text{ [in T]} \left[= \frac{1}{\rho} = \frac{\text{angle}}{l} \right] \text{ [in rad/m]}$$

In the latter case, a finite length must be specified.

The definition for a dipole magnet is:

MB001: RBEND, L=14.3, ANGLE=2*PI/1132; // Total number of dipoles is 1132

or, alternatively, using the previously defined subclass:

MB001: MBL, ANGLE=2*PI/1132; // Total number of dipoles is 1132

using the defined sub-class.

The two definitions are equivalent.

3.3.2 Quadrupoles

We define a quadrupole by its quadrupole coefficient k_1 , which is defined as:

$$k_1 = \frac{1}{p/c} \frac{\partial B_y}{\partial x} \text{ [in T/m]} \left[= \frac{1}{l \cdot f} \right]$$

The definition with the possible attributes is:

QF: QUADRUPOLE, L=length, K1=normal strength, K1S=skew strength, TILT=tilt angle;

where L specifies the magnetic length, K1 and K1S the normal and skew strengths as define above and TILT is the roll angle about the longitudinal axis (default: 0 rad, i.e. a normal quadrupole). A positive angle represents a clockwise rotation. A TILT=pi/4 turns a positive normal quadrupole into a negative skew quadrupole.

As a practical example we define each quadrupole as:

```
....
QF005: QUADRUPOLE, L=5.0, K1 = +0.00147235;
QD005: QUADRUPOLE, L=5.0, K1 = -0.00147235;
QF006: QUADRUPOLE, L=5.0, K1 = +0.00147235;
QD006: QUADRUPOLE, L=5.0, K1 = -0.00147235;
QF007: QUADRUPOLE, L=5.0, K1 = +0.00147235;
QD007: QUADRUPOLE, L=5.0, K1 = -0.00147235;
....
```

Alternatively one can define them using sub-classes:
 QFL: QUADRUPOLE, L=5.0, K1 = +0.00147235;
 QDL: QUADRUPOLE, L=5.0, K1 = -0.00147235;

Individual quadrupoles can then be referred to as e.g.:

....
 QF005: QFL;
 QD005: QDL;
 QF006: QFL;
 QD006: QDL;
 QF007: QFL;
 QD007: QDL;

they inherit the attributes from the definition of the class.

For accelerators with many identical quadrupoles this is much more convenient and flexible.

3.3.3 Sextupoles

Higher order multipoles such as sextupoles we can define as:

SF007: SEXTUPOLE, L=1.4, K2 = +0.00147235;

with:

$$k_2 = \frac{1}{p/c} \frac{\partial^2 B_y}{\partial^2 x} \left[\text{in } T/m^2 \right]$$

Other elements, e.g. octupoles, are defined in a similar form.

3.3.4 Orbit correctors

Orbit correction dipoles are identified by the keyword KICKER. The strength of an orbit corrector is the deflection angle (KICK) measured in rad. Valid definitions are:

LKICK = 0.1;
 MCV01: VKICKER, L=0.1, KICK:=KCV01;
 MCV02: VKICKER, L=LKICK, KICK:=KCV02;
 MCH01: HKICKER, L=LKICK, KICK:=KCH01;
 MC001: KICKER, L=0.1, VKICK:=KXV001, HKICK:=KXH001;

The class VKICKER or HKICKER refer to orbit correctors for the vertical and horizontal planes respectively. The attribute *KICK* refers to the corresponding plane only. The single class KICKER can be used to specify orbit correctors for both planes. In that case, two attributes *HKICK* and *VKICK* are needed to separate the functions in the two planes.

In the above example, the correctors and their strengths are given individual names (MCV01, MCV02, ..) which allows to set them explicitly to independent values. For the standard orbit correction with MAD-X this is however not always necessary. The declarations of the kicks as deferred expressions allows the kicks to be changed explicitly or by the program.

3.4 Multipoles

A special class of elements is defined with the keyword **MULTIPOLE**. These are general elements of zero length (thin lenses) and can be used with one or more components of any order. All thin elements can be written as multipoles in the form:

```
MPM: MULTIPOLE;  
MPLE01: MPM, LRAD=0.0, TILT=angle,  
KNL={kn0L, kn1L, kn2L, kn3L,...},  
KSL={ks0L, ks1L, ks2L, ks3L,...};
```

The components **KNL** and **KSL** are the normal and skew components of the multipole multiplied by the relevant magnetic length. Note that the strength definitions are position dependent, therefore leading zeroes must be filled for components that do not exist. The attribute **LRAD** is a fictitious length, which is only used to compute synchrotron radiation effects. For the computation of lattice functions etc., it can be set to some dummy value.

With this command, multipole up to order 20 can be defined.

Using multipoles, a thin quadrupole can be defined as:

```
QFT: MPM, LRAD=0, KNL={0, kn1L, 0, 0 };
```

The thin lens version of a dipole would be written as:

```
MBT: MPM, LRAD=0, KNL={kn0L, 0, 0, 0 };
```

A general multipole (non-linear element) of order n can be defined as:

```
NL: MPM, LRAD=0, KNL={0, 0, ..., knL, 0, 0, 0 };
```

It can take more than one non-linear strength in the definition, e.g. for combined function elements.

3.5 Markers

The element class *MARKER* is used to insert an inactive element at a position s for later use, e.g. as a reference. The syntax is:

```
START_IP: MARKER, AT = 1839.872;
```

If present in a sequence, the lattice functions are calculated at their positions and they play an important role for matching.

A complete list of keywords and pre-defined element classes is found in the reference manual [2].

3.6 Element position in a SEQUENCE

The representation of the machine is called a *sequence*. It defines the order in which the elements appear in the accelerator or beam line. In a simple case, a sequence can be defined like:

```
seq_name: SEQUENCE, REFER=CENTRE, LENGTH=6912.00;  
...  
...  
MQF05 : MQL, AT = 256.0000;  
BPMH05 : MONITOR, AT = 1.75, FROM=MQF05;
```

```

MCH05 : HKICKER, AT = 2.10, FROM=MQF05;
MBL05.002: MBL, AT = 265.9000;
MBL05.002: MBL, AT = 278.1000;
MQD05 : MQL, AT = 288.0000;
BPMV05 : MONITOR, AT = 1.75, FROM=MQD05;
MCV05 : VKICKER, AT = 2.10, FROM=MQD05;
MBL05.003: MBL, AT = 297.9000;
MBL05.004: MBL, AT = 310.1000;
...
...
ENDSEQUENCE;

```

The keywords `SEQUENCE` and `ENDSEQUENCE` define the beginning and end of the definition and the sequence is assigned a name *seq_name*.

The statements look familiar and the additional attribute *AT* defines the position relative to the beginning of the sequence. A position relative to an existing element can be assigned with the *FROM* attribute. The total `LENGTH` of the sequence is specified on the header line of the sequence. The positions can be defined at the `CENTRE`, `ENTRY` or `EXIT` of an element, indicated by the `REFER` attribute. The names given to the elements must be unique, i.e. must not appear twice in the same sequence.

Several sequences with different names can be defined in the same file.

In the example above we have assigned the position to named elements. A second possibility is to use class names like in:

```

...
MBL: MBL, AT = 278.1000;
MQD: MQD, AT = 288.0000;
BPM: BPM, AT = 1.75, FROM=MQD05;
MCV: MCV, AT = 2.10, FROM=MQD05;
MBL: MBL, AT = 297.9000;
MBL: MBL, AT = 310.1000;
...

```

assuming `BPM`, `MCV` etc. have been defined as classes before. In this case all elements have the same name which is the name of the class and they cannot be distinguished by name.

Finally, a previously defined sequence can be inserted, allowing the possibility to nest sequences. In the example 1 in the appendix I have defined a complete machine using the commands already discussed up to now. The dipoles are defined as thin elements whereas the quadrupoles and sextupoles have a finite length.

3.7 Using repetitive definition for periodic machines

The sequence of a periodic machine or the periodic part of a machine can be defined using the `MAD-X` macro commands. After the usual definition of the cell length *lcell*, the half length of a quadrupole *lquad2* and the number of cells *ncell*, the whole machine can be defined with a *while*-loop:

```

n = 1;
while (n < ncell+1) {
  qf: qf,          at=(n-1)*lcell+lquad2;
  lsf: lsf,        at=(n-1)*lcell+lquad2+2.5;
  ch: ch,          at=(n-1)*lcell+lquad2+3.1;
  bpm: bpm,        at=(n-1)*lcell+lquad2+3.2;

```



```

mbsps: mbsps,    at=(n-1)*lcell+lquad2+3.50;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+9.90;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+22.10;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+28.50;
qd: qd,          at=(n-1)*lcell+lquad2+32.00;
lsd: lsd,        at=(n-1)*lcell+lquad2+34.50;
cv: cv,          at=(n-1)*lcell+lquad2+35.10;
bpm: bpm,        at=(n-1)*lcell+lquad2+35.20;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+35.50;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+41.90;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+54.10;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+60.50;

n = n + 1;
}

```

The two types of sequence definitions are entirely equivalent.

A complete definition using this technique is given in example 2 in the appendix 1.2. The MAD-X commands and the resulting output are identical to example 1.

4 MAD-X commands

In addition to the statements which are used to define a machine, the MAD-X commands are used to define and execute actions on the machines, e.g. calculations of Twiss functions, I/O of the lattices, particle tracking etc. An important part of the design procedure is lattice matching, i.e. to vary element parameters to make machine properties (e.g. Twiss functions) assuming defined values at specified positions (e.g. interaction points etc.). A complete description of all MAD-X commands is found in [2]. Here I shall list the most important commands which are necessary to do the basic calculations.

4.1 BEAM command

Some of the MAD-X actions require the knowledge of the beam properties. They are defined with the *BEAM* command:

```
BEAM, PARTICLE=name, ENERGY=xxx, SEQUENCE=sname;
```

The name of the particle type can be given as well as the particle's energy. The properties (e.g. mass and charge) of the most important particles are known to MAD-X. Alternatively, the mass and charge can be specified with *MASS =* and *CHARGE =*. When the *SEQUENCE* attribute is given, it will assign the beam only to this particular sequence, otherwise to the *active* sequence. A complete list of all possible beam quantities is found in [2].

When attributes are omitted, default values are taken. E.g default particle is proton, default energy is 1 GeV. Not all attributes are relevant for the optics calculation since normalized values are used, but one should consult the manual. It is recommended to specify relevant properties correctly to avoid unexpected problems.

4.2 Input definition

MAD-X statements and commands can be given on the standard input or can be read from a file with:

```
CALL,FILE="filename";
```

This file can contain one or more sequences, part of a sequence or commands and is inserted at the position of the call.

After a sequence has been read, it can be used with:

```
USE, PERIOD=sname;
```

This command will expand the specified sequence, insert the drift spaces and make it active.

4.3 MAD-X actions

MAD-X actions are executed to perform operations on the available machines. To calculate the linear lattice functions (Twiss parameters) around the machine, the action:

```
TWISS;
```

must be executed, which operates on the sequence defined in the last *USE* command. However, a sequence can be specified explicitly on the Twiss command. A summary table is given after execution.

4.4 MAD-X output

The *TWISS* command can be modified to specify the wanted output:

```
SELECT,FLAG=TWISS,COLUMN=NAME,S,MUX,BETX,MUY,BETY;  
TWISS,FILE="twiss.out";
```

In the *SELECT* command the lattice functions wanted can be specified before *TWISS* is executed. The full list of the lattice functions is given in [2]. The lattice functions are written into the file "twiss.out".

The *SELECT* command can be used to restrict the output to only a *range* or *type* of elements:

```
SELECT,FLAG=TWISS,RANGE=beg/end;  
or: SELECT,FLAG=TWISS,PATTERN="Q.*";
```

The first will output the lattice functions only within the specified range and the second would restrict the output to all elements starting with the specified pattern in the element name. The *SELECT* commands act for the desired action (FLAG=) and can be accumulated or overwritten.

4.5 MAD-X graphical output

MAD-X has an builtin graphics package. To plot lattice functions for example, the command sequence:

```
SELECT,FLAG=TWISS;  
TWISS,FILE="twiss.beta";  
PLOT, HAXIS=S, VAXIS=BETX, BETY;
```

may be used to plot the horizontal and vertical β -functions as a function of the position s . The *RANGE* attribute can be used with the *PLOT* command. An output file and a PS-file are written simultaneously. For details and all options see [2].

4.6 MAD-X example

In the second part of example 1 the necessary MAD-X commands are given to calculate the lattice functions with the *TWISS* command, write them onto a file and plot them in postscript format. At the end of the execution of a *TWISS* command, a summary table is printed:

```
++++++ table: summ
```

length	orbit5	alfa	gammatr
6.9120000e+03	-0.0000000e+00	1.6807003e-03	2.4392418e+01
q1	dq1	betxmax	dxmax
2.6580000e+01	-3.3561557e+01	1.0754431e+02	2.5680113e+00
dxrms	xcomax	xcorms	q2
1.9304378e+00	0.0000000e+00	0.0000000e+00	2.6620000e+01
dq2	betymax	dymax	dyrms
-3.3598479e+01	1.0749730e+02	0.0000000e+00	0.0000000e+00
ycomax	ycorms	deltap	
0.0000000e+00	0.0000000e+00	0.0000000e+00	

The main parameters of the lattice are summarized in this table, such as horizontal and vertical tunes (Q1, Q2), chromaticities (DQ1, DQ2), etc.

The lattice functions β_x and D_x are plotted by the above command sequence as shown in Fig.2. The functions are plotted between the 10th and 16th quadrupole of the class QD as specified in the RANGE attribute.

As requested, the lattice functions are written to a file "twiss.out" and its format is shown in the last part of appendix 1. At the beginning of this file the basic parameters are summarized again.

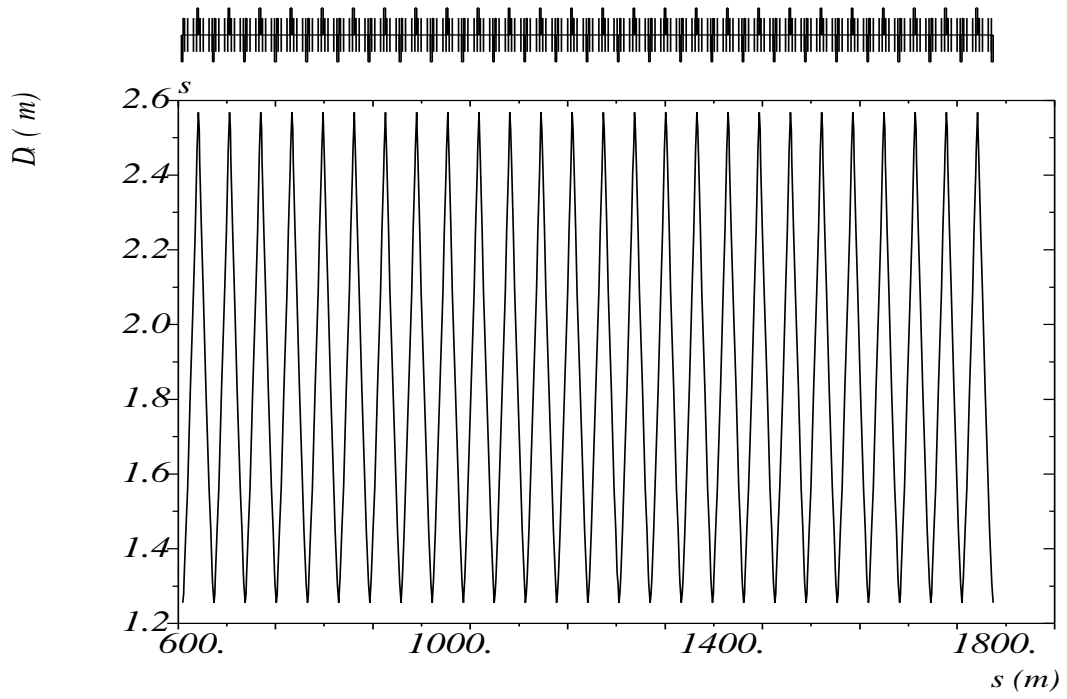
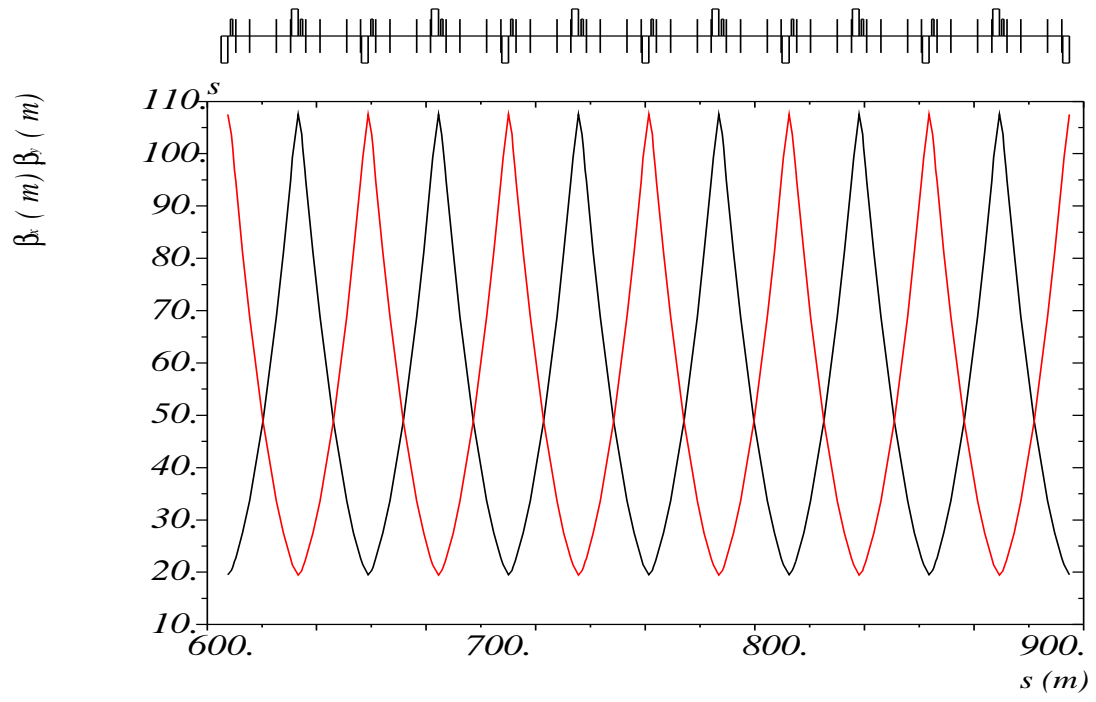


Figure 2: *Lattice functions computed and plotted by MAD-X.*

5 Matching with MAD-X

The adjustment of machine properties, i.e. matching, is a vital part of the design process and a detail description is beyond the scope of this introduction. However some very basic features will be demonstrated by some examples. A basic tutorial on some matching techniques is found in.

5.1 Global matching

Some global machine parameters such as tune or chromaticity can be adjusted by global matching. The following two example are used as a demonstration:

```
MATCH, SEQUENCE=CASSPS;  
VARY,NAME=KQF, STEP=0.00001;      ! define the elements to be varied  
VARY,NAME=KQD, STEP=0.00001;      ! define the elements to be varied  
GLOBAL,SEQUENCE=CASSPS,Q1=26.58;   ! define the sequence and the target values  
GLOBAL,SEQUENCE=CASSPS,Q2=26.62;   ! define the sequence and the target values  
LMDIF, CALLS=10, TOLERANCE=1.0E-21; ! define the matching method  
ENDMATCH;
```

```
MATCH, SEQUENCE=CASSPS;  
VARY,NAME=KSF, STEP=0.00001;  
VARY,NAME=KSD, STEP=0.00001;  
GLOBAL,SEQUENCE=CASSPS,DQ1=0.0;  
GLOBAL,SEQUENCE=CASSPS,DQ2=0.0;  
LMDIF, CALLS=10, TOLERANCE=1.0E-21;  
ENDMATCH;
```

The matching attributes and commands are enclosed between the *match* and *endmatch* statements. The desired sequence can be specified. In the first example the global horizontal and vertical tunes are matched to the desired values. The strengths of the main quadrupoles (*kqf* and *kqd*) are varied in the procedure. In the second example the global chromaticities are matched to zero, by variation of the sextupole strengths *ksf* and *ksd*. Other attributes control the method used, the number of calls and the desired quality of the matching procedure, i.e. the difference to the target values. The new values of the strengths are now associated with the sequence. The following execution of the *TWISS* command would therefore produce the new parameters.

NOTE: the latter is only true when the quadrupole strengths are defined using deferred expressions, i.e:

```
QF: QUADRUPOLE, K1:=KQF;
```

Otherwise the new strengths *KQF* and *KQD* are calculated all right, but not assigned to the elements. I.e. they will not be used in subsequent calculations, e.g. computing lattice functions with the *TWISS* command.

5.2 Local and insertion matching

Probably the most important matching procedures are those which are used to modify the lattice locally, e.g. for inserting non-periodic regions for experiments, collimation systems etc. In order to avoid a distortion of other parts of the machine, the matching must be restricted to the local region and additional constraints must ensure the smooth continuation into the periodic part of the machine.

Local and simple constraints are imposed by the *CONSTRAINT*.

```
CONSTRAINT,RANGE=RIGHT,SEQUENCE=CASCELL5,BETX=28.2,BETY=87.0;
```

It takes three attributes: the sequence name, the RANGE where the constraints are imposed (can be a single position or a "range"), and the optical functions to be constraint. The example below is a simple matching of a symmetric low β -insertion using four independent quadrupoles. The matching is restricted to the range between the elements *left* and *right* where the normal lattice parameters are given as constraints. For more details on this example see.

```
MATCH, SEQUENCE=CASCELL5, RANGE=LEFT/RIGHT, BETX=28.2, BETY=87.0;
VARY, NAME=KQ1.L, STEP=0.00001;
VARY, NAME=KQ2.L, STEP=0.00001;
VARY, NAME=KQ3.L, STEP=0.00001;
VARY, NAME=KQ4.L, STEP=0.00001;
CONSTRAINT, RANGE=RIGHT, SEQUENCE=CASCELL5, BETX=28.2, BETY=87.0;
CONSTRAINT, RANGE=IP, SEQUENCE=CASCELL5, BETX=10.0, BETY=1.0;
LMDIF, CALLS=100, TOLERANCE=1.0E-21;
ENDMATCH;
```

5.3 Example: matching a vertical orbit bump

As an example I show the commands to match a vertical orbit bump of 5 mm at a monitor. Three vertical orbit correctors are used to create and close the bump.

At the monitors outside the bump the orbit and angle must be zero, this is the closure condition.

In this example *RANGE* is used to specify a single position.

// Match a vertical orbit bump of 5 mm at monitor BPMV8

```
MATCH, ORBIT;
CONSTRAINT, RANGE=BPMV5, Y=0.0, PY=0.0;    // make sure bump is closed
CONSTRAINT, RANGE=BPMV8, Y=0.005;         // bump is 5 mm vertical
CONSTRAINT, RANGE=BPMV11, Y=0.0, PY=0.0;   // make sure bump is closed
VARY, NAME=KCV7, STEP=0.0001;
VARY, NAME=KCV9, STEP=0.0001;
VARY, NAME=KCV10, STEP=0.0001;
LMDIF, CALLS=100, TOLERANCE=1.0E-20;
ENDMATCH;
```

The complete example can be found as example 3 in the appendix. It uses the sequence as defined in example 4 (macro definition, see later). The resulting vertical orbit is shown in Fig.3.

6 Error definition

During the design process of a machine it becomes important to test it against imperfections. For that purpose, alignment and field errors can be assigned to all machine elements. The calculations will take these imperfections into account and correction procedures (e.g. orbit correction) are available in MAD-X to test possible correction strategies.

6.1 Alignment errors

The elements in a machine can be misaligned with the available MAD-X error actions. The command sequence:

```
SELECT, FLAG= ERROR, CLASS=MQ;
EALIGN, DX:=GAUSS()*0.0005; DY:=GAUSS()*0.0002;
```

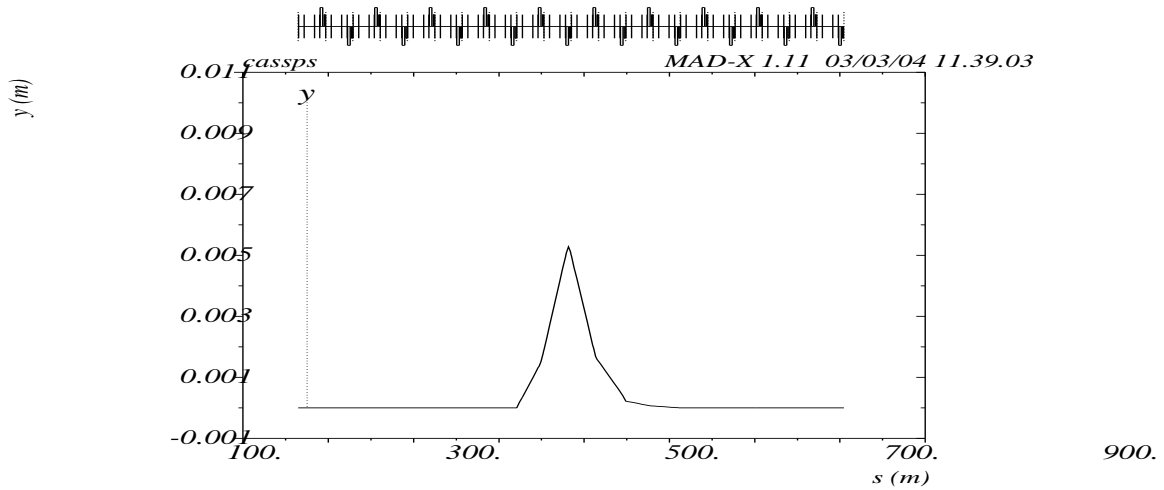


Figure 3: *Vertical orbit bump as example for local matching.*

assigns alignment errors to all quadrupoles belonging to the class MQ with a r.m.s. value of 0.5 mm in the horizontal and 0.2 mm in the vertical plane, both following a Gaussian distribution. In that case again the use of deferred expressions is of utmost importance. To assign the errors, the program steps through the sequence and for every element of the selected class the corresponding misalignments DX and DY are evaluated **each time**. Using the standard expression, the misalignments DX and DY are calculated **once** and all elements of the selected class get the **same** error. For a complete list of all misalignment options see [2].

6.2 Angular misalignment

Other alignment errors concern angular misalignment, also specified using the EALIGN command. We can specify the following errors (in rad):

DTHETA: The rotation around the y-axis
DPHI: The rotation around the x-axis
DPSI: The rotation around the s-axis

6.3 Field errors

The program allows to assign field errors of any order to the machine elements with commands like:

```
SELECT, FLAG= ERROR, CLASS=MB;
EFCOMP, RADIUS:=0.017, ORDER:=0,
DKNR:={0,0,GAUSS()*7E-4,GAUSS()*1E-4,0,0},
DKSR:={0,0,GAUSS()*3E-4,GAUSS()*6E-4,0,0},
```

In this example normal and skew field errors (sextupole and octupole) are assigned to dipole magnets of the class MB. It is possible to assign absolute or relative field errors, the latter normalized to the strength of the corresponding element. The RADIUS (reference for the measurement) and ORDER control this behaviour. For a detailed discussion see [2].

7 Orbit correction

A misaligned machine can be corrected using the MAD-X orbit correction procedures. The input data is taken from the last TWISS table, i.e. TWISS must run before a correction can be executed.

Very basic closed orbit correction statements are of the form:

```
CORRECT, PLANE=X, NCORR=20, ERROR=1.0E-04;
```

or

```
CORRECT, MODE=SVD;
```

For all details and options see [2].

8 Advanced options and commands

MAD-X has many more features and commands for advanced design and evaluation of accelerator lattices. Most prominent are the evaluation of beam parameters (in case of radiation), geometrical survey, tracking and physical and dynamic aperture determination. However, a full description is well beyond the scope of this simplified introduction. To get a flavor, I shall give two examples, one for a simple *tracking* and another for the advanced use of *macros*.

8.1 Particle tracking

The example shown below demonstrates particle tracking in MAD-X. It shows the simultaneous tracking of 20 particles in horizontal phase space where the particles are distributed on a circle in x-px phase space. All commands are enclosed between the keywords *track* and *endtrack*. The initial coordinates of the particles are assigned with the command *start* and the tracking is executed with *run*.

Tracking in MAD-X is possible using thin lenses. A lattice defined with thick elements has to be converted to thin lenses with the command *MAKETHIN* before the tracking can be done. For details on the command *MAKETHIN* consult the reference manual [2].

```
MAKETHIN, SEQUENCE=CASSPS;  
USE, SEQUENCE=CASSPS;  
TRACK;  
NSTEP = 20;  
RAD = 100.0E-06;  
ANGSTP = 2*PI/NSTEP;  
  
N = 0;  
WHILE(N <= NSTEP) {  
  ANG = N*ANGSTP;  
  XS = RAD*COS(ANG);  
  XPS = RAD*SIN(ANG);  
  VALUE, XS, XPS;  
  START, X=XS, PX=XPS;  
  N = N + 1;  
}  
RUN, TURNS=1024;  
ENDTRACK;
```


STOP;

If the entire sequence is defined using thin lenses, the command *MAKETHIN* and the sequence can be used directly.

The use of tracking may require additional attributes in the BEAM command, e.g. in the case of beam-beam elements required in the simulation. The above example shows the power of the input language.

8.2 Particle tracking with PTC

Tracking with PTC allows the use of thick elements. An example how to invoke PTC tracking and to produce the output is shown below.

```
ptc_create_universe;
ptc_create_layout,model=2,method=6,nst=10,exact;

ptc_start, x= 3e-2, px=0, y= 3e-2, py=0;
ptc_start, x= 6e-2, px=0, y= 6e-2, py=0;
ptc_start, x= 9e-2, px=0, y= 9e-2, py=0;
ptc_start, x=12e-2, px=0, y=12e-2, py=0;
ptc_start, x=15e-2, px=0, y=15e-2, py=0;
ptc_start, x=18e-2, px=0, y=18e-2, py=0;
ptc_start, x=21e-2, px=0, y=21e-2, py=0;
ptc_start, x=24e-2, px=0, y=24e-2, py=0;
ptc_start, x=27e-2, px=0, y=27e-2, py=0;

ptc_track, ica=4, closed_orbit, dump,
           turns=1000 , ffile=1; //onetable, turns=1000, norm_no=4; norm_out

plot, file="PTC_TRACK", table=track, haxis=x, vaxis=px,
     particle=1,2,3,4,5,6,7,8,9, colour=1000, multiple, symbol=3;
plot, file="PTC_TRACK", table=track, haxis=y, vaxis=py,
     particle=1,2,3,4,5,6,7,8,9, colour=1000, multiple, symbol=3;

ptc_track_end;
ptc_end;
```

8.3 Use of macros

The power of the MAD-X input language is further enhanced by the use of *macros*. For illustration, example 2 in the appendix 1.2 has been modified to use a macro and is shown as example 4 in appendix 1.4. For some cases, it is required that the elements have distinct names, (e.g. where all elements must be treated as separate objects, such as orbit corrections). This can be easily done by editing example 1, where every element is listed on a separate line. Editing the example 2 with the *while* loop would fail because two elements must not have the same name. Using the macro language, the *while* loop can be modified like in example 3 in appendix 1.3. The necessary macro *inst* is defined in example 4 in appendix 1.4. The definition of a cell is now done within the subroutine *inst*. This subroutine takes input parameters from the calling MAD-input and most important, can change the names of the elements, using the input information. The result of this scheme is the same as before, however the orbit correctors, their corresponding strength parameters and the beam position monitors are now numbered sequentially. The MAD-X input file is shown in the second part of example 3. The increasing sequence numbers as part of the element names are now clearly visible. In this example the quadrupoles have been misaligned in the two planes following a Gaussian distribution with 0.1 mm and 0.2 mm r.m.s. respectively.

Therefore the horizontal and vertical orbit is distorted and the maximum and r.m.s. values can be found in the Twiss summary table.

9 How to run MAD-X ?

MAD-X can be run either interactively or in batch mode.

9.1 Interactive mode

To run MAD-X interactively, one can execute MAD-X and input the commands and statements in the command line of the standard input.

Alternatively, one or more files with commands and statements can be read using the command:
`CALL,FILE=filename;`

9.2 Batch mode

MAD-X can be run as a background of batch program by redirecting an input file into the MAD-X standard input. For UNIX (LINUX) like:

```
madx < inputfile
```

The output is normally send to the standard output, unless it is redirected.

10 APPENDIX 1

In the following, I list a few examples which may be referenced in the text. For all cases the sequence definition is found in the first part and a MAD-X input file to use the sequence is given in the second part of each example.

10.1 APPENDIX 1.1: Example 1, Simplest case

10.1.1 Sequence definition (spsall.seq)

```
// define the total length
circum=6912.00;

// define number of cells and therefore cell length
ncell = 108;
lcell = circum/ncell;

// define lengths of elements and half lengths
lquad = 3.085;
lmb    = 6.260;
lsex   = 1.0;

// forces and other constants;
// element definitions;

// define bending magnet as multipole
mbmps: multipole, lrad=dummy, knl={2.0*pi/(8*ncell)};

// define quadrupole and their strengths
qsps: quadrupole, l=lquad;
qf: qsps, k1:=kqf;
qd: qsps, k1:=kqd;
kqf = 1.4631475E-02;
kqd = -1.4643443E-02;

// define sextupoles for chromaticity correction
lsf: sextupole, l=lsex,k2:=ksf;
lsd: sextupole, l=lsex,k2:=ksd;
ksf = 2.0284442E-02;
ksd = -3.8394267E-02;

// define orbit correctors and beam position monitors
bpm: monitor, l=0.1;
ch: hkicker, l=0.1;
cv: vkicker, l=0.1;

cassps: sequence, refer=centre, l = circum;
start_machine: marker, at = 0;
qf, at = 1.5425;
lsf, at = 4.0425;
ch, at = 4.6425;
```

```

bpm, at = 4.7425;
mbpsps, at = 5.0425;
mbpsps, at = 11.4425;
mbpsps, at = 23.6425;
mbpsps, at = 30.0425;
qd, at = 33.5425;
lsd, at = 36.0425;
cv, at = 36.6425;
bpm, at = 36.7425;
mbpsps, at = 37.0425;
mbpsps, at = 43.4425;
mbpsps, at = 55.6425;
mbpsps, at = 62.0425;
qf, at = 65.5425;
lsf, at = 68.0425;
ch, at = 68.6425;
bpm, at = 68.7425;
mbpsps, at = 69.0425;
mbpsps, at = 75.4425;
mbpsps, at = 87.6425;
mbpsps, at = 94.0425;
qd, at = 97.5425;
lsd, at = 100.0425;
cv, at = 100.6425;
bpm, at = 100.7425;
mbpsps, at = 101.0425;
mbpsps, at = 107.4425;
mbpsps, at = 119.6425;
mbpsps, at = 126.0425;
qf, at = 129.5425;
lsf, at = 132.0425;
ch, at = 132.6425;
bpm, at = 132.7425;
mbpsps, at = 133.0425;
mbpsps, at = 139.4425;
mbpsps, at = 151.6425;
mbpsps, at = 158.0425;
qd, at = 161.5425;
lsd, at = 164.0425;
cv, at = 164.6425;
bpm, at = 164.7425;
mbpsps, at = 165.0425;
mbpsps, at = 171.4425;
...
...
...
mbpsps, at = 6775.6425;
mbpsps, at = 6782.0425;
qf, at = 6785.5425;
lsf, at = 6788.0425;

```

```

ch, at = 6788.6425;
bpm, at = 6788.7425;
mbmps, at = 6789.0425;
mbmps, at = 6795.4425;
mbmps, at = 6807.6425;
mbmps, at = 6814.0425;
qd, at = 6817.5425;
lsd, at = 6820.0425;
cv, at = 6820.6425;
bpm, at = 6820.7425;
mbmps, at = 6821.0425;
mbmps, at = 6827.4425;
mbmps, at = 6839.6425;
mbmps, at = 6846.0425;
qf, at = 6849.5425;
lsf, at = 6852.0425;
ch, at = 6852.6425;
bpm, at = 6852.7425;
mbmps, at = 6853.0425;
mbmps, at = 6859.4425;
mbmps, at = 6871.6425;
mbmps, at = 6878.0425;
qd, at = 6881.5425;
lsd, at = 6884.0425;
cv, at = 6884.6425;
bpm, at = 6884.7425;
mbmps, at = 6885.0425;
mbmps, at = 6891.4425;
mbmps, at = 6903.6425;
mbmps, at = 6910.0425;
end_machine: marker, at = 6912.00;
endsequence;

```

10.1.2 MAD-X directives

```

TITLE, s='MAD-X test';

// Read input file with machine description
call file="spsall.seq";
option,-echo;

// Define the beam for the machine
Beam, particle = proton, sequence=cassps, energy = 450.0;

// Use the sequence with the name: cassps
use, period=cassps;

// Define the type and amount of output for the action TWISS
select,flag=twiss,column=name,s,x,y,mux,betx,muy,bety,dx,dy;

```

```
// Execute the Twiss command to calculate the Twiss parameters
// Compute at the centres of the elements and write to: twiss.out
twiss,centre,file=twiss.out;

// Plot the horizontal and vertical beta function between the
// 10th and 16th occurrence of a defocussing quadrupole
plot, haxis=s, vaxis=x, betx, bety,colour=100,
    range=qd[10]/qd[16];
plot, haxis=s, vaxis=dx, colour=100,
    range=qd[10]/qd[36];

stop;
```

10.1.3 TWISS summary table

++++++ table: summ

length	orbit5	alfa	gammatr
6.9120000e+03	-0.0000000e+00	1.6807003e-03	2.4392418e+01
q1	dq1	betxmax	dxmax
2.6580000e+01	-3.3561557e+01	1.0754431e+02	2.5680113e+00
dxrms	xcomax	xcorms	q2
1.9304378e+00	0.0000000e+00	0.0000000e+00	2.6620000e+01
dq2	betymax	dymax	dyrms
-3.3598479e+01	1.0749730e+02	0.0000000e+00	0.0000000e+00
ycomax	ycorms	deltap	
0.0000000e+00	0.0000000e+00	0.0000000e+00	

10.1.4 TWISS lattice functions written to the file "twiss.out"

```

@ NAME                %05s "TWISS"
@ TYPE                %05s "TWISS"
@ SEQUENCE            %06s "CASSPS"
@ PARTICLE            %06s "PROTON"
@ MASS                %1e          0.938271998
@ CHARGE              %1e          1
@ ENERGY             %1e          450
@ PC                  %1e          449.999021827
@ GAMMA               %1e          479.605062241
@ KBUNCH              %1e          1
@ BCURRENT            %1e          0
@ SIGE                %1e          0
@ SIGT                %1e          0
@ NPART               %1e          0
@ EX                  %1e          1
@ EY                  %1e          1
@ ET                  %1e          1
@ LENGTH              %1e          6912
@ ALFA                %1e          0.00168070032886
@ ORBIT5              %1e          -0
@ GAMMATR             %1e          24.3924182122
@ Q1                  %1e          26.58
@ Q2                  %1e          26.62
@ DQ1                 %1e          -33.5615573373
@ DQ2                 %1e          -33.5984799903
@ DXMAX               %1e          2.5680113011
@ DYMAX               %1e          0
@ XCOMAX              %1e          0
@ YCOMAX              %1e          0
@ BETXMAX             %1e          107.544319159
@ BETYMAX             %1e          107.497305443
@ XCORMS              %1e          0
@ YCORMS              %1e          0
@ DXRMS               %1e          1.93043782638
@ DYRMS               %1e          0
@ DELTAP              %1e          0
@ TITLE               %01s "s"
@ ORIGIN              %16s "MAD-X 1.11 Linux"
@ DATE                %08s "23/10/03"
@ TIME                %08s "11.36.14"
* NAME                S                BETX                DX
$ %s                  %1e                %1e                %1e
"CASSPS$START"        0                103.8655173          2.523441048
"START_MACHINE"       0                103.8655173          2.523441048
"QF"                  1.5425          107.5443192          2.568011301
"DRIFT_0"             3.11375         103.7300292          2.521784419
"LSF"                 3.6425          101.2568359          2.491316849
"DRIFT_1"             4.5925          96.90195183          2.43657606

```

"MBSPS"	5.0425	94.87888064	2.410646213
"DRIFT_2"	8.2425	81.22989411	2.249527296
"MBSPS"	11.4425	68.87370326	2.08840838
"DRIFT_3"	17.5425	48.90078374	1.825635993
"MBSPS"	23.6425	33.62561103	1.562863606
"DRIFT_2"	26.8425	27.4909994	1.448286904
"MBSPS"	30.0425	22.64918345	1.333710202
"DRIFT_4"	31.02125	21.42644598	1.305783529
"QD"	33.5425	19.51348873	1.255914454
"DRIFT_0"	35.11375	20.35528979	1.278677181
"LSD"	35.6425	20.93741261	1.293764004
"DRIFT_1"	36.5925	22.07198555	1.320870352
"MBSPS"	37.0425	22.64918345	1.333710202
"DRIFT_2"	40.2425	27.4909994	1.448286904
"MBSPS"	43.4425	33.62561103	1.562863606
"DRIFT_3"	49.5425	48.90078374	1.825635993
"MBSPS"	55.6425	68.87370326	2.08840838
"DRIFT_2"	58.8425	81.22989411	2.249527296
"MBSPS"	62.0425	94.87888064	2.410646213
"DRIFT_4"	63.02125	99.31172846	2.467043631
"QF"	65.5425	107.5443192	2.568011301
"DRIFT_0"	67.11375	103.7300292	2.521784419
"LSF"	67.6425	101.2568359	2.491316849
"DRIFT_1"	68.5925	96.90195183	2.43657606
"MBSPS"	69.0425	94.87888064	2.410646213
"DRIFT_2"	72.2425	81.22989411	2.249527296
"MBSPS"	75.4425	68.87370326	2.08840838
"DRIFT_3"	81.5425	48.90078374	1.825635993
"MBSPS"	87.6425	33.62561103	1.562863606
"DRIFT_2"	90.8425	27.4909994	1.448286904
"MBSPS"	94.0425	22.64918345	1.333710202
"DRIFT_4"	95.02125	21.42644598	1.305783529
"QD"	97.5425	19.51348873	1.255914454
"DRIFT_0"	99.11375	20.35528979	1.278677181
"LSD"	99.6425	20.93741261	1.293764004
"DRIFT_1"	100.5925	22.07198555	1.320870352
"MBSPS"	101.0425	22.64918345	1.333710202
"DRIFT_2"	104.2425	27.4909994	1.448286904
"MBSPS"	107.4425	33.62561103	1.562863606
"DRIFT_3"	113.5425	48.90078374	1.825635993
"MBSPS"	119.6425	68.87370326	2.08840838
"DRIFT_2"	122.8425	81.22989411	2.249527296
"MBSPS"	126.0425	94.87888064	2.410646213
"DRIFT_4"	127.02125	99.31172846	2.467043631
"QF"	129.5425	107.5443192	2.568011301
.....			
.....			
.....			

10.2 APPENDIX 1.2: Example 2, Use of WHILE command

10.2.1 Sequence definition (sps.seq)

```
// define the total length
circum=6912.0;

// define number of cells and therefore cell length
ncell = 108;
lcell = circum/ncell;

// define lengths of elements and half lengths
lquad = 3.085;
lquad2 = lquad/2.;
lsex  = 1.0;

// forces and other constants;
// element definitions;

// define bending magnet as multipole
mbsps: multipole, lrad=dummy, knl={2.0*pi/(8*ncell)};

// define quadrupole and their strengths
qsps: quadrupole, l=lquad;
qf: qsps, k1:=kqf;
qd: qsps, k1:=kqd;
kqf = 1.4631475E-02;
kqd = -1.4643443E-02;

// define sextupoles for chromaticity correction
lsf: sextupole, l=lsex,k2:=ksf;
lsd: sextupole, l=lsex,k2:=ksd;
ksf = 2.0284442E-02;
ksd = -3.8394267E-02;

// define orbit correctors and beam position monitors
bpm: monitor, l=0.1;
ch: hkicker, l=0.1;
cv: vkicker, l=0.1;

// sequence declaration;
cassps: sequence, refer=centre, l:=circum;
start_machine: marker, at = 0;

// This defines ONE cell, repeat NCELL times
// to get the full machine
// SPS has 8 bending magnets per cell
n = 1;
while (n < ncell+1) {
  qf: qf,          at=(n-1)*lcell+lquad2;
  lsf: lsf,        at=(n-1)*lcell+lquad2+2.5;
```

```

ch:  ch,          at=(n-1)*lcell+lquad2+3.1;
bpm: bpm,        at=(n-1)*lcell+lquad2+3.2;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+3.50;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+9.90;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+22.10;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+28.50;
qd:  qd,          at=(n-1)*lcell+lquad2+32.00;
lsd: lsd,        at=(n-1)*lcell+lquad2+34.50;
cv:  cv,          at=(n-1)*lcell+lquad2+35.10;
bpm: bpm,        at=(n-1)*lcell+lquad2+35.20;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+35.50;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+41.90;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+54.10;
mbsps: mbsps,    at=(n-1)*lcell+lquad2+60.50;

n = n + 1;
}
end_machine: marker at=circum;
endsequence;

```

10.2.2 MAD-X directives

```

TITLE, s='MAD-X test';

// Read input file with machine description
call file="sps.seq";
option,-echo;

// Define the beam for the machine
Beam, particle = proton, sequence=cassps, energy = 450.0;

// Use the sequence with the name: cassps
use, period=cassps;

// Define the type and amount of output for the action TWISS
select,flag=twiss,column=name,s,x,y,mux,betx,muy,bety,dx,dy;

// Execute the Twiss command to calculate the Twiss parameters
// Compute at the centres of the elements and write to: twiss.out
twiss,centre,file=twiss.out;

// Plot the horizontal and vertical beta function between the
// 10th and 16th occurrence of a defocussing quadrupole
plot, haxis=s, vaxis=x, betx, bety,colour=100,
     range=qd[10]/qd[16];
plot, haxis=s, vaxis=dx, colour=100,
     range=qd[10]/qd[36];

stop;

```

10.3 APPENDIX 1.3: Example 3, Matching a local orbit bump

10.3.1 MAD-X directives

```
// Read input file with machine description
// This machine is constructed with macro
// subroutine INST()
// Match a vertical orbit bump at monitor BPMV8
call file="spsmac.seq";
option,-echo;

// Define the beam for the machine
Beam, particle = proton, sequence=cassps, energy = 450.0;

// Use the sequence with the name: cassps
use, sequence=cassps;

// Match a vertical orbit bump of 5 mm at monitor BPMV8
match,orbit;
constraint,range=bpmv5,y=0.0,py=0.0;
constraint,range=bpmv8,y=0.005;
constraint,range=bpmv11,y=0.0,py=0.0;
vary,name=kcv7,step=0.0001;
vary,name=kcv9,step=0.0001;
vary,name=kcv10,step=0.0001;
lmdif,calls=100,tolerance=1.0E-20;
endmatch;

// Define the type and amount of output
select,flag=twiss,class=monitor,column=name,s,x,px,y,py;
select,flag=twiss,class=hkicker,column=name,s,x,px,y,py;
select,flag=twiss,class=vkicker,column=name,s,x,px,y,py;

// Execute the Twiss command to calculate the Twiss parameters
// Compute at the centre of the element and write to: twiss.out
twiss,save,centre,file=twiss.out;

// Plot the vertical orbit between the
// 1st and 20th beam position monitor
plot, haxis=s, vaxis=y,colour=100,
      vmin=-0.001,vmax=0.011,
      range=bpmv3/bpmv13;

stop;
```

@ NAME	%05s	"TWISS"		
@ TYPE	%05s	"TWISS"		
@ SEQUENCE	%06s	"CASSPS"		
@ PARTICLE	%06s	"PROTON"		
@ MASS	%1e	0.9382720814		
@ CHARGE	%1e	1		
@ ENERGY	%1e	450		
@ PC	%1e	449.9990218		
@ GAMMA	%1e	479.6050196		
@ KBUNCH	%1e	1		
@ BCURRENT	%1e	0		
@ SIGE	%1e	0.001		
@ SIGT	%1e	1		
@ NPART	%1e	0		
@ EX	%1e	1		
@ EY	%1e	1		
@ ET	%1e	0.001		
@ LENGTH	%1e	6912		
@ ALFA	%1e	0.001680700304		
@ ORBIT5	%1e	-0		
@ GAMMATR	%1e	24.3924184		
@ Q1	%1e	26.57999179		
@ Q2	%1e	26.62000381		
@ DQ1	%1e	3.56978883e-06		
@ DQ2	%1e	-1.062607425e-06		
@ DXMAX	%1e	2.568038742		
@ DYMAX	%1e	0.004818103644		
@ XCOMAX	%1e	1.013227688e-05		
@ YCOMAX	%1e	0.00528014163		
@ BETXMAX	%1e	107.5573834		
@ BETYMAX	%1e	107.5069128		
@ XCORMS	%1e	5.241594426e-06		
@ YCORMS	%1e	0.0003734569232		
@ DXRMS	%1e	1.935785939		
@ DYRMS	%1e	0.0003269756843		
@ DELTAP	%1e	0		
@ SYNCH_1	%1e	0		
@ SYNCH_2	%1e	0		
@ SYNCH_3	%1e	0		
@ SYNCH_4	%1e	0		
@ SYNCH_5	%1e	0		
@ TITLE	%08s	"no-title"		
@ ORIGIN	%16s	"5.03.06 Linux 64"		
@ DATE	%08s	"01/08/17"		
@ TIME	%08s	"07.01.15"		
* NAME		S	Y	PY
\$ %s		%1e	%1e	%1e
"CH1"		4.6425	6.109076712e-18	3.462954403e-19
"BPMH1"		4.7425	6.143706256e-18	3.462954403e-19
"CV1"		36.6425	1.498431757e-17	-3.652770058e-19

"BPMV1"	36.7425	1.494778987e-17	-3.652770058e-19
"CH2"	68.6425	3.939713272e-18	-1.604447743e-19
"BPMH2"	68.7425	3.923668795e-18	-1.604447743e-19
"CV2"	100.6425	-1.104011758e-18	-1.29549277e-19
"BPMV2"	100.7425	-1.116966686e-18	-1.29549277e-19
"CH3"	132.6425	-5.934958338e-18	-3.533857121e-19
"BPMH3"	132.7425	-5.97029691e-18	-3.533857121e-19
"CV3"	164.6425	-1.503309357e-17	3.595463217e-19
"BPMV3"	164.7425	-1.499713894e-17	3.595463217e-19
"CH4"	196.6425	-4.20217976e-18	1.448161821e-19
"BPMH4"	196.7425	-4.187698141e-18	1.448161821e-19
"CV4"	228.6425	4.391762337e-19	1.454499653e-19
"BPMV4"	228.7425	4.537212302e-19	1.454499653e-19
"CH5"	260.6425	5.74911257e-18	3.597916121e-19
"BPMH5"	260.7425	5.785091731e-18	3.597916121e-19
"CV5"	292.6425	1.505254874e-17	-3.531190562e-19
"BPMV5"	292.7425	1.501723683e-17	-3.531190562e-19
"CH6"	324.6425	4.456282332e-18	-1.289142197e-19
"BPMH6"	324.7425	4.44339091e-18	-1.289142197e-19
"CV6"	356.6425	2.261162158e-19	-1.610571287e-19
"BPMV6"	356.7425	2.100105029e-19	-1.610571287e-19
"CH7"	388.6425	-5.55215316e-18	-3.654876689e-19
"BPMH7"	388.7425	-5.588701927e-18	-3.654876689e-19
"CV7"	420.6425	-1.504250985e-17	3.459950221e-19
"BPMV7"	420.7425	5.18792727e-06	5.18792727e-05
"CH8"	452.6425	0.001871650615	0.0001210944256
"BPMH8"	452.7425	0.001883760057	0.0001210944256
"CV8"	484.6425	0.005011605378	-0.0001160537807
"BPMV8"	484.7425	0.005	-0.0001160537807
"CH9"	516.6425	0.001538294684	-3.938736489e-05
"BPMH9"	516.7425	0.001534355948	-3.938736489e-05
"CV9"	548.6425	0.0002215207514	-5.700893845e-05
"BPMV9"	548.7425	0.0002209976398	-5.231115858e-06
"CH10"	580.6425	6.43383062e-05	-1.977576676e-06
"BPMH10"	580.7425	6.414054853e-05	-1.977576676e-06
"CV10"	612.6425	-9.145202973e-18	-2.293145808e-06
"BPMV10"	612.7425	-9.116700315e-18	2.850265868e-19
"CH11"	644.6425	-1.644065475e-19	2.428539043e-19
"BPMH11"	644.7425	-1.401211571e-19	2.428539043e-19
"CV11"	676.6425	6.671917768e-18	-5.983266873e-20
"BPMV11"	676.7425	6.665934501e-18	-5.983266873e-20
"CH12"	708.6425	5.463299212e-18	1.685377881e-19
"BPMH12"	708.7425	5.480152991e-18	1.685377881e-19
"CV12"	740.6425	9.440100629e-18	-2.876703122e-19
"BPMV12"	740.7425	9.411333598e-18	-2.876703122e-19
"CH13"	772.6425	4.059147424e-19	-2.354026276e-19
"BPMH13"	772.7425	3.823744797e-19	-2.354026276e-19
"CV13"	804.6425	-6.254586858e-18	4.711372899e-20
"BPMV13"	804.7425	-6.249875485e-18	4.711372899e-20
"CH14"	836.6425	-5.445408057e-18	-1.789460527e-19

"BPMH14"	836.7425	-5.463302662e-18	-1.789460527e-19
"CV14"	868.6425	-9.716694869e-18	2.897545558e-19
"BPMV14"	868.7425	-9.687719414e-18	2.897545558e-19
"CH15"	900.6425	-6.466979479e-19	2.274908084e-19
"BPMH15"	900.7425	-6.239488671e-19	2.274908084e-19
"CV15"	932.6425	5.824957462e-18	-3.430353002e-20
"BPMV15"	932.7425	5.821527109e-18	-3.430353002e-20
"CH16"	964.6425	5.416762135e-18	1.890033149e-19
"BPMH16"	964.7425	5.435662466e-18	1.890033149e-19
"CV16"	996.6425	9.974164524e-18	-2.912701957e-19
"BPMV16"	996.7425	9.945037505e-18	-2.912701957e-19
"CH17"	1028.6425	8.861470152e-19	-2.191353291e-19
"BPMH17"	1028.7425	8.642334823e-19	-2.191353291e-19
"CV17"	1060.6425	-5.38403308e-18	2.142604571e-20
"BPMV17"	1060.7425	-5.381890476e-18	2.142604571e-20
"CH18"	1092.6425	-5.37763801e-18	-1.986917765e-19
"BPMH18"	1092.7425	-5.397507187e-18	-1.986917765e-19
"CV18"	1124.6425	-1.021225262e-17	2.922181386e-19
"BPMV18"	1124.7425	-1.018303081e-17	2.922181386e-19
"CH19"	1156.6425	-1.123935832e-18	2.10349912e-19
"BPMH19"	1156.7425	-1.102900841e-18	2.10349912e-19
"CV19"	1188.6425	4.93247587e-18	-8.506306604e-21
"BPMV19"	1188.7425	4.931625239e-18	-8.506306604e-21
"CH20"	1220.6425	5.327894012e-18	2.079918114e-19
"BPMH20"	1220.7425	5.348693193e-18	2.079918114e-19
"CV20"	1252.6425	1.0430282e-17	-2.925938598e-19
"BPMV20"	1252.7425	1.040102261e-17	-2.925938598e-19
"CH21"	1284.6425	1.359453912e-18	-2.01155526e-19
"BPMH21"	1284.7425	1.33933836e-18	-2.01155526e-19
"CV21"	1316.6425	-4.471404271e-18	-4.429073306e-21
"BPMV21"	1316.7425	-4.471847178e-18	-4.429073306e-21
"CH22"	1348.6425	-5.267842766e-18	-2.168847685e-19
"BPMH22"	1348.7425	-5.289531243e-18	-2.168847685e-19
"CV22"	1380.6425	-1.062800377e-17	2.923980909e-19
"BPMV22"	1380.7425	-1.059876396e-17	2.923980909e-19
"CH23"	1412.6425	-1.592390653e-18	1.91565176e-19
"BPMH23"	1412.7425	-1.573234136e-18	1.91565176e-19
"CV23"	1444.6425	4.001447805e-18	1.735739285e-20
"BPMV23"	1444.7425	4.003183544e-18	1.735739285e-20
"CH24"	1476.6425	5.197389309e-18	2.253548781e-19
"BPMH24"	1476.7425	5.219924797e-18	2.253548781e-19
"CV24"	1508.6425	1.080488834e-17	-2.916309521e-19
"BPMV24"	1508.7425	1.077572524e-17	-2.916309521e-19
"CH25"	1540.6425	1.82213665e-18	-1.816037193e-19
"BPMH25"	1540.7425	1.803976278e-18	-1.816037193e-19
"CV25"	1572.6425	-3.523832222e-18	-3.024958317e-20
"BPMV25"	1572.7425	-3.52685718e-18	-3.024958317e-20
"CH26"	1604.6425	-5.116880381e-18	-2.333828618e-19
"BPMH26"	1604.7425	-5.140218667e-18	-2.333828618e-19
"CV26"	1636.6425	-1.096069954e-17	2.902930144e-19

"BPMV26"	1636.7425	-1.093167024e-17	2.902930144e-19
"CH27"	1668.6425	-2.048401499e-18	1.712834071e-19
"BPMH27"	1668.7425	-2.031273158e-18	1.712834071e-19
"CV27"	1700.6425	3.039149312e-18	4.30854402e-20
"BPMV27"	1700.7425	3.043457856e-18	4.30854402e-20
"CH28"	1732.6425	5.026267868e-18	2.409568184e-19
"BPMH28"	1732.7425	5.05036355e-18	2.409568184e-19
"CV28"	1764.6425	1.109505584e-17	-2.883889895e-19
"BPMV28"	1764.7425	1.106621694e-17	-2.883889895e-19
"CH29"	1796.6425	2.270579472e-18	-1.606326954e-19
"BPMH29"	1796.7425	2.254516203e-18	-1.606326954e-19
"CV29"	1828.6425	-2.54872181e-18	-5.583370931e-20
"BPMV29"	1828.7425	-2.55430518e-18	-5.583370931e-20
"CH30"	1860.6425	-4.925930626e-18	-2.48057134e-19
"BPMH30"	1860.7425	-4.950736339e-18	-2.48057134e-19
"CV30"	1892.6425	-1.120774019e-17	2.859193679e-19
"BPMV30"	1892.7425	-1.117914825e-17	2.859193679e-19
"CH31"	1924.6425	-2.488404701e-18	1.496631108e-19
"BPMH31"	1924.7425	-2.47343839e-18	1.496631108e-19
"CV31"	1956.6425	2.053100795e-18	6.847676773e-20
"BPMV31"	1956.7425	2.059948471e-18	6.847676773e-20
"CH32"	1988.6425	4.815866943e-18	2.54675699e-19
"BPMH32"	1988.7425	4.841334512e-18	2.54675699e-19
"CV32"	2020.6425	1.129851667e-17	-2.828932997e-19
"BPMV32"	2020.7425	1.127022734e-17	-2.828932997e-19
"CH33"	2052.6425	2.70127791e-18	-1.384063324e-19
"BPMH33"	2052.7425	2.687437277e-18	-1.384063324e-19
"CV33"	2084.6425	-1.553693133e-18	-8.098152398e-20
"BPMV33"	2084.7425	-1.561791286e-18	-8.098152398e-20
"CH34"	2116.6425	-4.696485769e-18	-2.607929148e-19
"BPMH34"	2116.7425	-4.72256506e-18	-2.607929148e-19
"CV34"	2148.6425	-1.136719536e-17	2.793113379e-19
"BPMV34"	2148.7425	-1.133926422e-17	2.793113379e-19
"CH35"	2180.6425	-2.908961687e-18	1.26873252e-19
"BPMH35"	2180.7425	-2.896274362e-18	1.26873252e-19
"CV35"	2212.6425	1.05100824e-18	9.333293968e-20
"BPMV35"	2212.7425	1.060341534e-18	9.333293968e-20
"CH36"	2244.6425	4.567830745e-18	2.664043034e-19
"BPMH36"	2244.7425	4.594471175e-18	2.664043034e-19
"CV36"	2276.6425	1.141368063e-17	-2.751868234e-19
"BPMV36"	2276.7425	1.138616195e-17	-2.751868234e-19
"CH37"	2308.6425	3.110866164e-18	-1.150983195e-19
"BPMH37"	2308.7425	3.099356332e-18	-1.150983195e-19
"CV37"	2340.6425	-5.465219739e-19	-1.054965084e-19
"BPMV37"	2340.7425	-5.570716248e-19	-1.054965084e-19
"CH38"	2372.6425	-4.430338912e-18	-2.71490682e-19
"BPMH38"	2372.7425	-4.45748798e-18	-2.71490682e-19
"CV38"	2404.6425	-1.143781911e-17	2.705205717e-19
"BPMV38"	2404.7425	-1.141076705e-17	2.705205717e-19
"CH39"	2436.6425	-3.306785849e-18	1.030919344e-19

"BPMH39"	2436.7425	-3.296476656e-18	1.030919344e-19
"CV39"	2468.6425	4.070298806e-20	1.174597033e-19
"BPMV39"	2468.7425	5.244895838e-20	1.174597033e-19
"CH40"	2500.6425	4.2840976e-18	2.760509696e-19
"BPMH40"	2500.7425	4.311702697e-18	2.760509696e-19
"CV40"	2532.6425	1.143964757e-17	-2.653297791e-19
"BPMV40"	2532.7425	1.141311459e-17	-2.653297791e-19
"CH41"	2564.6425	3.496143408e-18	-9.08907997e-20
"BPMH41"	2564.7425	3.487054328e-18	-9.08907997e-20
"CV41"	2596.6425	4.649209671e-19	-1.291870884e-19
"BPMV41"	2596.7425	4.520022582e-19	-1.291870884e-19
"CH42"	2628.6425	-4.129569977e-18	-2.80066839e-19
"BPMH42"	2628.7425	-4.157576661e-18	-2.80066839e-19
"CV42"	2660.6425	-1.141905968e-17	2.596157731e-19
"BPMV42"	2660.7425	-1.139309811e-17	2.596157731e-19
"CH43"	2692.6425	-3.678768236e-18	7.850500882e-20
"BPMH43"	2692.7425	-3.670917735e-18	7.850500882e-20
"CV43"	2724.6425	-9.699194725e-19	1.40668507e-19
"BPMV43"	2724.7425	-9.558526218e-19	1.40668507e-19
"CH44"	2756.6425	3.966884797e-18	2.835403069e-19
"BPMH44"	2756.7425	3.995238828e-18	2.835403069e-19
"CV44"	2788.6425	1.137621442e-17	-2.533991929e-19
"BPMV44"	2788.7425	1.13508745e-17	-2.533991929e-19
"CH45"	2820.6425	3.8540988e-18	-6.597294701e-20
"BPMH45"	2820.7425	3.847501505e-18	-6.597294701e-20
"CV45"	2852.6425	1.472731569e-18	-1.518681312e-19
"BPMV45"	2852.7425	1.457544756e-18	-1.518681312e-19
"CH46"	2884.6425	-3.796529449e-18	-2.864543677e-19
"BPMH46"	2884.7425	-3.825174885e-18	-2.864543677e-19
"CV46"	2916.6425	-1.13110638e-17	2.466821655e-19
"BPMV46"	2916.7425	-1.128639558e-17	2.466821655e-19
"CH47"	2948.6425	-4.022001844e-18	5.33046202e-20
"BPMH47"	2948.7425	-4.016671382e-18	5.33046202e-20
"CV47"	2980.6425	-1.972961212e-18	1.627779742e-19
"BPMV47"	2980.7425	-1.956683415e-18	1.627779742e-19
"CH48"	3012.6425	3.618671266e-18	2.888137852e-19
"BPMH48"	3012.7425	3.647552645e-18	2.888137852e-19
"CV48"	3044.6425	1.122387682e-17	-2.394882962e-19
"BPMV48"	3044.7425	1.119992799e-17	-2.394882962e-19
"CH49"	3076.6425	4.181935013e-18	-4.053948782e-20
"BPMH49"	3076.7425	4.177881064e-18	-4.053948782e-20
"CV49"	3108.6425	2.469034058e-18	-1.733623919e-19
"BPMV49"	3108.7425	2.451697819e-18	-1.733623919e-19
"CH50"	3140.6425	-3.433820007e-18	-2.906033525e-19
"BPMH50"	3140.7425	-3.462880343e-18	-2.906033525e-19
"CV50"	3172.6425	-1.111467549e-17	2.318208258e-19
"BPMV50"	3172.7425	-1.10914934e-17	2.318208258e-19
"CH51"	3204.6425	-4.333804338e-18	2.76877063e-20
"BPMH51"	3204.7425	-4.331035567e-18	2.76877063e-20
"CV51"	3236.6425	-2.960583585e-18	1.836153207e-19

"BPMV51"	3236.7425	-2.942222053e-18	1.836153207e-19
"CH52"	3268.6425	3.242178204e-18	2.918301922e-19
"BPMH52"	3268.7425	3.271361223e-18	2.918301922e-19
"CV52"	3300.6425	1.09838252e-17	-2.237057979e-19
"BPMV52"	3300.7425	1.096145462e-17	-2.237057979e-19
"CH53"	3332.6425	4.477090093e-18	-1.478917934e-20
"BPMH53"	3332.7425	4.475611175e-18	-1.478917934e-20
"CV53"	3364.6425	3.44604255e-18	-1.935018989e-19
"BPMV53"	3364.7425	3.42669236e-18	-1.935018989e-19
"CH54"	3396.6425	-3.044276188e-18	-2.924813701e-19
"BPMH54"	3396.7425	-3.073524325e-18	-2.924813701e-19
"CV54"	3428.6425	-1.083142952e-17	2.151478943e-19
"BPMV54"	3428.7425	-1.080991473e-17	2.151478943e-19
"CH55"	3460.6425	-4.611739015e-18	1.854458431e-21
"BPMH55"	3460.7425	-4.61155357e-18	1.854458431e-21
"CV55"	3492.6425	-3.925068487e-18	2.030177054e-19
"BPMV55"	3492.7425	-3.904766717e-18	2.030177054e-19
"CH56"	3524.6425	2.840347809e-18	2.925659556e-19
"BPMH56"	3524.7425	2.869604404e-18	2.925659556e-19
"CV56"	3556.6425	1.065793551e-17	-2.061750342e-19
"BPMV56"	3556.7425	1.063731801e-17	-2.061750342e-19
"CH57"	3588.6425	4.73725748e-18	1.10767436e-20
"BPMH57"	3588.7425	4.738365154e-18	1.10767436e-20
"CV57"	3620.6425	4.396121899e-18	-2.121292661e-19
"BPMV57"	3620.7425	4.374908972e-18	-2.121292661e-19
"CH58"	3652.6425	-2.630942226e-18	-2.92073743e-19
"BPMH58"	3652.7425	-2.6601496e-18	-2.92073743e-19
"CV58"	3684.6425	-1.04635394e-17	1.96793667e-19
"BPMV58"	3684.7425	-1.044386004e-17	1.96793667e-19
"CH59"	3716.6425	-4.853633848e-18	-2.399324295e-20
"BPMH59"	3716.7425	-4.856033172e-18	-2.399324295e-20
"CV59"	3748.6425	-4.858878675e-18	2.208335023e-19
"BPMV59"	3748.7425	-4.836795325e-18	2.208335023e-19
"CH60"	3780.6425	2.41632029e-18	2.910153277e-19
"BPMH60"	3780.7425	2.445421823e-18	2.910153277e-19
"CV60"	3812.6425	1.024875457e-17	-1.870330056e-19
"BPMV60"	3812.7425	1.023005126e-17	-1.870330056e-19
"CH61"	3844.6425	4.96040403e-18	3.685614123e-20
"BPMH61"	3844.7425	4.964089644e-18	3.685614123e-20
"CV61"	3876.6425	5.311847359e-18	-2.29098923e-19
"BPMV61"	3876.7425	5.288937466e-18	-2.29098923e-19
"CH62"	3908.6425	-2.197048269e-18	-2.893836539e-19
"BPMH62"	3908.7425	-2.225986634e-18	-2.893836539e-19
"CV62"	3940.6425	-1.001388007e-17	1.769015774e-19
"BPMV62"	3940.7425	-9.996189911e-18	1.769015774e-19
"CH63"	3972.6425	-5.057598457e-18	-4.965340583e-20
"BPMH63"	3972.7425	-5.062563798e-18	-4.965340583e-20
"CV63"	4004.6425	-5.754716664e-18	2.369234861e-19
"BPMV63"	4004.7425	-5.731024315e-18	2.369234861e-19
"CH64"	4036.6425	1.973409331e-18	2.871904296e-19

"BPMH64"	4036.7425	2.002128374e-18	2.871904296e-19
"CV64"	4068.6425	9.759480107e-18	-1.664293055e-19
"BPMV64"	4068.7425	9.742837176e-18	-1.664293055e-19
"CH65"	4100.6425	5.144785907e-18	6.234754859e-20
"BPMH65"	4100.7425	5.151020661e-18	6.234754859e-20
"CV65"	4132.6425	6.186062612e-18	-2.442782524e-19
"BPMV65"	4132.7425	6.161634786e-18	-2.442782524e-19
"CH66"	4164.6425	-1.745985131e-18	-2.844321215e-19
"BPMH66"	4164.7425	-1.774428343e-18	-2.844321215e-19
"CV66"	4196.6425	-9.485965423e-18	1.556270758e-19
"BPMV66"	4196.7425	-9.470402716e-18	1.556270758e-19
"CH67"	4228.6425	-5.222038887e-18	-7.492550509e-20
"BPMH67"	4228.7425	-5.229531437e-18	-7.492550509e-20
"CV67"	4260.6425	-6.605581756e-18	2.511619197e-19
"BPMV67"	4260.7425	-6.580465565e-18	2.511619197e-19
"CH68"	4292.6425	1.515076187e-18	2.811211568e-19
"BPMH68"	4292.7425	1.543188303e-18	2.811211568e-19
"CV68"	4324.6425	9.193935847e-18	-1.445249516e-19
"BPMV68"	4324.7425	9.179483352e-18	-1.445249516e-19
"CH69"	4356.6425	5.288962207e-18	8.73517501e-20
"BPMH69"	4356.7425	5.297697382e-18	8.73517501e-20
"CV69"	4388.6425	7.011935695e-18	-2.575486267e-19
"BPMV69"	4388.7425	6.986180833e-18	-2.575486267e-19
"CH70"	4420.6425	-1.281277796e-18	-2.772578358e-19
"BPMH70"	4420.7425	-1.30900358e-18	-2.772578358e-19
"CV70"	4452.6425	-8.883920885e-18	1.331364142e-19
"BPMV70"	4452.7425	-8.870607243e-18	1.331364142e-19
"CH71"	4484.6425	-5.345670061e-18	-9.961204942e-20
"BPMH71"	4484.7425	-5.355631266e-18	-9.961204942e-20
"CV71"	4516.6425	-7.404824747e-18	2.634375369e-19
"BPMV71"	4516.7425	-7.378480994e-18	2.634375369e-19
"CH72"	4548.6425	1.044902644e-18	2.728549452e-19
"BPMH72"	4548.7425	1.072188139e-18	2.728549452e-19
"CV72"	4580.6425	8.556541566e-18	-1.214911273e-19
"BPMV72"	4580.7425	8.544392453e-18	-1.214911273e-19
"CH73"	4612.6425	5.39180622e-18	1.116733365e-19
"BPMH73"	4612.7425	5.402973554e-18	1.116733365e-19
"CV73"	4644.6425	7.783012398e-18	-2.688063353e-19
"BPMV73"	4644.7425	7.756131765e-18	-2.688063353e-19
"CH74"	4676.6425	-8.065578684e-19	-2.679168565e-19
"BPMH74"	4676.7425	-8.33349554e-19	-2.679168565e-19
"CV74"	4708.6425	-8.212451151e-18	1.096053477e-19
"BPMV74"	4708.7425	-8.201490616e-18	1.096053477e-19
"CH75"	4740.6425	-5.427525827e-18	-1.235201245e-19
"BPMH75"	4740.7425	-5.439877839e-18	-1.235201245e-19
"CV75"	4772.6425	-8.146199879e-18	2.736544117e-19
"BPMV75"	4772.7425	-8.118834438e-18	2.736544117e-19
"CH76"	4804.6425	5.665630229e-19	2.624564005e-19
"BPMH76"	4804.7425	5.928086629e-19	2.624564005e-19
"CV76"	4836.6425	7.852278567e-18	-9.750784363e-20

"BPMV76"	4836.7425	7.842527782e-18	-9.750784363e-20
"CH77"	4868.6425	5.452514236e-18	1.351222322e-19
"BPMH77"	4868.7425	5.466026459e-18	1.351222322e-19
"CV77"	4900.6425	8.493266704e-18	-2.779633949e-19
"BPMV77"	4900.7425	8.465470365e-18	-2.779633949e-19
"CH78"	4932.6425	-3.255351922e-19	-2.564821744e-19
"BPMH78"	4932.7425	-3.511834097e-19	-2.564821744e-19
"CV78"	4964.6425	-7.476803437e-18	8.521776079e-20
"BPMV78"	4964.7425	-7.468281661e-18	8.521776079e-20
"CH79"	4996.6425	-5.466966503e-18	-1.464629002e-19
"BPMH79"	4996.7425	-5.481612793e-18	-1.464629002e-19
"CV79"	5028.6425	-8.823913648e-18	2.817327079e-19
"BPMV79"	5028.7425	-8.795740377e-18	2.817327079e-19
"CH80"	5060.6425	8.37954663e-20	2.500067926e-19
"BPMH80"	5060.7425	1.087961456e-19	2.500067926e-19
"CV80"	5092.6425	7.086650744e-18	-7.276253235e-20
"BPMV80"	5092.7425	7.07937449e-18	-7.276253235e-20
"CH81"	5124.6425	5.470611821e-18	1.575151809e-19
"BPMH81"	5124.7425	5.486363339e-18	1.575151809e-19
"CV81"	5156.6425	9.13714789e-18	-2.849482378e-19
"BPMV81"	5156.7425	9.108653066e-18	-2.849482378e-19
"CH82"	5188.6425	1.580311381e-19	-2.430431421e-19
"BPMH82"	5188.7425	1.337268239e-19	-2.430431421e-19
"CV82"	5220.6425	-6.682726476e-18	6.01642307e-20
"BPMV82"	5220.7425	-6.676710053e-18	6.01642307e-20
"CH83"	5252.6425	-5.463683882e-18	-1.682610908e-19
"BPMH83"	5252.7425	-5.480509991e-18	-1.682610908e-19
"CV83"	5284.6425	-9.432670069e-18	2.876093025e-19
"BPMV83"	5284.7425	-9.403909139e-18	2.876093025e-19
"CH84"	5316.6425	-3.996272731e-19	2.356034208e-19
"BPMH84"	5316.7425	-3.76066931e-19	2.356034208e-19
"CV84"	5348.6425	6.265641563e-18	-4.744858112e-20
"BPMV84"	5348.7425	6.260896705e-18	-4.744858112e-20
"CH85"	5380.6425	5.445957531e-18	1.78677178e-19
"BPMH85"	5380.7425	5.463825249e-18	1.78677178e-19
"CV85"	5412.6425	9.709623912e-18	-2.897062709e-19
"BPMV85"	5412.7425	9.680653285e-18	-2.897062709e-19
"CH86"	5444.6425	6.403621559e-19	-2.277047752e-19
"BPMH86"	5444.7425	6.175916784e-19	-2.277047752e-19
"CV86"	5476.6425	-5.836425604e-18	3.464053836e-20
"BPMV86"	5476.7425	-5.83296155e-18	3.464053836e-20
"CH87"	5508.6425	-5.417703634e-18	-1.887443553e-19
"BPMH87"	5508.7425	-5.43657807e-18	-1.887443553e-19
"CV87"	5540.6425	-9.967712058e-18	2.912382788e-19
"BPMV87"	5540.7425	-9.93858823e-18	2.912382788e-19
"CH88"	5572.6425	-8.799273179e-19	2.193588526e-19
"BPMH88"	5572.7425	-8.579914327e-19	2.193588526e-19
"CV88"	5604.6425	5.395667296e-18	-2.17638218e-20
"BPMV88"	5604.7425	5.393490914e-18	-2.17638218e-20
"CH89"	5636.6425	5.378744014e-18	1.984428384e-19

"BPMH89"	5636.7425	5.398588298e-18	1.984428384e-19
"CV89"	5668.6425	1.020622074e-17	-2.922003031e-19
"BPMV89"	5668.7425	1.017700071e-17	-2.922003031e-19
"CH90"	5700.6425	1.117688553e-18	-2.105869323e-19
"BPMH90"	5700.7425	1.096629859e-18	-2.105869323e-19
"CV90"	5732.6425	-4.944514269e-18	8.846138671e-21
"BPMV90"	5732.7425	-4.943629656e-18	8.846138671e-21
"CH91"	5764.6425	-5.32938511e-18	-2.077526287e-19
"BPMH91"	5764.7425	-5.350160373e-18	-2.077526287e-19
"CV91"	5796.6425	-1.04248586e-17	2.925912853e-19
"BPMV91"	5796.7425	-1.039559947e-17	2.925912853e-19
"CH92"	5828.6425	-1.353351189e-18	2.014000441e-19
"BPMH92"	5828.7425	-1.333211185e-18	2.014000441e-19
"CV92"	5860.6425	4.483526866e-18	4.091015804e-21
"BPMV92"	5860.7425	4.483935967e-18	4.091015804e-21
"CH93"	5892.6425	5.269496506e-18	2.166576894e-19
"BPMH93"	5892.7425	5.291162275e-18	2.166576894e-19
"CV93"	5924.6425	1.062305732e-17	-2.924108358e-19
"BPMV93"	5924.7425	1.059381623e-17	-2.924108358e-19
"CH94"	5956.6425	1.586280134e-18	-1.918233786e-19
"BPMH94"	5956.7425	1.567097796e-18	-1.918233786e-19
"CV94"	5988.6425	-4.013962365e-18	-1.701739798e-20
"BPMV94"	5988.7425	-4.015664104e-18	-1.701739798e-20
"CH95"	6020.6425	-5.199418529e-18	-2.251373723e-19
"BPMH95"	6020.7425	-5.221932266e-18	-2.251373723e-19
"CV95"	6052.6425	-1.080053741e-17	2.916577566e-19
"BPMV95"	6052.7425	-1.077137163e-17	2.916577566e-19
"CH96"	6084.6425	-1.816199142e-18	1.818673476e-19
"BPMH96"	6084.7425	-1.798012407e-18	1.818673476e-19
"CV96"	6116.6425	3.536348709e-18	2.991387289e-20
"BPMV96"	6116.7425	3.539340097e-18	2.991387289e-20
"CH97"	6148.6425	5.11906873e-18	2.331793779e-19
"BPMH97"	6148.7425	5.142386667e-18	2.331793779e-19
"CV97"	6180.6425	1.095687592e-17	-2.903362157e-19
"BPMV97"	6180.7425	1.09278423e-17	-2.903362157e-19
"CH98"	6212.6425	2.04247497e-18	-1.715607406e-19
"BPMH98"	6212.7425	2.025318896e-18	-1.715607406e-19
"CV98"	6244.6425	-3.052041761e-18	-4.274796064e-20
"BPMV98"	6244.7425	-3.056316557e-18	-4.274796064e-20
"CH99"	6276.6425	-5.028819585e-18	-2.407627345e-19
"BPMH99"	6276.7425	-5.052895858e-18	-2.407627345e-19
"CV99"	6308.6425	-1.109181284e-17	2.884449957e-19
"BPMV99"	6308.7425	-1.106296834e-17	2.884449957e-19
"CH100"	6340.6425	-2.264854074e-18	1.609134143e-19
"BPMH100"	6340.7425	-2.248762733e-18	1.609134143e-19
"CV100"	6372.6425	2.561535062e-18	5.5502941e-20
"BPMV100"	6372.7425	2.567085356e-18	5.5502941e-20
"CH101"	6404.6425	4.928636218e-18	2.478787834e-19
"BPMH101"	6404.7425	4.953424097e-18	2.478787834e-19
"CV101"	6436.6425	1.120506762e-17	-2.859926482e-19

"BPMV101"	6436.7425	1.117646835e-17	-2.859926482e-19
"CH102"	6468.6425	2.482708012e-18	-1.499573608e-19
"BPMH102"	6468.7425	2.467712276e-18	-1.499573608e-19
"CV102"	6500.6425	-2.066269489e-18	-6.814447695e-20
"BPMV102"	6500.7425	-2.073083937e-18	-6.814447695e-20
"CH103"	6532.6425	-4.818921509e-18	-2.545066123e-19
"BPMH103"	6532.7425	-4.84437217e-18	-2.545066123e-19
"CV103"	6564.6425	-1.129640883e-17	2.829781169e-19
"BPMV103"	6564.7425	-1.126811102e-17	2.829781169e-19
"CH104"	6596.6425	-2.695809801e-18	1.387020012e-19
"BPMH104"	6596.7425	-2.681939601e-18	1.387020012e-19
"CV104"	6628.6425	1.566704104e-18	8.065823935e-20
"BPMV104"	6628.7425	1.574769928e-18	8.065823935e-20
"CH105"	6660.6425	4.699687136e-18	2.606410269e-19
"BPMH105"	6660.7425	4.725751239e-18	2.606410269e-19
"CV105"	6692.6425	1.136569264e-17	-2.794140708e-19
"BPMV105"	6692.7425	1.133775123e-17	-2.794140708e-19
"CH106"	6724.6425	2.903538949e-18	-1.271820603e-19
"BPMH106"	6724.7425	2.890820743e-18	-1.271820603e-19
"CV106"	6756.6425	-1.064349003e-18	-9.300848429e-20
"BPMV106"	6756.7425	-1.073649851e-18	-9.300848429e-20
"CH107"	6788.6425	-4.571364648e-18	-2.662616049e-19
"BPMH107"	6788.7425	-4.597990808e-18	-2.662616049e-19
"CV107"	6820.6425	-1.141272667e-17	2.752998491e-19
"BPMV107"	6820.7425	-1.138519669e-17	2.752998491e-19
"CH108"	6852.6425	-3.105698452e-18	1.154066913e-19
"BPMH108"	6852.7425	-3.094157783e-18	1.154066913e-19
"CV108"	6884.6425	5.596304146e-19	1.051831779e-19
"BPMV108"	6884.7425	5.701487324e-19	1.051831779e-19

10.4 APPENDIX 1.4: Example 4, Use of MAD-X macros and imperfections

10.4.1 Sequence definition (spsmac.seq)

```
// define a subroutine "inst" to insert elements
// with numbering
// all strings "nx" in the macro are replaced by
// the input value of nx.
inst(nx,n,lcell,lquad2): macro = {
    qf: qf,          at=(n-1)*lcell+lquad2;
    lsf: lsf,        at=(n-1)*lcell+lquad2+2.5;
    chnx: hkicker,l=0.0,kick:=kchnx,
                at=(n-1)*lcell+lquad2+3.1;
    bpmhnx: monitor,l=0.0,
                at=(n-1)*lcell+lquad2+3.2;
    mbsps: mbsps,    at=(n-1)*lcell+lquad2+3.50;
    mbsps: mbsps,    at=(n-1)*lcell+lquad2+9.90;
    mbsps: mbsps,    at=(n-1)*lcell+lquad2+22.10;
    mbsps: mbsps,    at=(n-1)*lcell+lquad2+28.50;
    qd: qd,          at=(n-1)*lcell+lquad2+32.00;
    lsd: lsd,        at=(n-1)*lcell+lquad2+34.50;
    cvnx: vkicker,l=0.0,kick:=kcvnx,
                at=(n-1)*lcell+lquad2+35.10;
    bpmvnx: monitor,l=0.0,
                at=(n-1)*lcell+lquad2+35.20;
    mbsps: mbsps,    at=(n-1)*lcell+lquad2+35.50;
    mbsps: mbsps,    at=(n-1)*lcell+lquad2+41.90;
    mbsps: mbsps,    at=(n-1)*lcell+lquad2+54.10;
    mbsps: mbsps,    at=(n-1)*lcell+lquad2+60.50;

    n = n + 1;
}

// define the total length
circum=6912.0;

// define number of cells and therefore cell length
ncell = 108;
lcell = circum/ncell;

// define lengths of elements and half lengths
lquad = 3.085;
lquad2 = lquad/2.;
lquad3 = 0.0;
lmb = 6.260;
lmb2 = lmb/2.;
lsex = 1.0;

// forces and other constants;
// element definitions;
```

```

// define bending magnet as multipole
mbmps: multipole, lrad=dummy, l=lmb, knl={2.0*pi/(8*ncell)};

// define quadrupole and their strengths
qsps: quadrupole, l=lquad;
qf: qsps, k1:=kqf;
qd: qsps, k1:=kqd;
kqf = 1.4631475E-02;
kqd = -1.4643443E-02;

// define sextupoles for chromaticity correction
lsf: sextupole, l=lsex,k2:=ksf;
lsd: sextupole, l=lsex,k2:=ksd;
ksf = 2.0284442E-02;
ksd = -3.8394267E-02;

// define orbit correctors and beam position monitors
bpm: monitor, l=0.1;
ch: hkicker, l=0.1;
cv: vkicker, l=0.1;

// sequence declaration;
cassps: sequence, refer=centre, l=circum;
start_machine: marker, at = 0;

// This defines ONE cell, repeat NCELL times
// to get the full machine
// SPS has 8 bending magnets per cell
n = 1;
while (n < ncell+1) {
// here we call the macro, cell number n is argument
// and used for numbering the elements
    exec inst($n,n,lcell,lquad2);
}
end_machine: marker at=circum;
endsequence;

```

10.4.2 MAD-X directives

```

TITLE, s='MAD-X test';

// Read input file with machine description
// This machine is constructed with macro
// subroutine INST()
call file="spsmac.seq";
option,-echo;

// Define the beam for the machine
Beam, particle = proton, sequence=cassps, energy = 450.0;

```

```
// Use the sequence with the name: cassps
use, sequence=cassps;

eoption,add=false,seed=62971100;
select,flag=error,pattern="q.*";
ealign,dx:=tgauss(3.0)*1.0e-4,dy:=tgauss(3.0)*2.0e-4;
eprint;

// Define the type and amount of output
select,flag=twiss,class=monitor,column=name,s,x,betx;
select,flag=twiss,class=vkicker,column=name,s,x,betx;
select,flag=twiss,class=hkicker,column=name,s,x,betx;

// Execute the Twiss command to calculate the Twiss parameters
// Compute at the centre of the element and write to: twiss.out
twiss,save,centre,file=twiss.out;

stop;
```

10.4.3 TWISS summary table

```
++++++ table: summ
```

length	orbit5	alfa	gammatr
6.9120000e+03	-0.0000000e+00	1.6804423e-03	2.4394290e+01
q1	dq1	betxmax	dxmax
2.6580085e+01	-1.2827690e-04	1.0808509e+02	2.6296100e+00
dxrms	xcomax	xcorms	q2
1.9361006e+00	3.1098580e-03	1.0489137e-03	2.6620213e+01
dq2	betymax	dymax	dyrms
-5.1039987e-04	1.0787781e+02	4.0349793e-01	1.5327251e-01
ycomax	ycorms	deltap	
8.6691696e-03	2.8727246e-03	0.0000000e+00	

10.4.4 TWISS lattice functions

@ NAME	%05s	"TWISS"		
@ TYPE	%05s	"TWISS"		
@ SEQUENCE	%06s	"CASSPS"		
@ PARTICLE	%06s	"PROTON"		
@ MASS	%1e		0.938271998	
@ CHARGE	%1e		1	
@ ENERGY	%1e		450	
@ PC	%1e		449.999021827	
@ GAMMA	%1e		479.605062241	
@ KBUNCH	%1e		1	
@ BCURRENT	%1e		0	
@ SIGE	%1e		0	
@ SIGT	%1e		0	
@ NPART	%1e		0	
@ EX	%1e		1	
@ EY	%1e		1	
@ ET	%1e		1	
@ LENGTH	%1e		6912	
@ ALFA	%1e		0.00168044235319	
@ ORBIT5	%1e		-0	
@ GAMMATR	%1e		24.3942904601	
@ Q1	%1e		26.5800856671	
@ Q2	%1e		26.6202187135	
@ DQ1	%1e		-0.000128276909332	
@ DQ2	%1e		-0.000510399876937	
@ DXMAX	%1e		2.629610492	
@ DYMAX	%1e		0.403497938523	
@ XCOMAX	%1e		0.00310985806321	
@ YCOMAX	%1e		0.0086691696294	
@ BETXMAX	%1e		108.085099015	
@ BETYMAX	%1e		107.877818541	
@ XCORMS	%1e		0.00104891378772	
@ YCORMS	%1e		0.0028727246142	
@ DXRMS	%1e		1.93610068609	
@ DYRMS	%1e		0.153272554514	
@ DELTAP	%1e		0	
@ TITLE	%01s	"s"		
@ ORIGIN	%16s	"MAD-X 1.11 Linux"		
@ DATE	%08s	"23/10/03"		
@ TIME	%08s	"10.54.36"		
* NAME	S	X	BETX	
\$ %s	%1e	%1e	%1e	
"CH1"	4.6425	7.270283965e-05	96.71513054	
"BPMH1"	4.7425	7.074377128e-05	96.26414369	
"CV1"	36.6425	-0.000609759073	22.16791457	
"BPMV1"	36.7425	-0.0006136057601	22.29453352	
"CH2"	68.6425	-0.001619774866	96.60029697	
"BPMH2"	68.7425	-0.001616493006	96.15012782	

"CV2"	100.6425	-0.0006806900062	22.20590744
"BPMV2"	100.7425	-0.0006809745368	22.33285114
"CH3"	132.6425	-0.0006702055164	96.69082398
"BPMH3"	132.7425	-0.0006672287746	96.23936818
"CV3"	164.6425	0.0002920301383	22.11019753
"BPMV3"	164.7425	0.0002953017665	22.23679301
"CH4"	196.6425	0.001157348134	96.6649292
"BPMH4"	196.7425	0.001154759396	96.21335536
"CV4"	228.6425	0.000373991881	22.08455422
"BPMV4"	228.7425	0.0003728320023	22.21117154
"CH5"	260.6425	1.317974197e-05	96.71965263
"BPMH5"	260.7425	1.236758651e-05	96.26877918
"CV5"	292.6425	-0.0002913559575	22.1823912
"BPMV5"	292.7425	-0.0002936789916	22.30912451
"CH6"	324.6425	-0.0009131218543	96.62975425
"BPMH6"	324.7425	-0.0009115133179	96.17889384
"CV6"	356.6425	-0.0004721562615	22.1454883
"BPMV6"	356.7425	-0.0004729356669	22.27221019
"CH7"	388.6425	-0.0006096356393	96.67763938
"BPMH7"	388.7425	-0.0006068161018	96.22676343
"CV7"	420.6425	0.0003186361334	22.16647139
"BPMV7"	420.7425	0.0003222988135	22.29331691
"CH8"	452.6425	0.001319551812	96.69719699
"BPMH8"	452.7425	0.001317680986	96.2448662
"CV8"	484.6425	0.0008399337545	22.0183191
"BPMV8"	484.7425	0.0008419042414	22.14474739
"CH9"	516.6425	0.00127367779	96.72628201
"BPMH9"	516.7425	0.001269314367	96.27522738
"CV9"	548.6425	-0.0001569946883	22.16736164
"BPMV9"	548.7425	-0.0001625635013	22.29406121
"CH10"	580.6425	-0.001695832426	96.63883761
"BPMH10"	580.7425	-0.001693540175	96.18855903
"CV10"	612.6425	-0.001134640886	22.21084481
"BPMV10"	612.7425	-0.001137909267	22.33761433
"CH11"	644.6425	-0.001891788389	96.60737231
"BPMH11"	644.7425	-0.001885758488	96.15696162
"CV11"	676.6425	2.602143671e-05	22.18437067
"BPMV11"	676.7425	3.164251283e-05	22.31133474
"CH12"	708.6425	0.001604718692	96.724361
"BPMH12"	708.7425	0.001603215697	96.27158303
"CV12"	740.6425	0.00126167154	21.98294563
"BPMV12"	740.7425	0.001264627726	22.10929259
"CH13"	772.6425	0.001934577849	96.74062223
.....			
.....			
.....			

References

- [1] *The CERN Accelerator School Home Page*,
<http://cern.ch/CAS>
- [2] *The MAD-X Home Page*,
<http://cern.ch/madx>