

Ion Source Requirements



Richard Scrivens

CERN

CAS on Ion Sources, May 2011

Layout

What is an ion source?

What do we need to make them work?

What are the requirements (parameters)?

Some basics of plasma dynamics – to understand sources.

What are we going to discuss



Ion sources have many uses.

We are going to fully concentrate on the ion sources used for particle accelerators (this is the CERN Accelerator School).

3

What are we going to discuss

From the small
and beautiful...

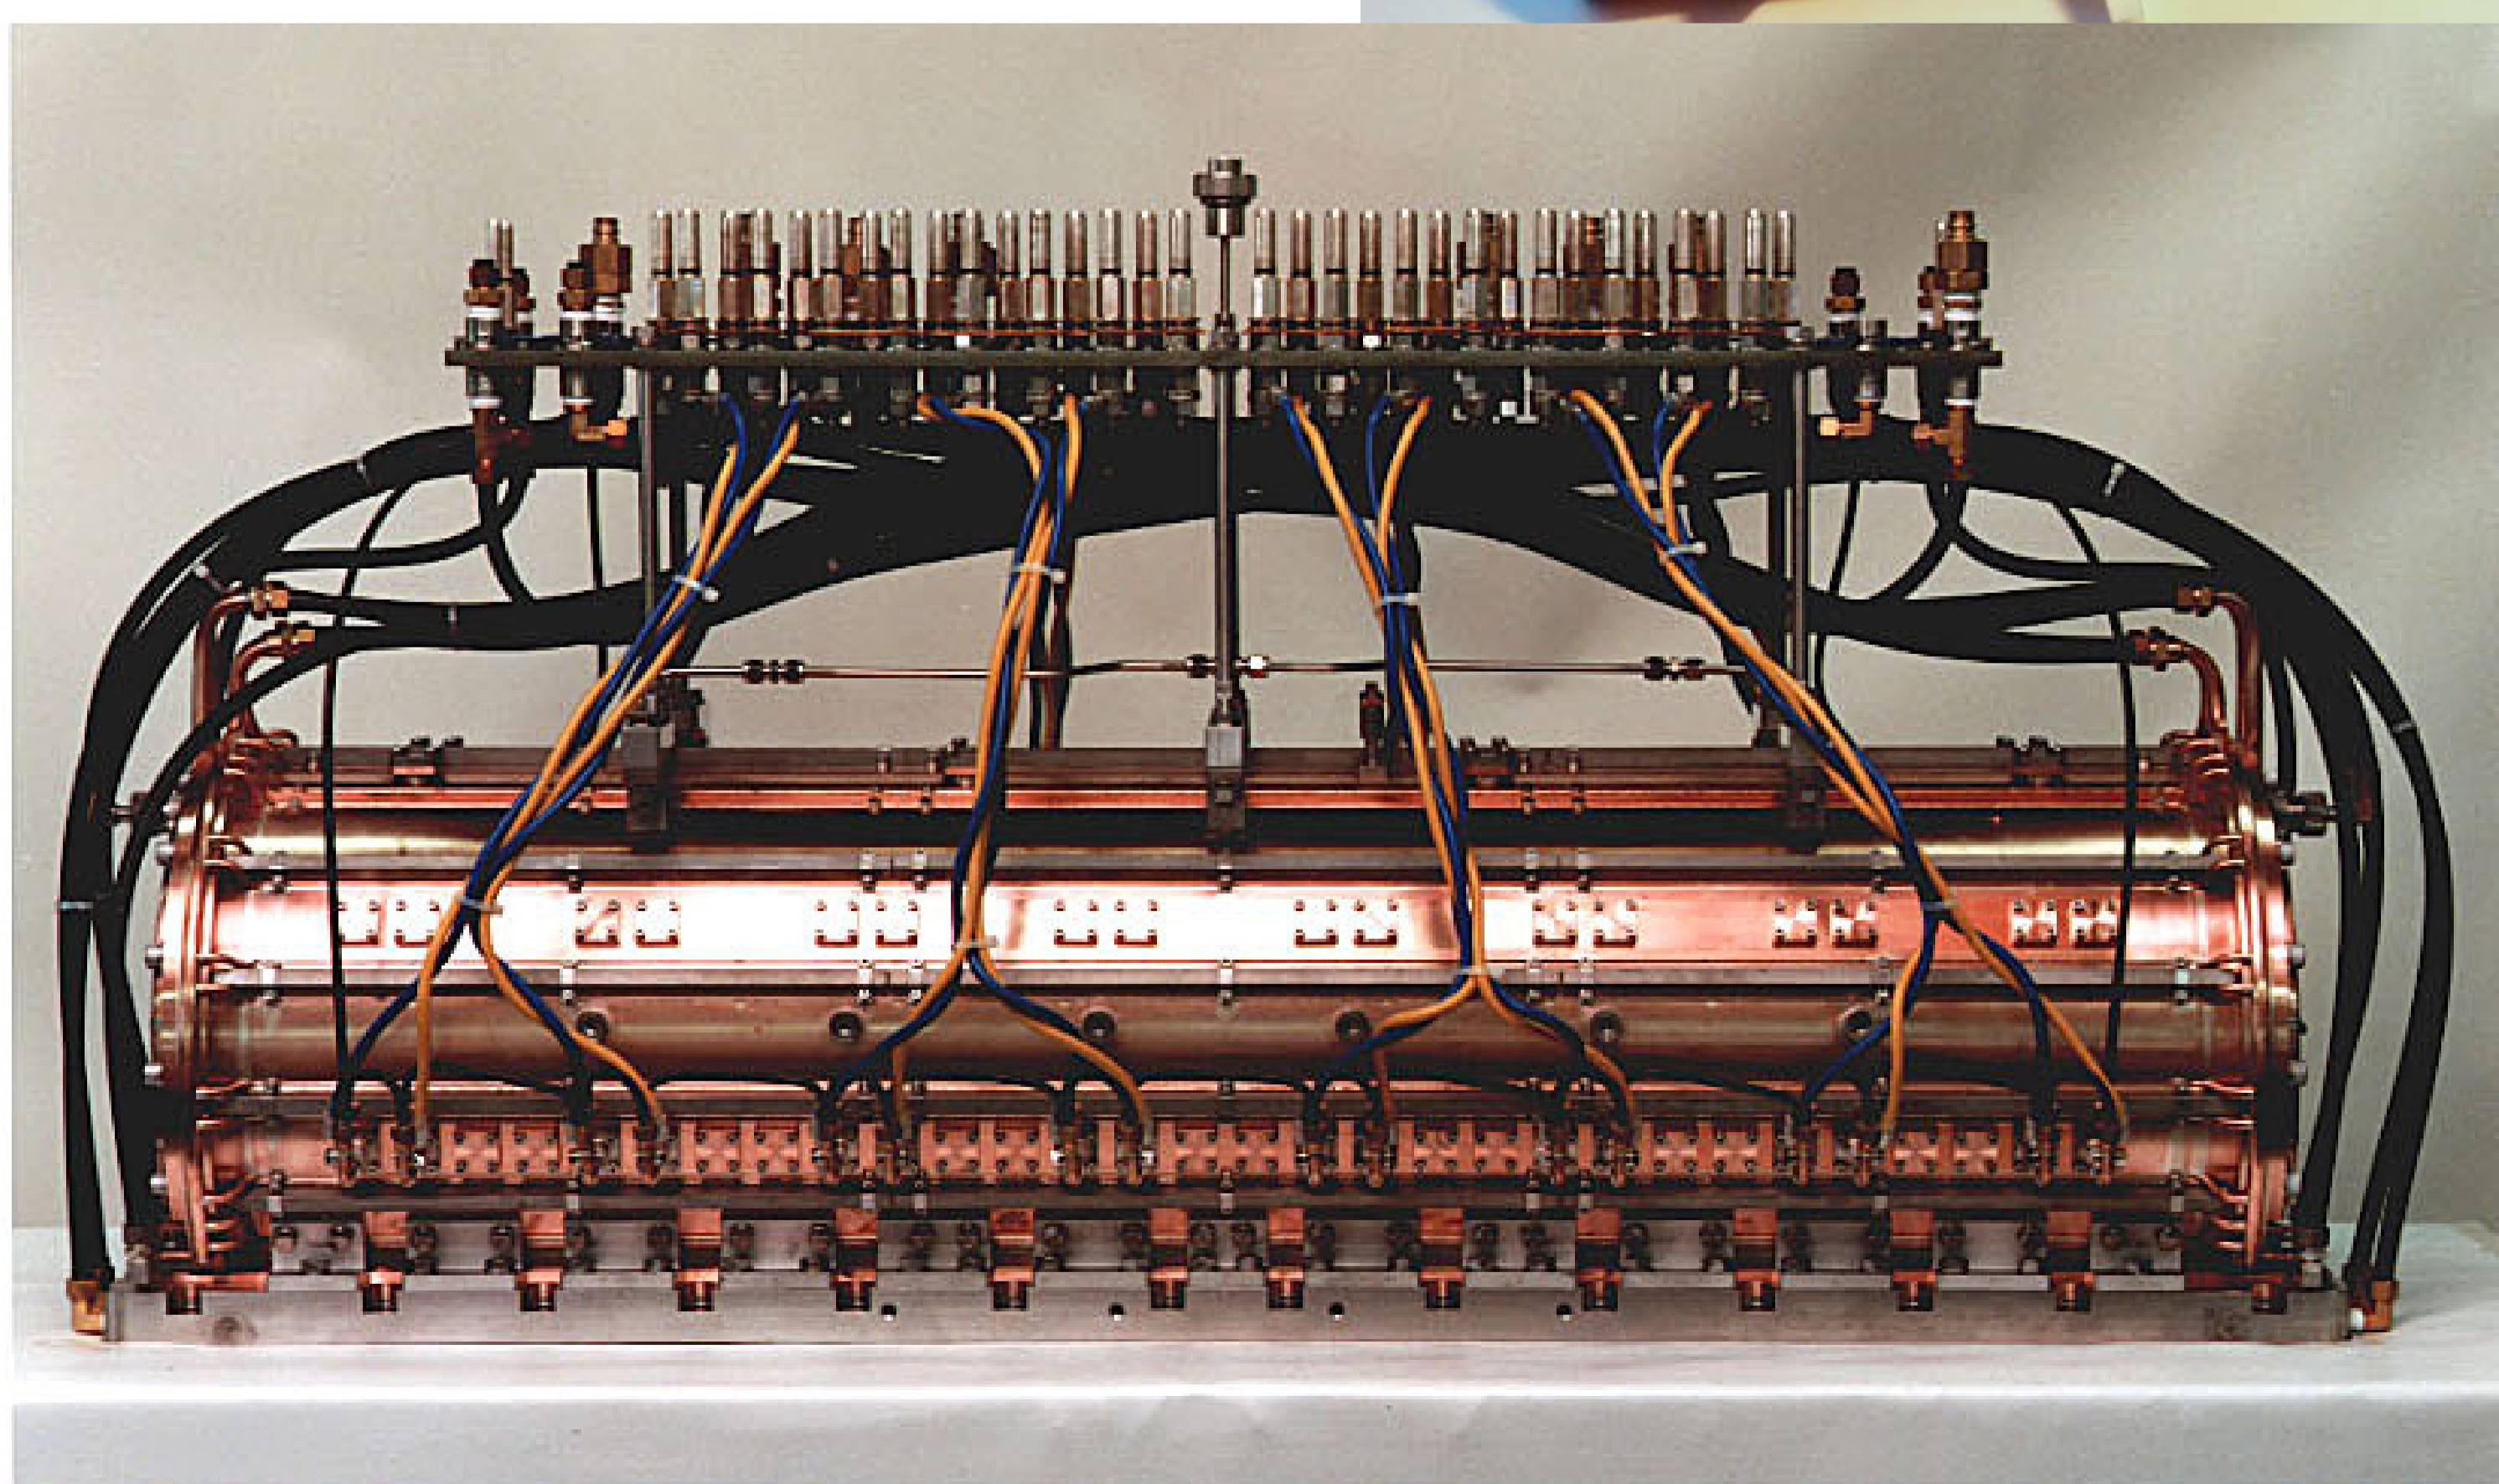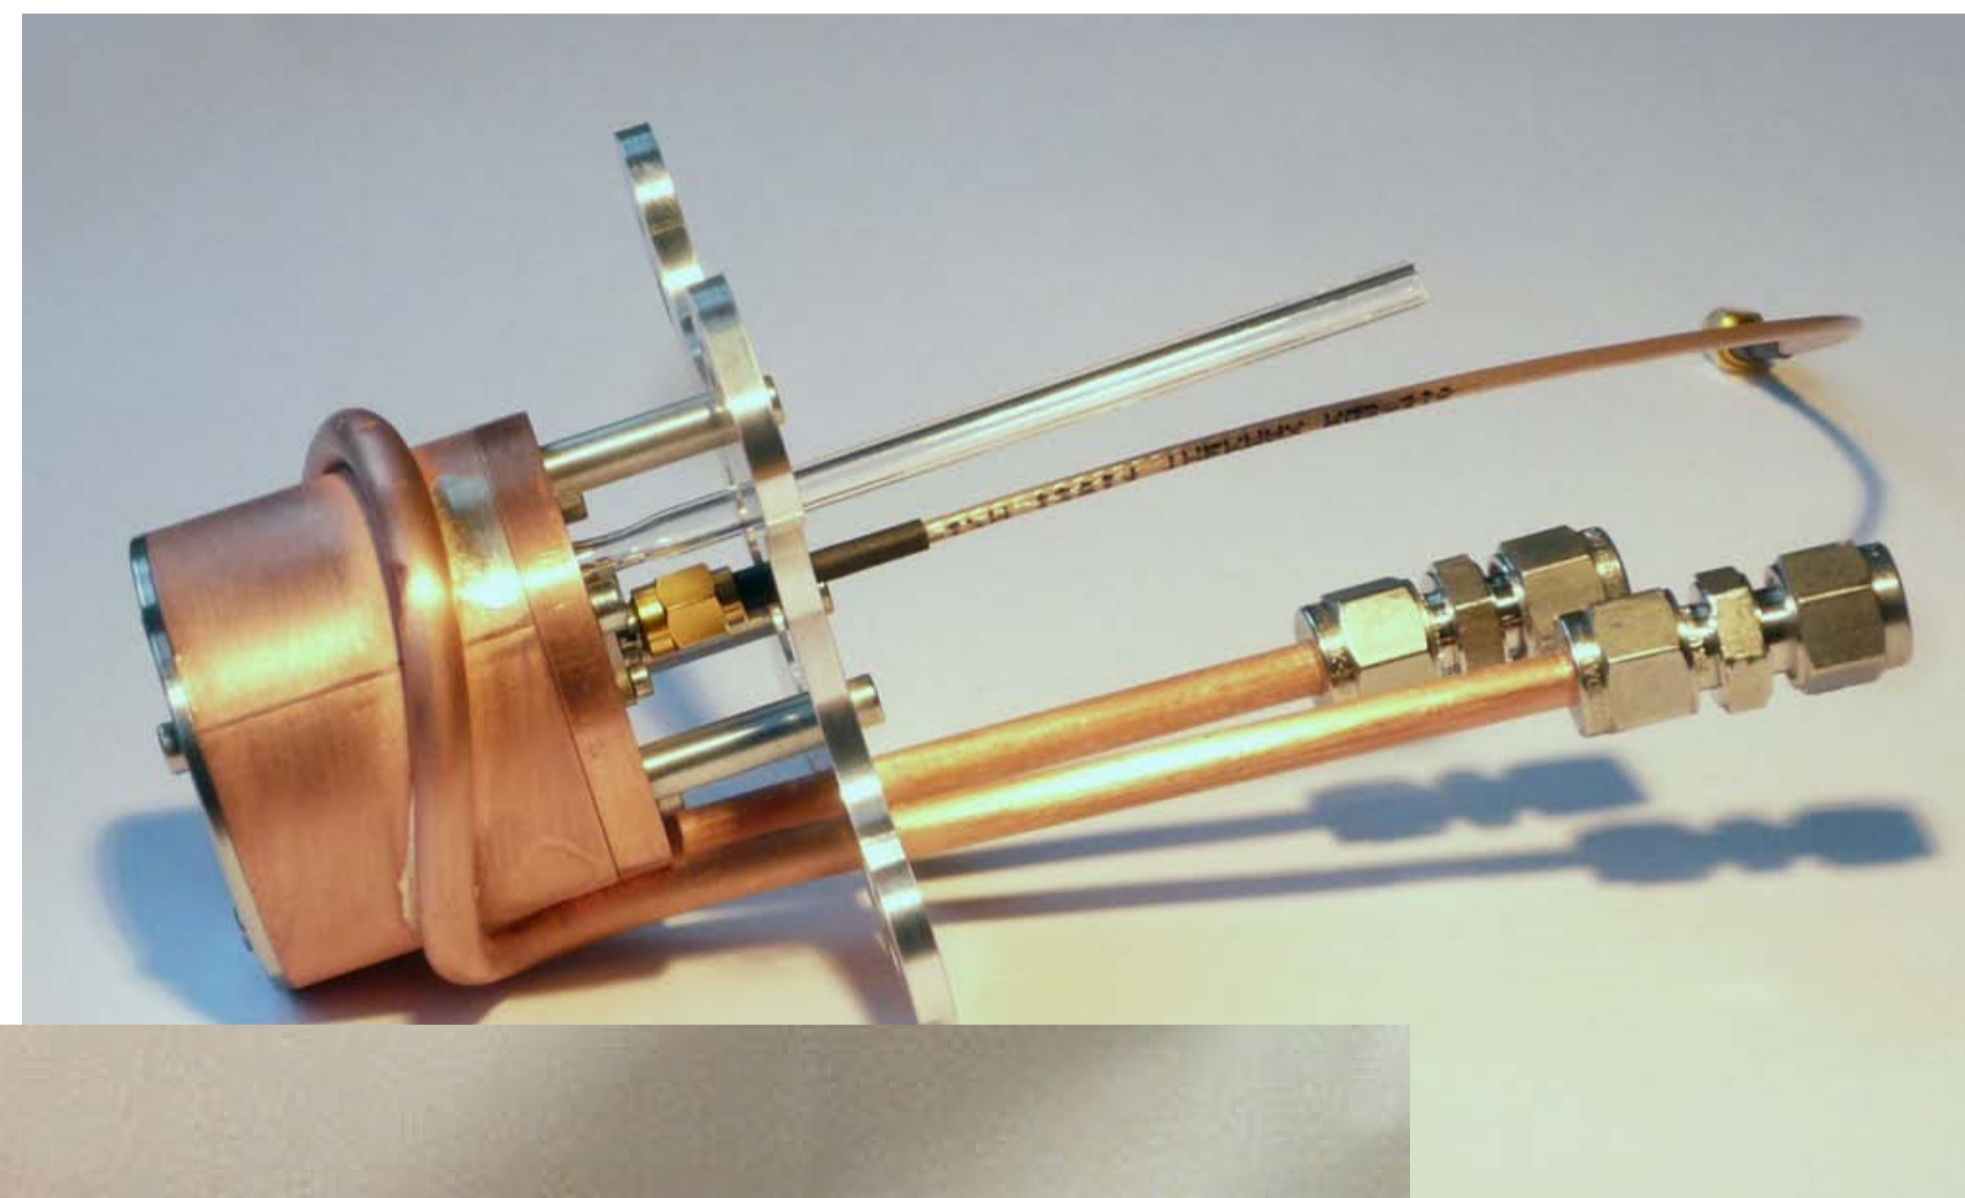


to the large
and impressive

4

An Ion?


An atom or molecule with a charge.
i.e. with the removal or addition of one or more electrons.

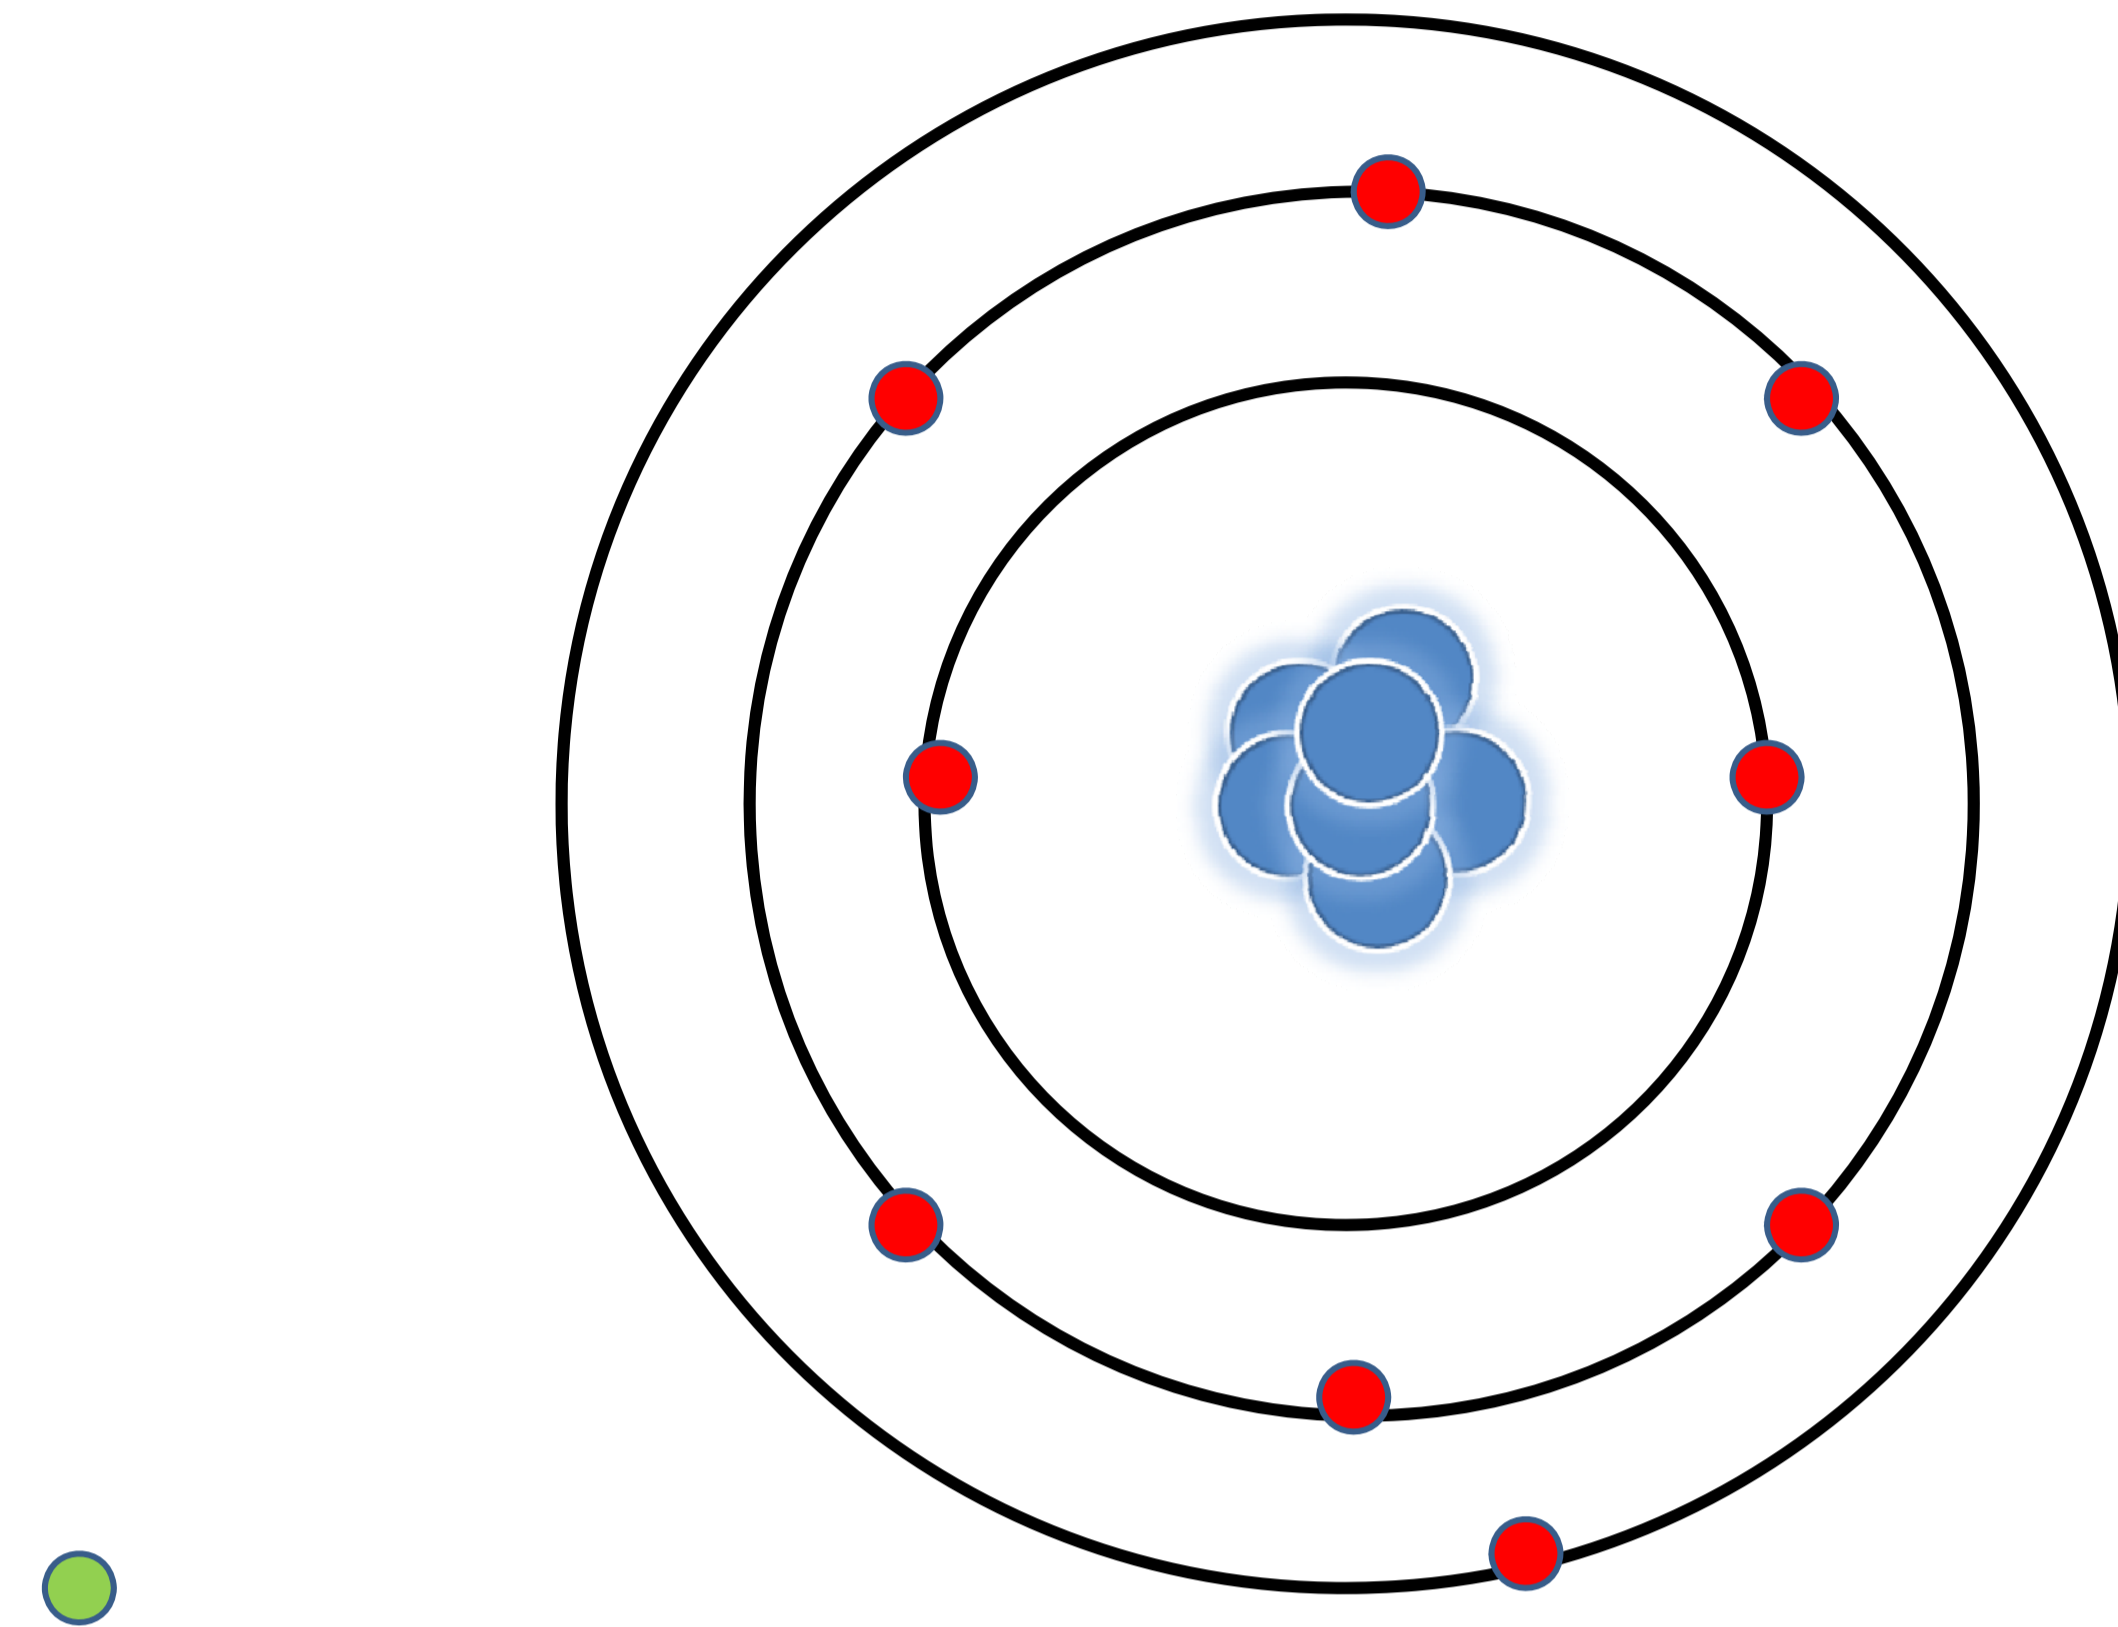

5

What is a source made of?

There is no single drawing of an ion source, such are the variations in their approaches. But typically.

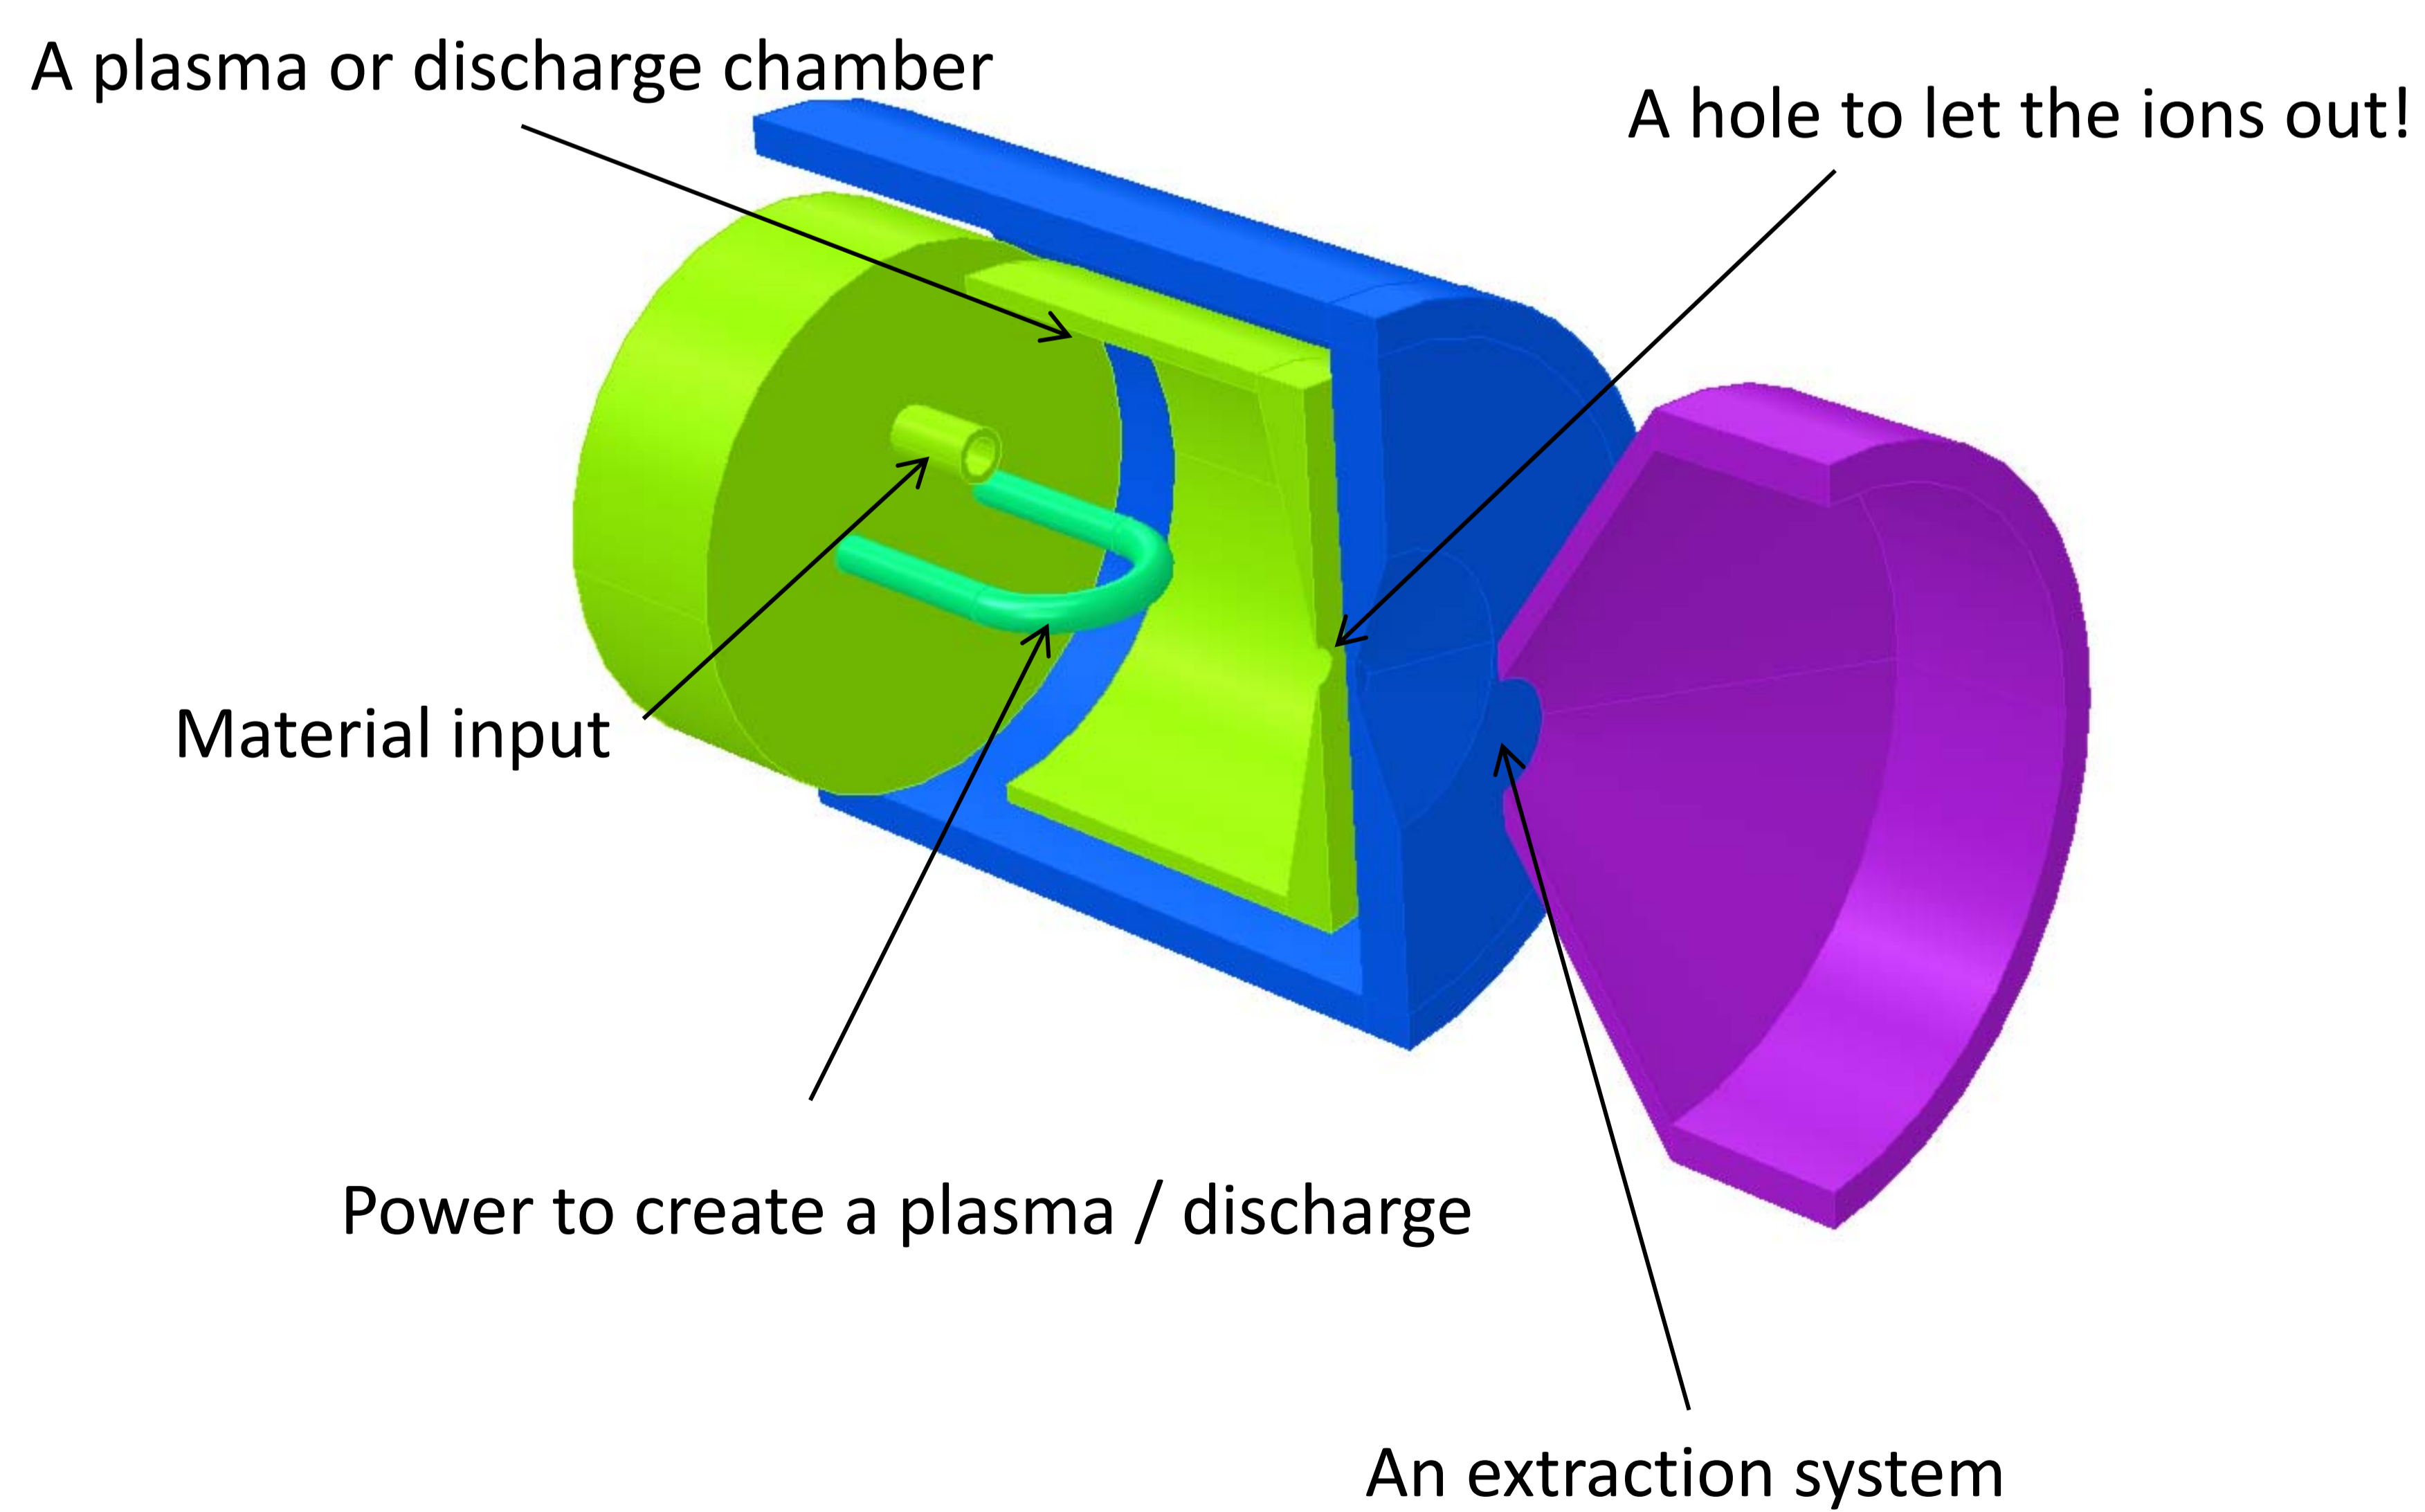

6

What Else Is Needed...

Power Source
Power Supplies / RF / Laser



CE

Vacuum Pumping



Cooling



Plasma diagnostics

Beam diagnostics



Interlocking +
Safety Systems



7

Particle Type

The most fundamental parameter of your source – End of story

Or is it?

Protons ... or H^- ... or H_2^+ , H_3^+ ...

C ... C^+ ... C^{n+}

Or CO^+

Does the user need a range of types, how often and quickly do they need to change...

And in the end the experiment might be more flexible ... Si might be negotiated to Ar...

8

Energy 1

 $^{20}\text{Ne}^{5+}$

100kV

Total ion energy after extraction	$E_{total} = qeV$	500keV
Energy per nucleon	$E/nucleon = qeV/A$	25.01keV
Defines a charge and mass independent velocity (if A is the real mass number)		

The above are normally quoted in eV

Extraction voltage	$E_{extraction} = V$	100kV
--------------------	----------------------	-------

9

Energy 2

Does the user have a specific energy in mind from the source, for a specific application (surface modification for example).

High Beam Energy Advantages

- Space Charge Reduced – Higher beam currents possible.
- Reduces energy spread ratio ($\Delta E/E$).
- Reduces the geometrical emittance => smaller apertures?
- Higher velocity makes it easier to inject into an RF accelerator (e.g. DTL).

High Beam Energy Disadvantages

- Technically Difficult.
- Higher risk of sparking
- Longer RFQ (input cells become longer)
- Higher fields for beam devices.
- Higher Energy = Higher Beam Power => consequences for beam intercepting devices.

10

Intensity

$$I_{electric_current} = \frac{qeN_{ions}}{t}$$

$$I_{particle_current} = \frac{eN_{ions}}{t} = \frac{I_{electrical_current}}{q}$$

Beam intensity from source (and Linacs) are almost always quoted in terms of the beam current.

Multiple charge state sources can be quoted in terms of the particle current, which eases comparison of sources of different charge states.

It is usual to give the beam peak current for a pulses source, along with its time structure.

11

Repetition Rate

$$\text{Repetition Rate} = \frac{1}{T_{rep}}$$

$$\text{Pulse length} = T_p$$

$$\text{Duty factor} = \frac{T_p}{T_{rep}}$$

Beam currents are usually quoted as the average over the pulse.

(But can sometimes be an average – if in doubt, ask!)

12

Space Charge


The beam is repulsed by its own space charge.

Beams can be compared through several definitions:

$$J_{CL} = \frac{4}{9} \epsilon_0 \sqrt{\frac{2qe}{m}} \cdot \frac{U_d^{3/2}}{d^2}$$

- Child-Langmuir limit comes from the maximum current density of electrons that can be extracted from an (infinite) plane surface, to an anode distance d away.

- Correcting for the ion mass, the same formula indicates the voltage and distance necessary for your ion source.

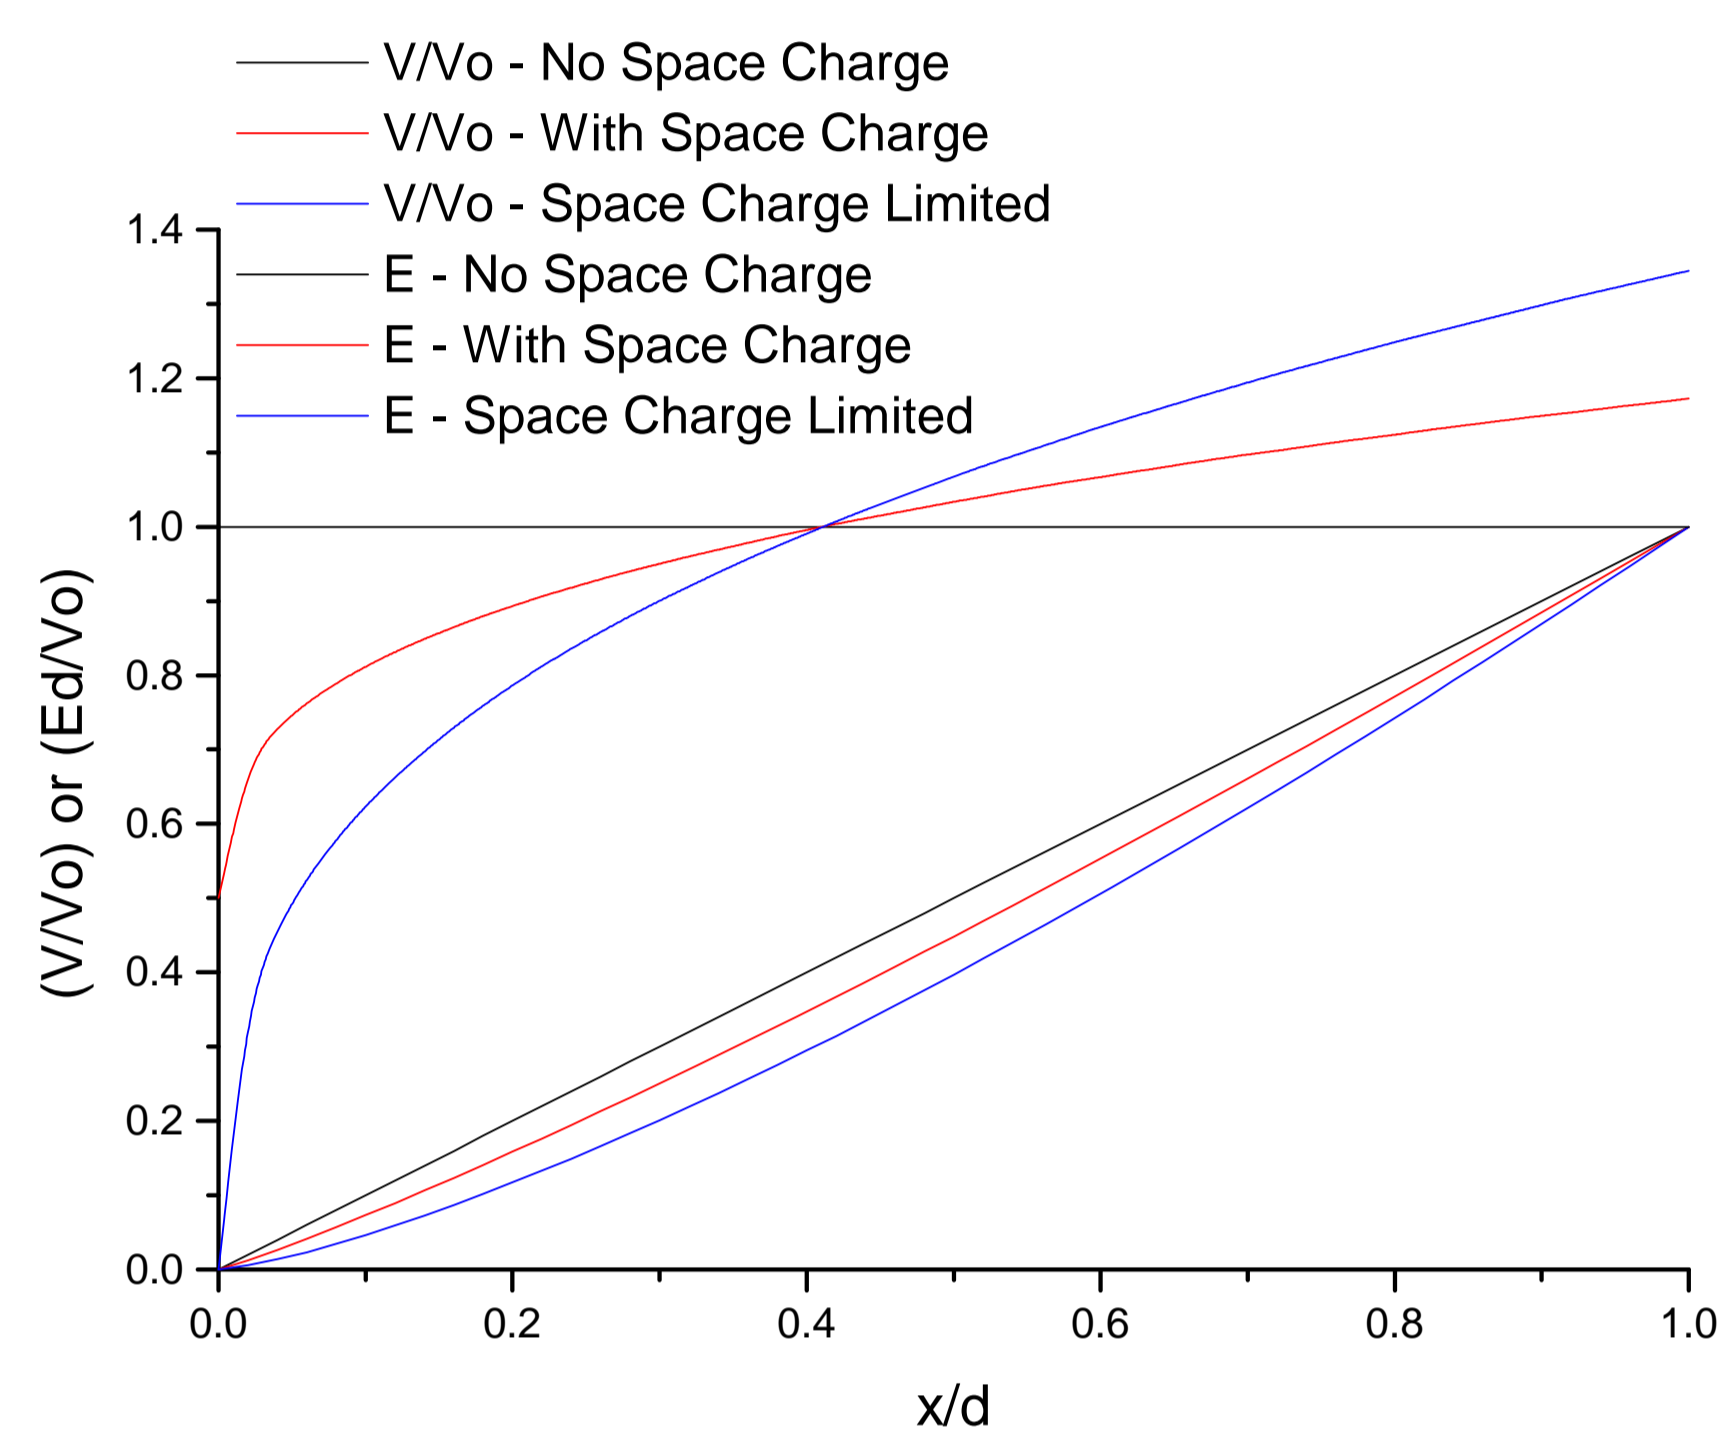

13

Space Charge

- The propagation of an electron beams due to space charge is only dependent on the beam perveance.

$$P = \frac{I}{U^{3/2}}$$

- For ions we need to take into account the ion mass.
- Therefore the perveance is “normalised” using the Child-Lagmuir constant ... giving rise the poissance

$$\Pi = \frac{I}{\frac{4\epsilon_0}{9} \sqrt{\frac{2qe}{m}} \cdot \frac{a}{b} U^{3/2}}$$

$\frac{a}{b}$ Ratio of the beam width to height

- If $\Pi = 1$ you already have a beam with significant space charge!


14

Space Charge - Compensation

Nature has been kind to low energy beam transport of high intensity beams.
 The particle beams can ionize the residual gas left in the beam line.
 The resulting electrons and ions are contained by the potential of the beam.
 The trapped particles suppress the beams own space charge, allowing it to be more easily transported.

15

Emittance 1

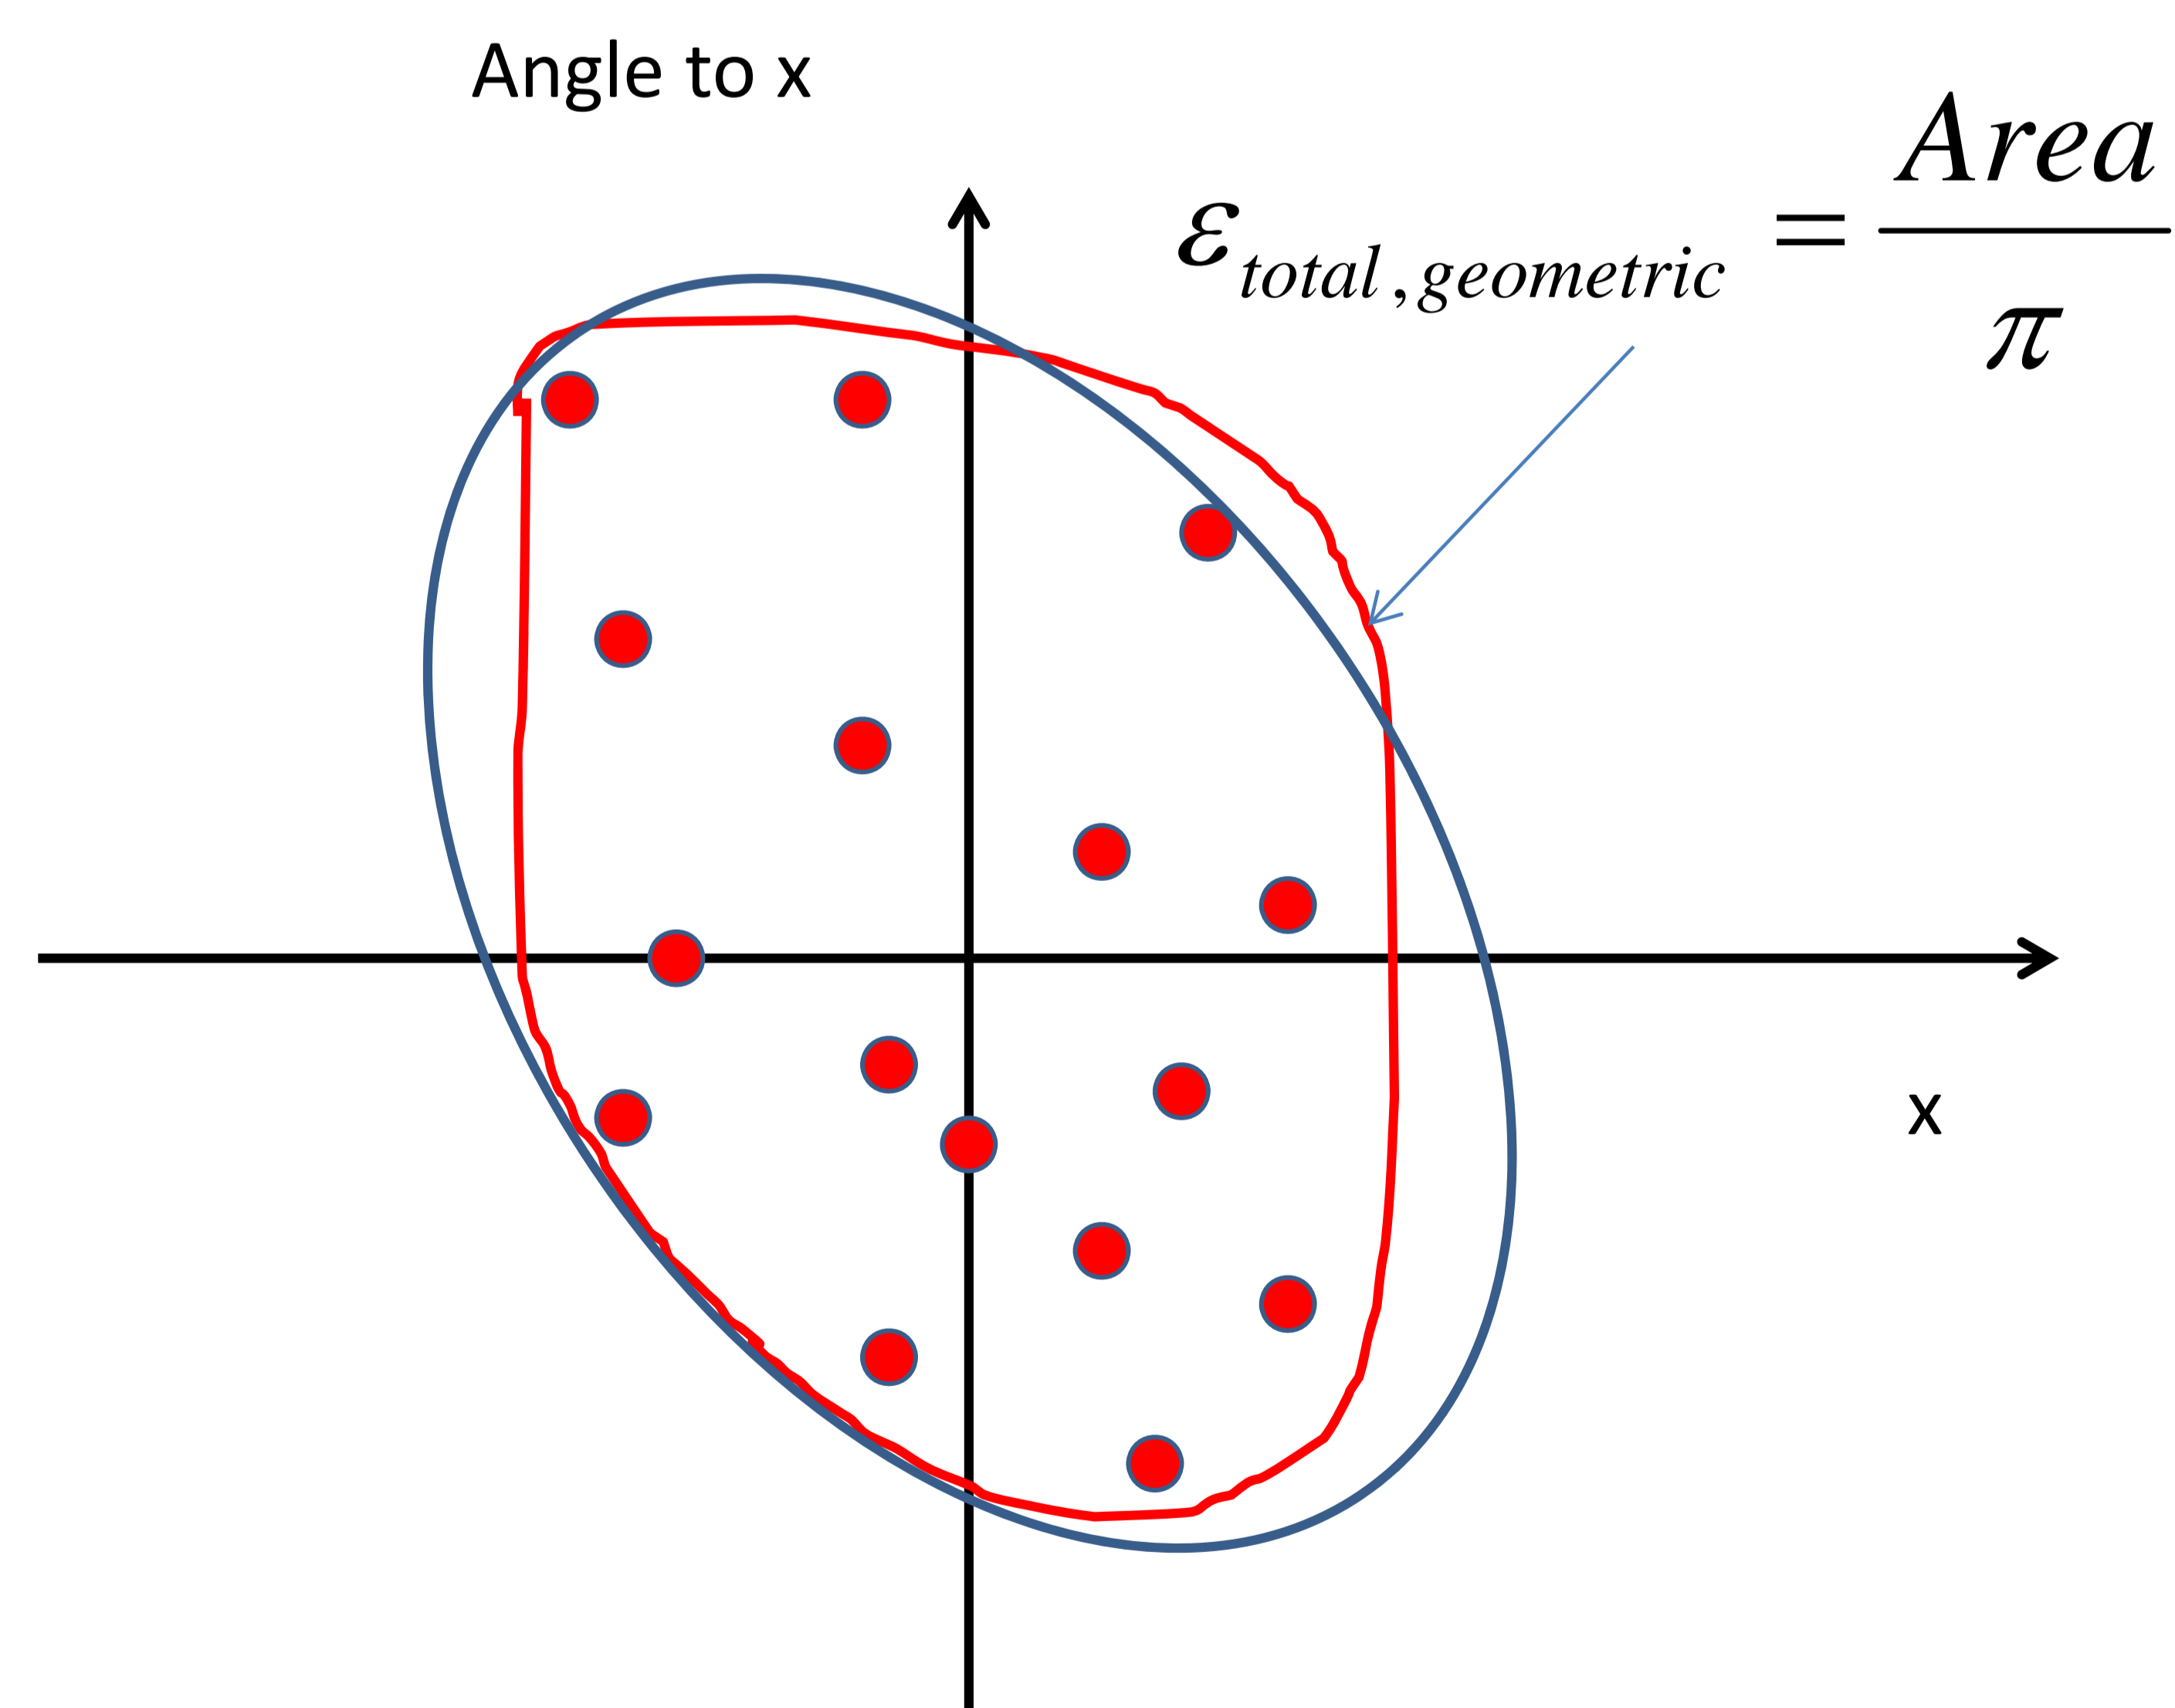


If you see 100π mm.mrad, the AREA is 100π , and the emittance is 100

16

Emittance 1b

Even clever people continue to add to the confusion...

CAS proceedings – Transverse Beam Dynamics – E.J. Wilson

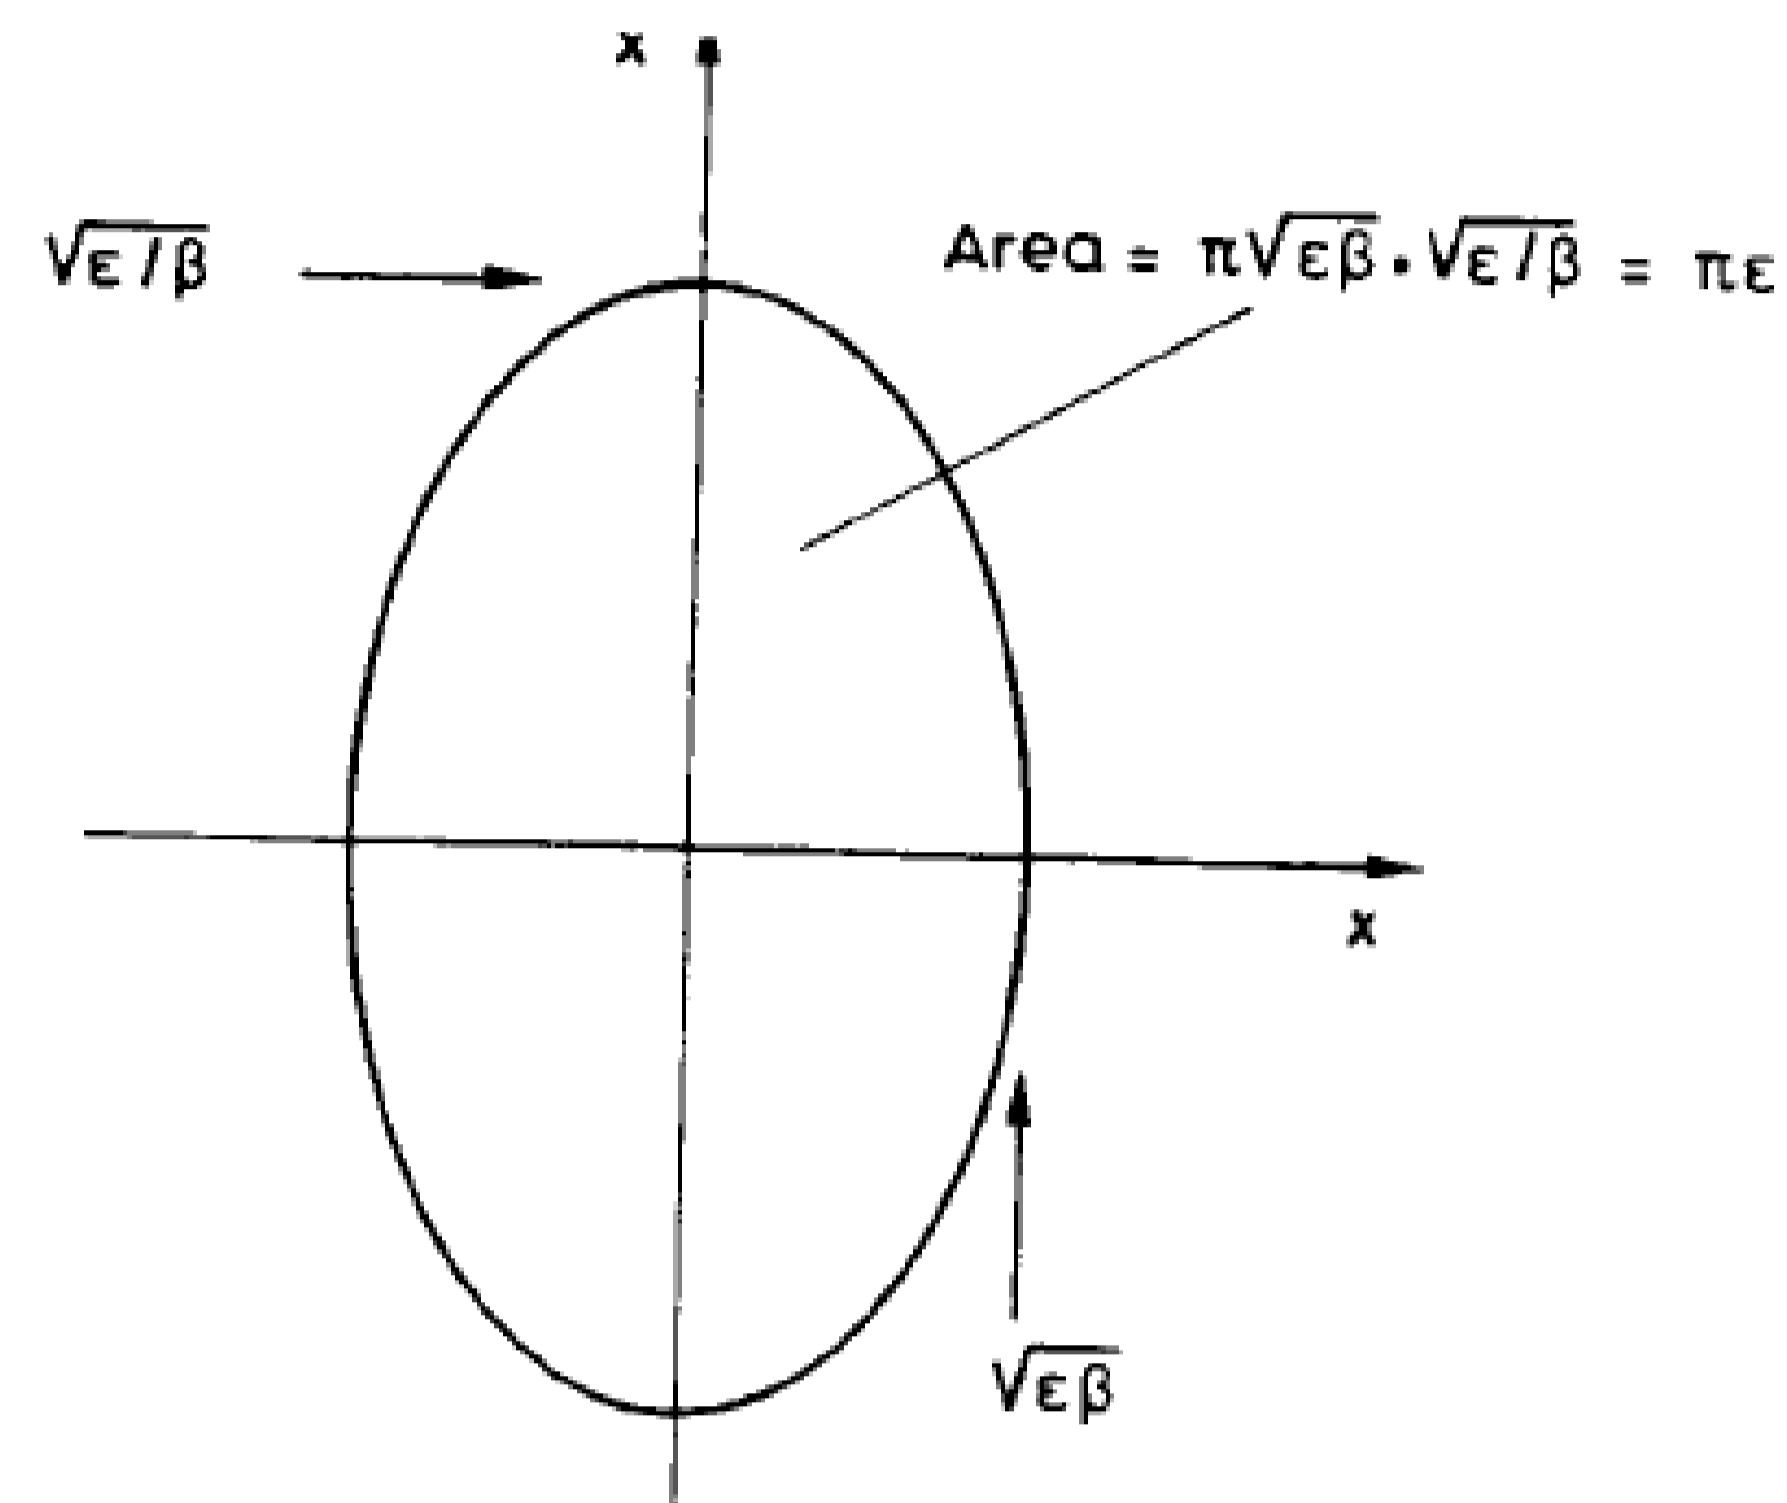

The area within the contour is proportional to the emittance of the beam. At constant energy we express this as the area $\epsilon = \int y' dy$ in units of $\pi \cdot \text{mm} \cdot \text{milliradians}$. We have shown

17

Emittance 2

The beam emittance requirement can come for the use:

- In a collider it leads to the luminosity.
- Smallest spot size for particle beam at and experiment target (or beam diagnostic).
- In an accelerator, it defines the aperture requirement (which can increase the size and cost of quadrupoles, RF cavities...)
- Definition of the RMS emittance (geometric).

$$\epsilon_{rms} = \frac{1}{N^2} \left\{ N \sum x^2 - (\sum x)^2 \left[N \sum x'^2 - (\sum x')^2 \right] - [N \sum xx' - \sum x \sum x']^2 \right\}^{1/2}$$

N : Total number of particles

$$\beta_x \epsilon_{rms} = \langle x^2 \rangle \quad \alpha_x \epsilon_{rms} = \langle xx' \rangle \quad \gamma_x \epsilon_{rms} = \langle x'^2 \rangle$$

Twiss parameter – for calculating beam transport
Note: Subscripted are Twiss, not relativistic

$$\epsilon_{normalised} = \beta \gamma \epsilon_{geometric}$$

Normalised emittance conserved with acceleration

$$\epsilon_{4rms} = 4 \epsilon_{rms} = \epsilon_{2\sigma}$$

and yet another definition trap...

18

Emittance 3

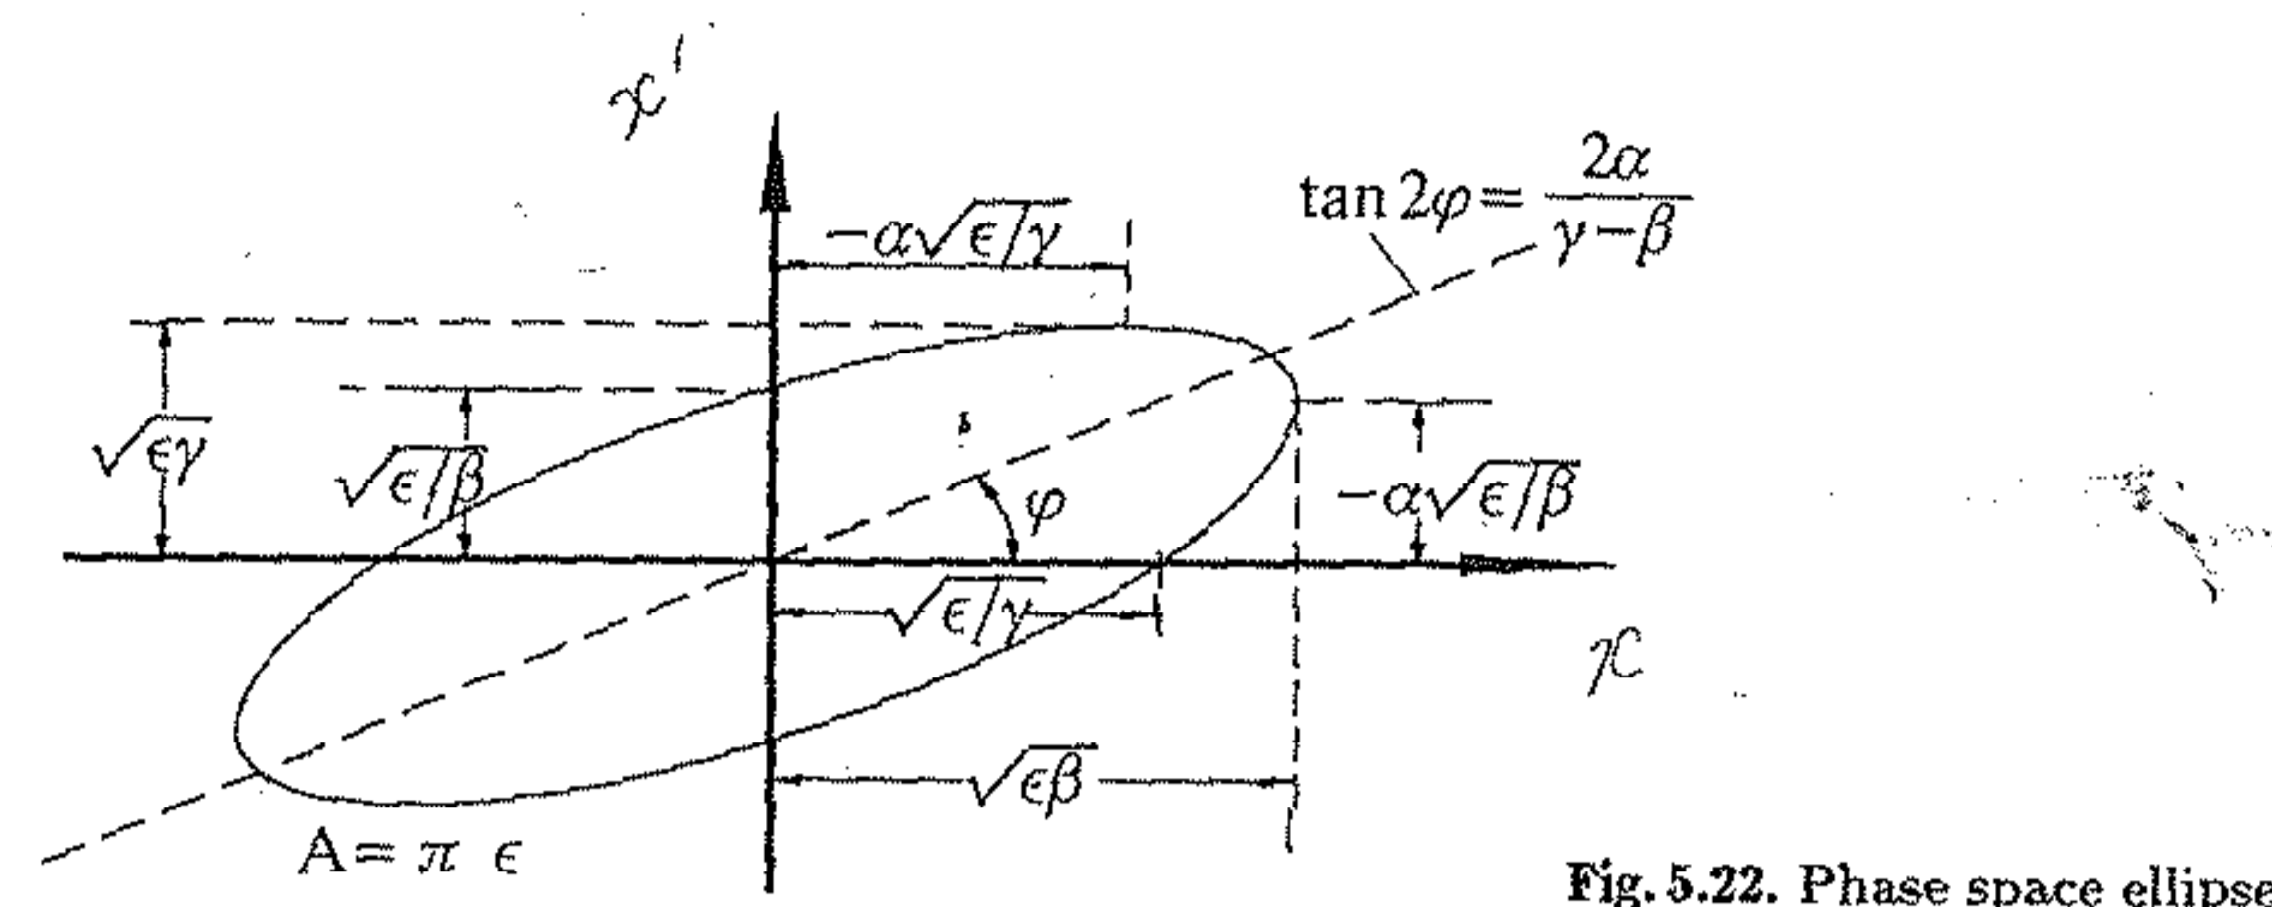


Fig. 5.22. Phase space ellipse

152

$$\gamma x^2 + 2\alpha x x' + \beta x'^2 = \varepsilon \quad \text{Emittance ellipse}$$

For plasma sources the ion temperature and source outlet aperture give the minimum emittance.

$$\varepsilon_n = \beta \gamma \sigma_x \sigma_{x'} \quad \varepsilon_n = \frac{\gamma (\beta m_0 c \sigma_{x'}) \sigma_x}{m_0 c} \quad \varepsilon_{th} = r_{out} \sqrt{\frac{2E_{th,ion}}{3m_0 c^2}}$$

Small apertures and low (ion) temperature plasmas are good.

19

Brightness

$$B_b = \frac{I_b}{\pi^2 \varepsilon_x \varepsilon_y}$$

The beam brightness is a measure of the intensity per emittance in both transverse planes,.

Considering all the difference in emittance definition, and almost universal inconsistency in the pre-factor used for calculating brightness means it is rarely quoted.

20

Material Efficiency

The conversion efficiency from atom to ion:

$$\eta = \frac{N_{ions}}{N_{atoms}}$$

There can be several reasons why efficiency is important:

- The raw material is expensive, e.g. $^{208}\text{Pb} \sim 1\text{k}\$/\text{gramme}$, $^{130}\text{Xe} \sim 7\text{k}\$/\text{litre}$
- The atoms are limited (e.g. radioactive atoms from a target).
- The raw material is dangerous or polluting (e.g. U).

21

Beam Purity

For some applications, the minimization of beam impurities is very important e.g.:

- Medical applications.
- Experiments requiring high purity beams.

$$\kappa = \frac{N_{ions}}{N_{beam}}$$

Some source types can already minimize contamination, e.g. selective ionization with lasers.

The beam purity requirements may not be possibly using the source alone.

It can be further improved by using:

- Electro-static and magnetic spectrometers (and combined in Wein filters)
- RF acceleration (will only accept a narrow band of A/q values)
- Stripper foils (producing charge states out of reach of contaminants, and breaking up contaminant molecules).

22

Operating Pressure

Pressure inside ion sources can vary dramatically depending on the type.

CERN's REX EBIS operates at 10^{-10} mbar (to avoid contamination of rest gas ions over the radioactive beam, and reduces charge exchange with highly charged ions).

High intensity single charged ion sources can run up to 1mbar.

High pressures in the source can lead to high pressures in the beam transfer:

- > Recombination or stripping losses.
- > Breakdowns in extraction system and other accelerating fields.

23

High Charge States – Ionization Potential


High charge states can also be produced from ion sources.

They require sufficient electron energy for ionization & sufficient time to be bred.

Ionization potentials have been calculated for all states of all elements:

Carlson, Nestor, Wasserman and McDowell,

[http://dx.doi.org/10.1016/S0092-640X\(70\)80005-5](http://dx.doi.org/10.1016/S0092-640X(70)80005-5)

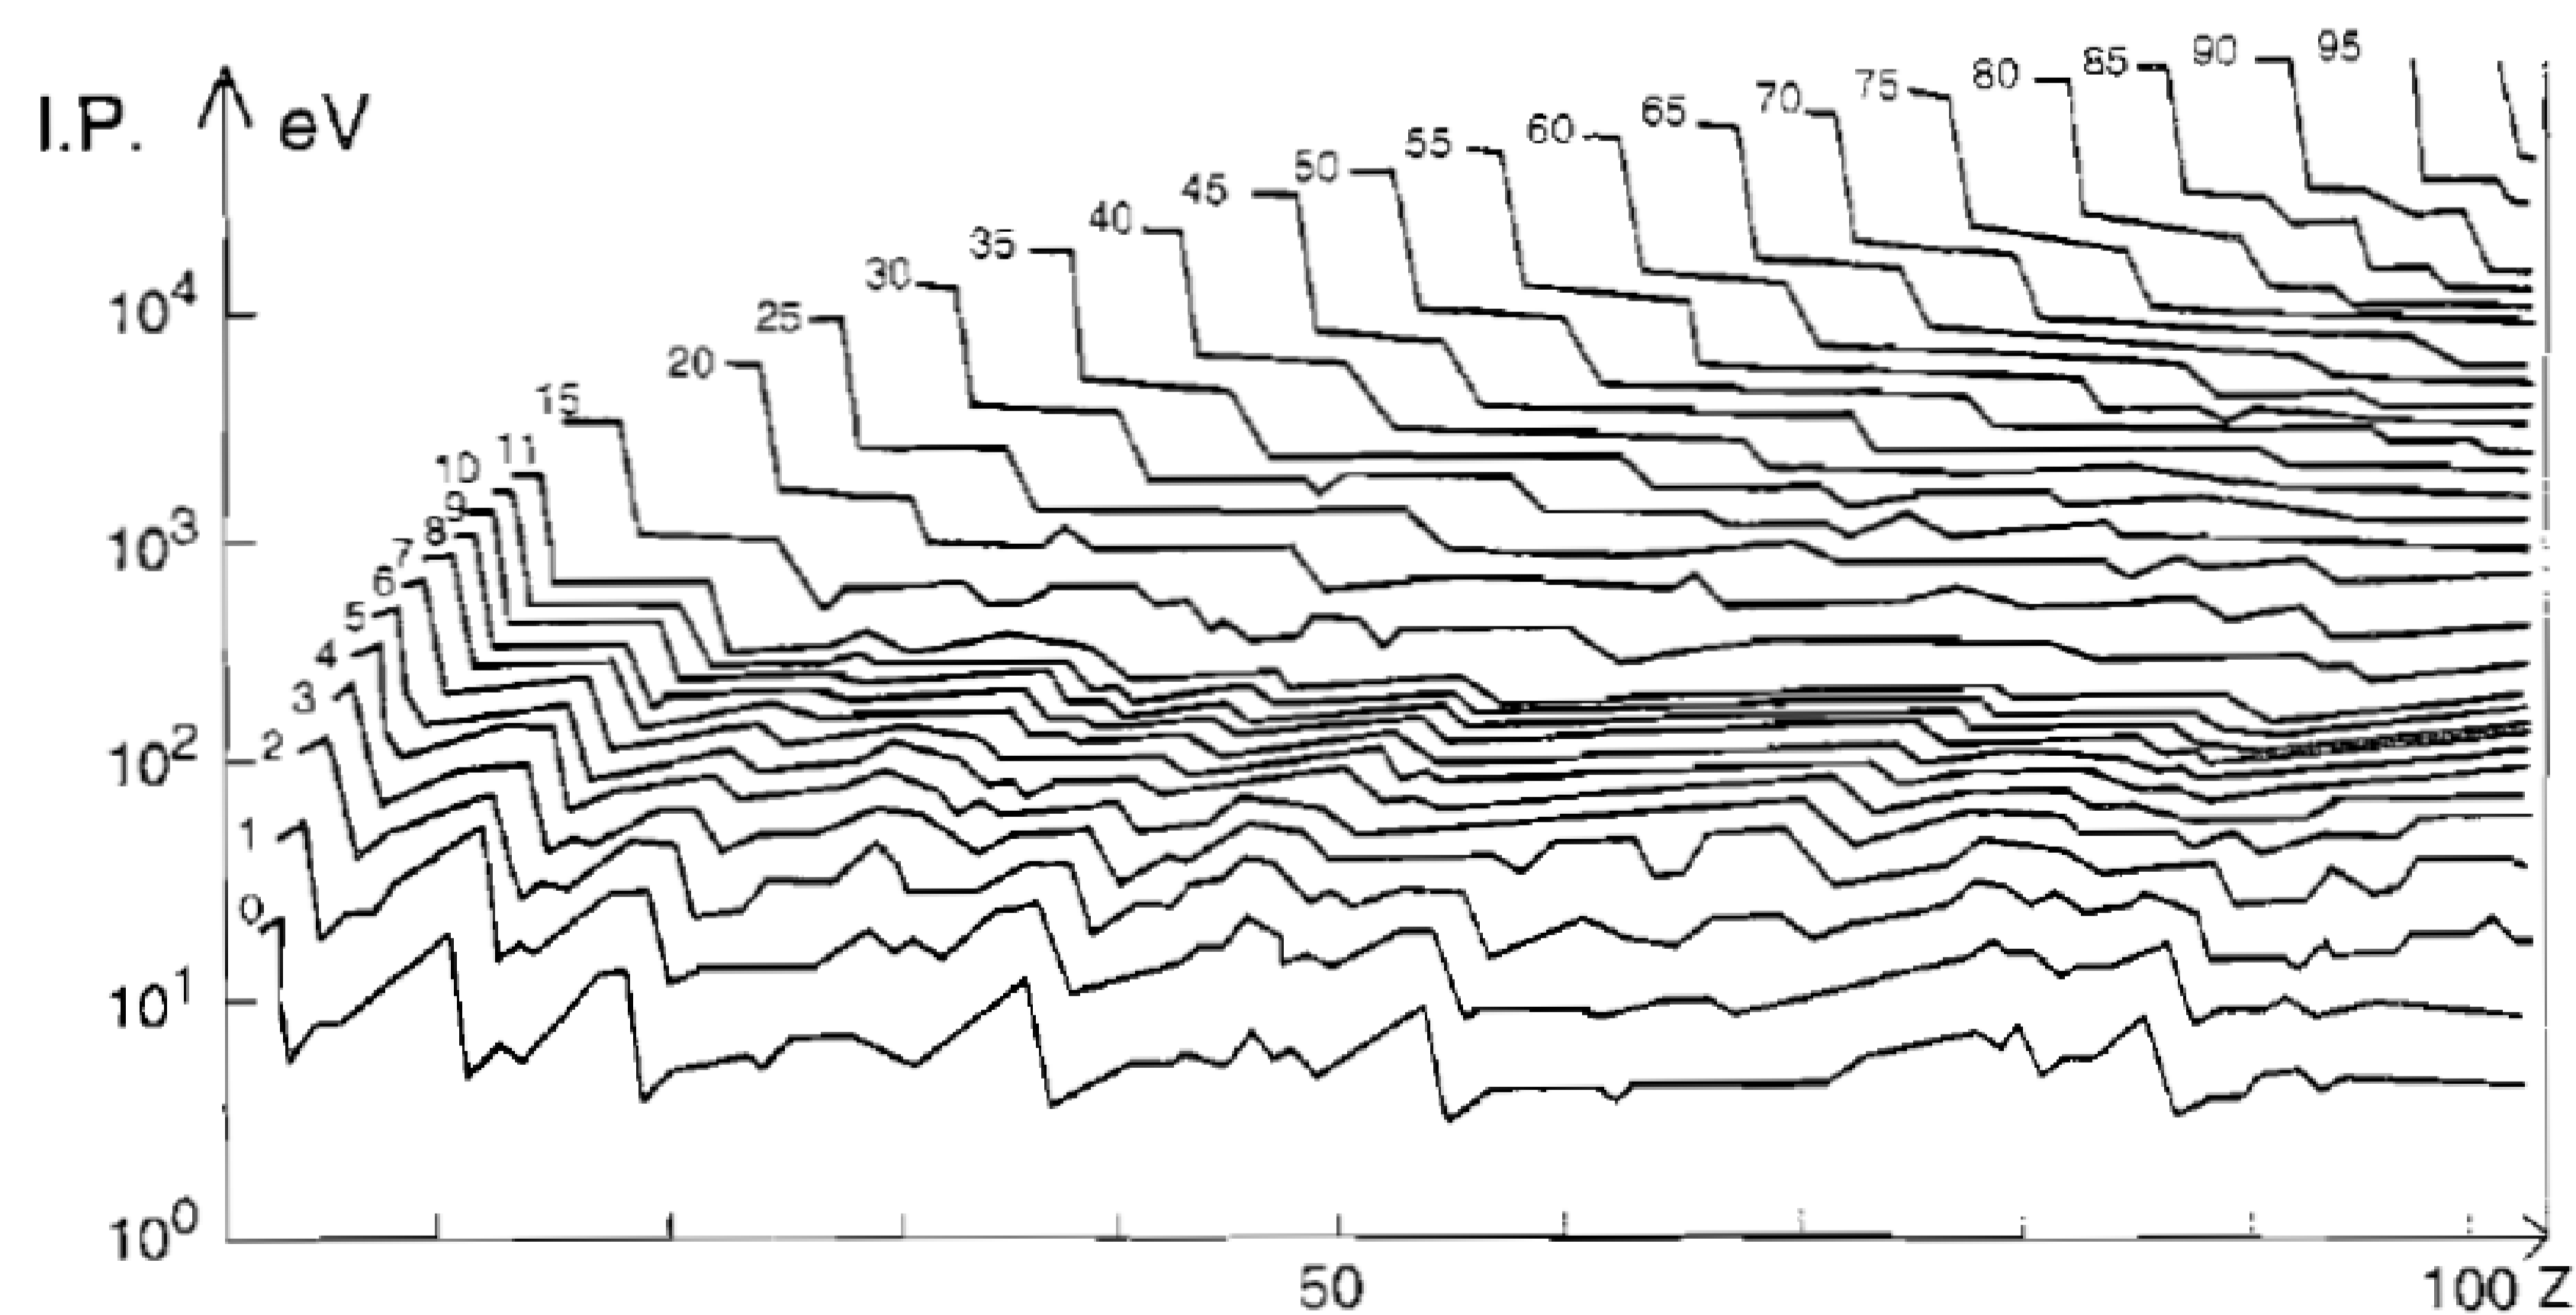


24

High Charge States – Confinement Time

Ions need to be confined for a sufficient time to undergo enough collisions to reach the required charge state.

$$\text{confinement time} = n_e \tau_{ion}$$

High electron density and/or long confinement time.

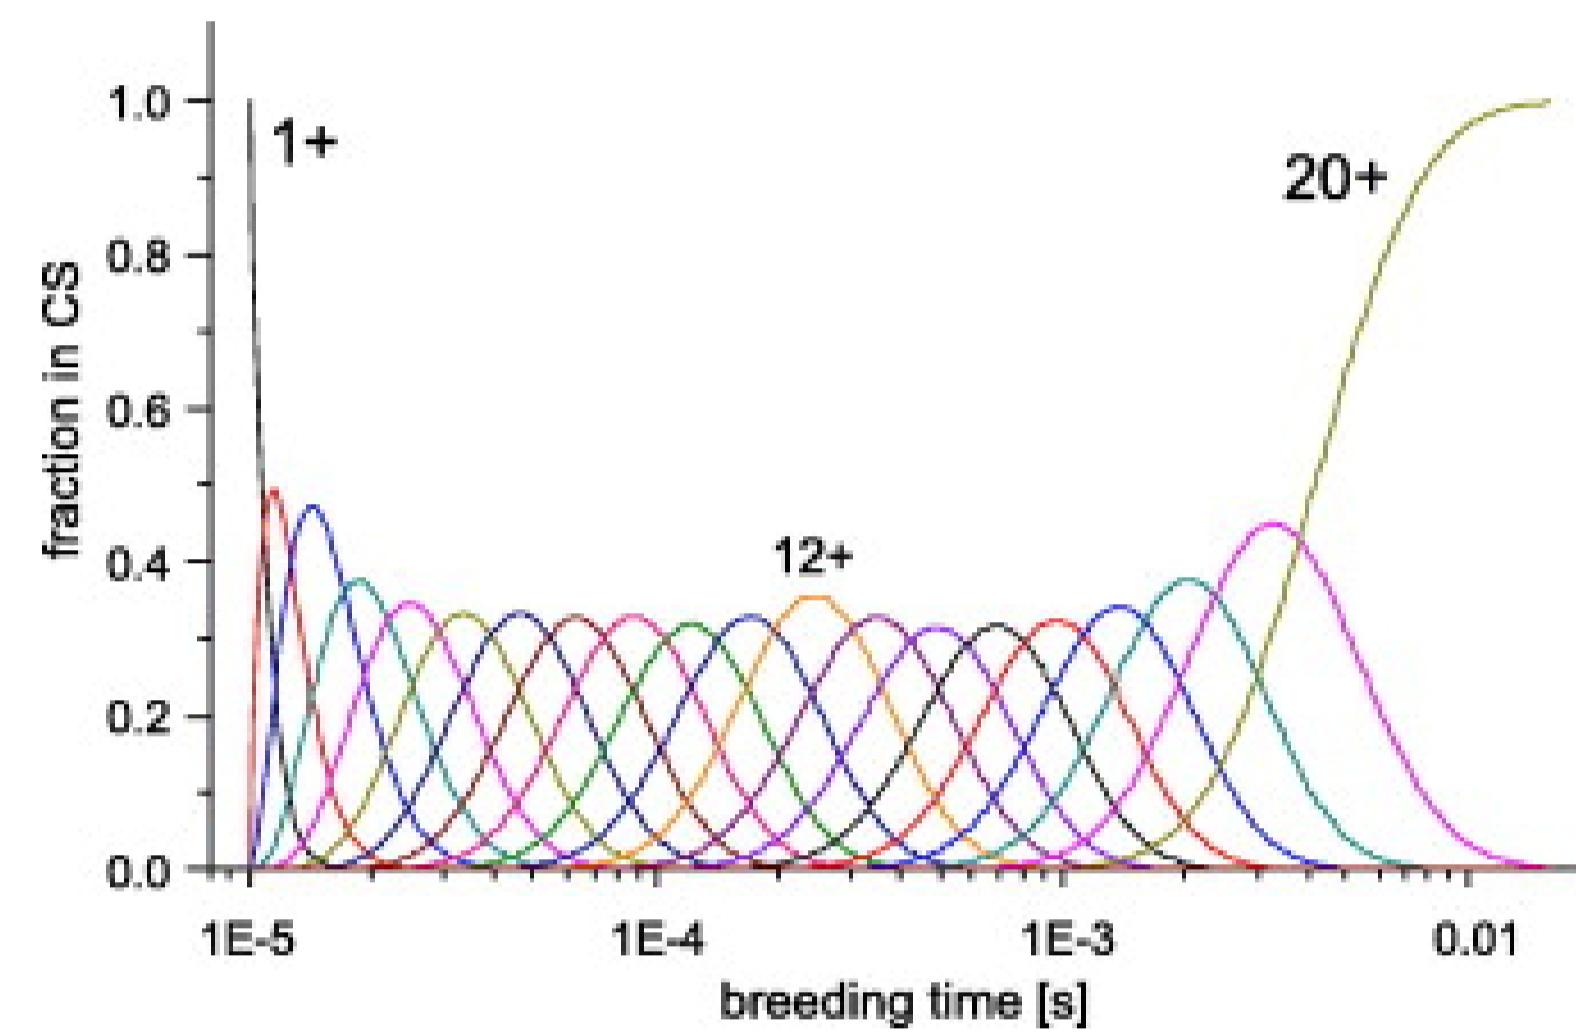

Charge state evolution for Ti⁺-ions in an EBIT with a current density of 10⁴ A/cm² and an electron energy of 5 keV.

25

Reliability 1

Any stop of the beam can possibly be an issue, depending on the application.

- A day without beam to the LHC is frustrating.
- But cancelling a cancer patients treatment is worse.

Faults generally fall into the following classes:

- Intermittent – beam performance changes “dramatically” but returns without intervention. (Seconds of downtime).
- Source sub-systems switch off due to interlocks/protection circuits, requiring a resetting. (Minutes of downtime).
- Sub system breaks outside the vacuum, not affecting the vacuum or thermal stability. (Minutes to hours).
- Sub system inside the vacuum, or heating system fails (hours).

The reliability can be characterized by:

Uptime / Availability

Mean time between failures (MTBF)

Mean Time To Repair (MTTR)

26

Reliability 2

In many cases the ion sources are an important contributor to the overall reliability of the installation (or more bluntly, the source is often a big cause of downtime).

Improving source reliability is often a pre-occupation of the source engineer.

All sorts of improvements can be made:

- Improving EMI sensitivity to avoid trips due to breakdowns.
- Using UPS to reduce sensitivity to power cuts.
- Keeping installations clean (inside and out).
- Keeping spares – maintaining and testing them.
- Cold-spare sources (fully built, tested and ready for installation).
- Hot-spare sources (2 installed sources, with a switch-yard).

27

Stability

28

Space


Constraints on the available space for a source can strongly influence the design.

Examples:


Internal sources in cyclotrons.

Compact target ion sources (RIBS facilities)

There is often a big difference between the paper concept of a source...

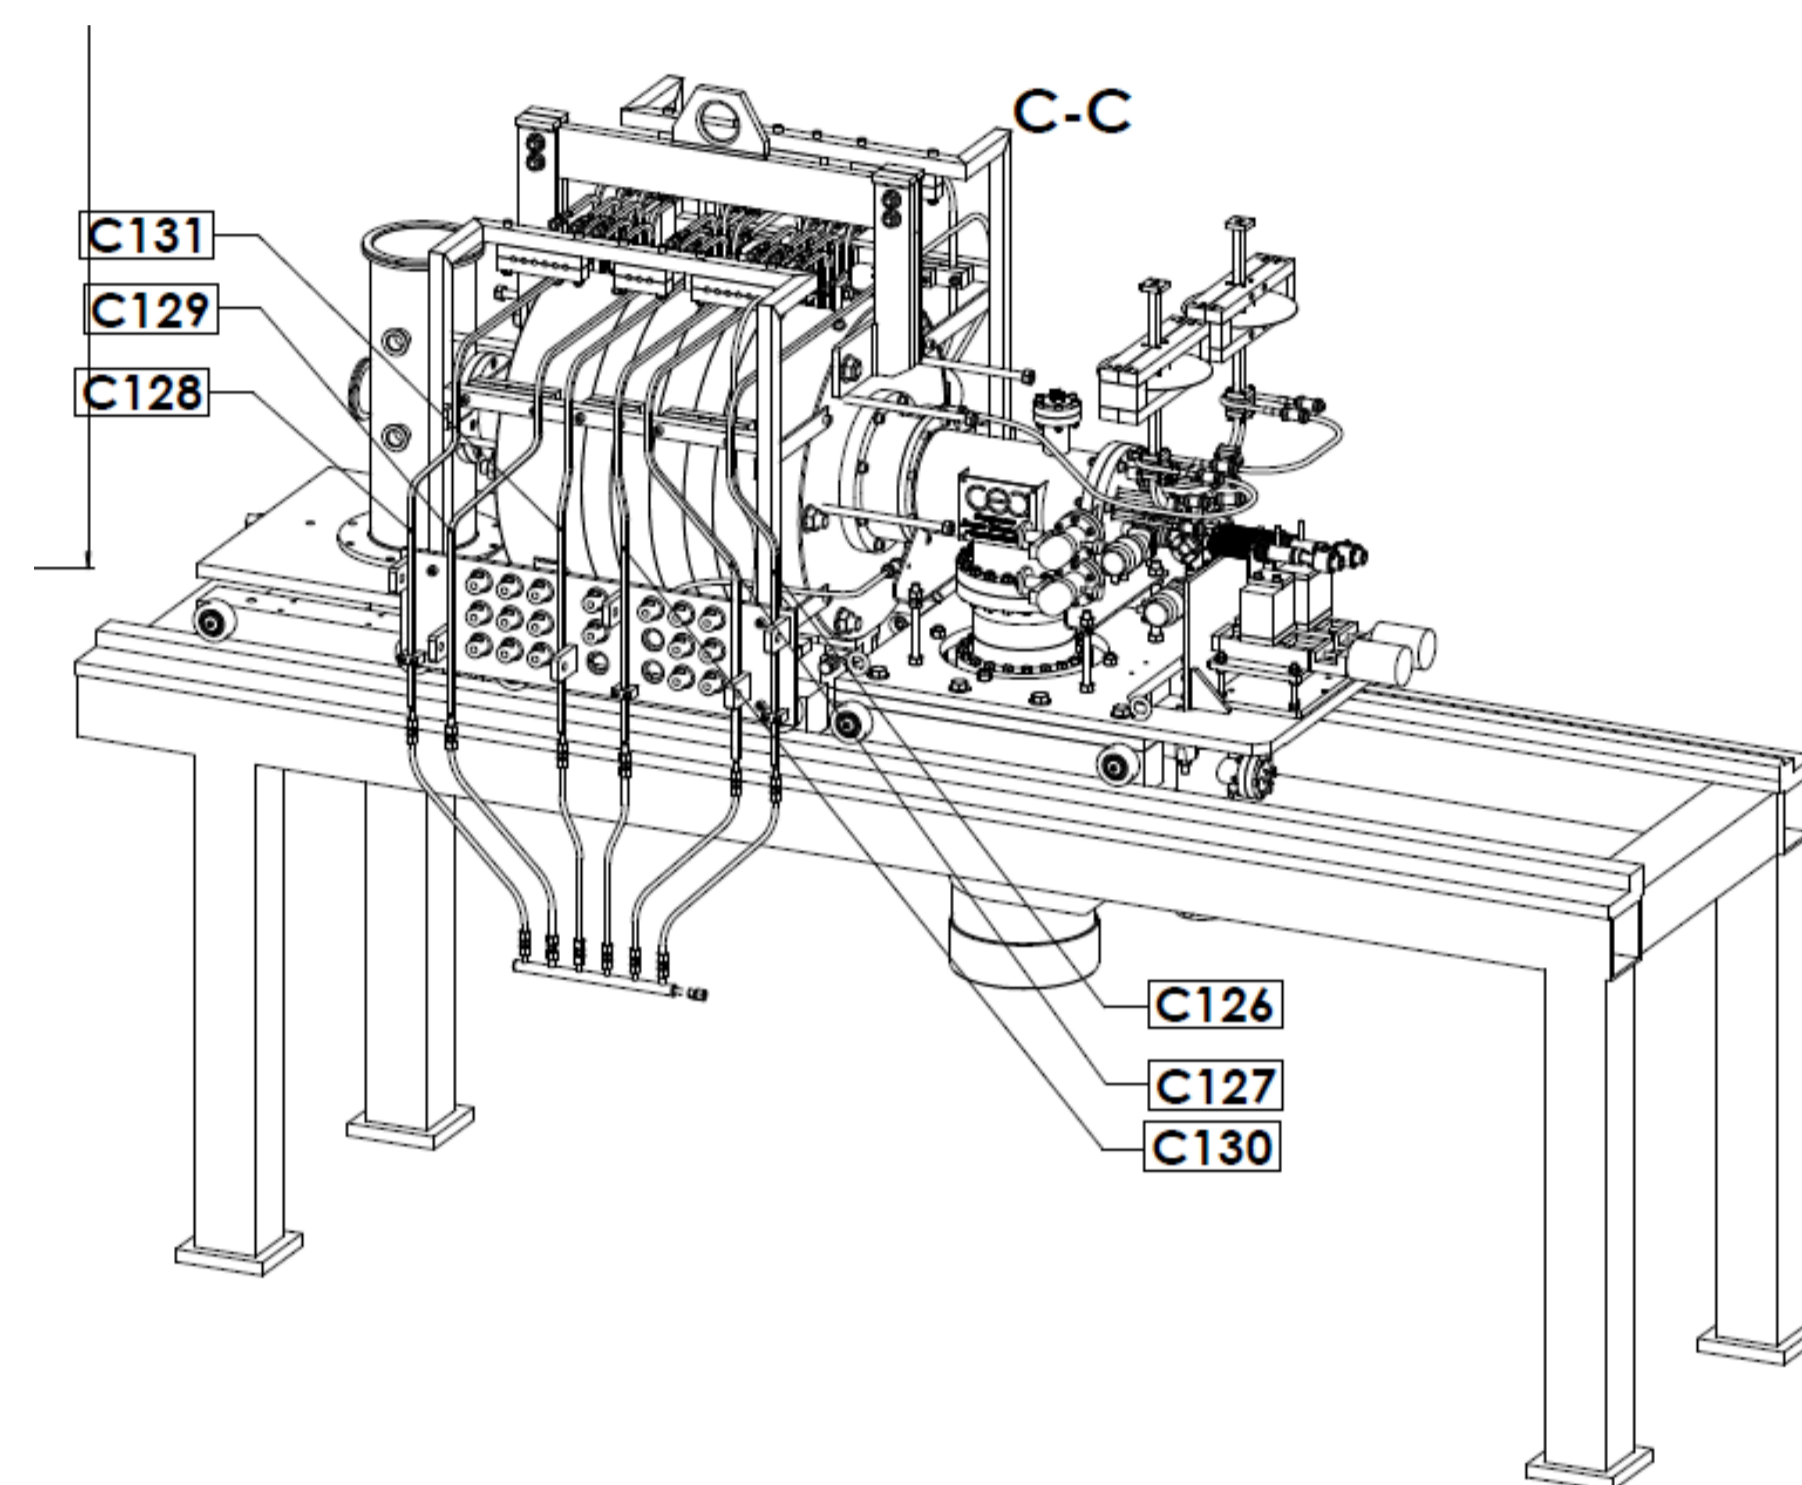

... and its implementation

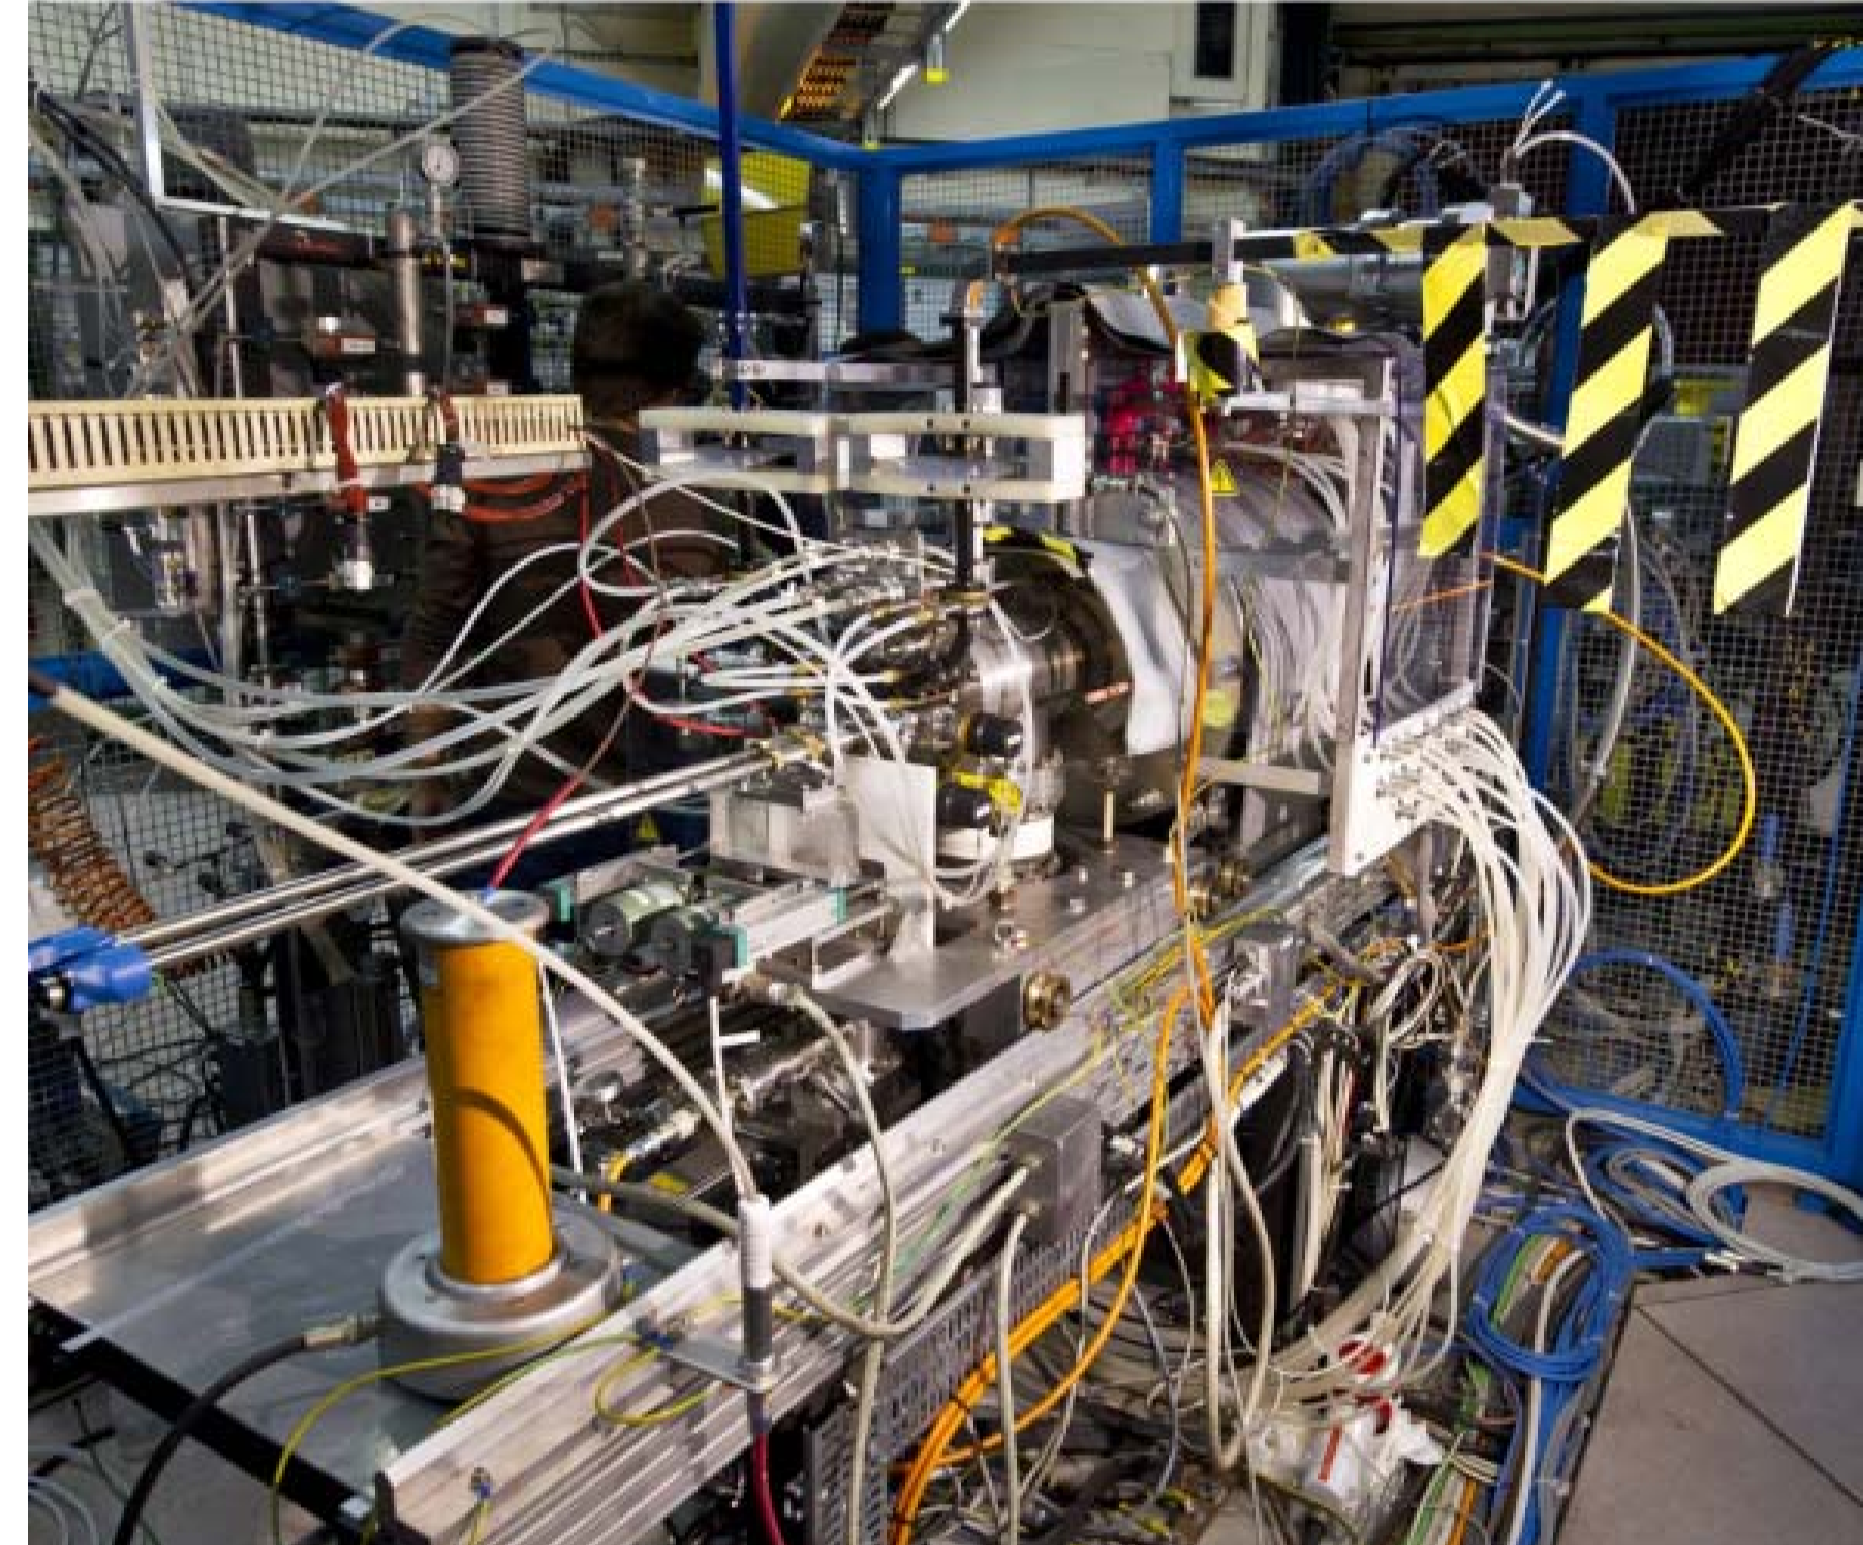

29

Material Choices

Sources usually employ a wide range of materials in their construction.

A whole range of material properties are used for Ion Source Engineering:

- Electrical Insulators and Conductors.
- Thermal Conductivity.
- Magnetic properties.
- Melting and boiling points.
- Thermal expansion.
- Mechanical strength, embrittlement, creep.
- Secondary electron yield.
- Work function (affects electron emission)
- Thermal Emissivity.
- Sputtering rate.
- Ease of construction – welding – brazing – surface finish.


30

Negative ions – Why?

- Negative ions are (generally) much harder to produce than positive ions.
- Their benefits for the following accelerator are:
 - They have the opposite charge (so are oppositely affected by E and V fields).
 - They are easily stripped to positive ions or neutrals (normally at higher energies).

Tandem

- Negative accelerated to foil, positive ion back to ground.

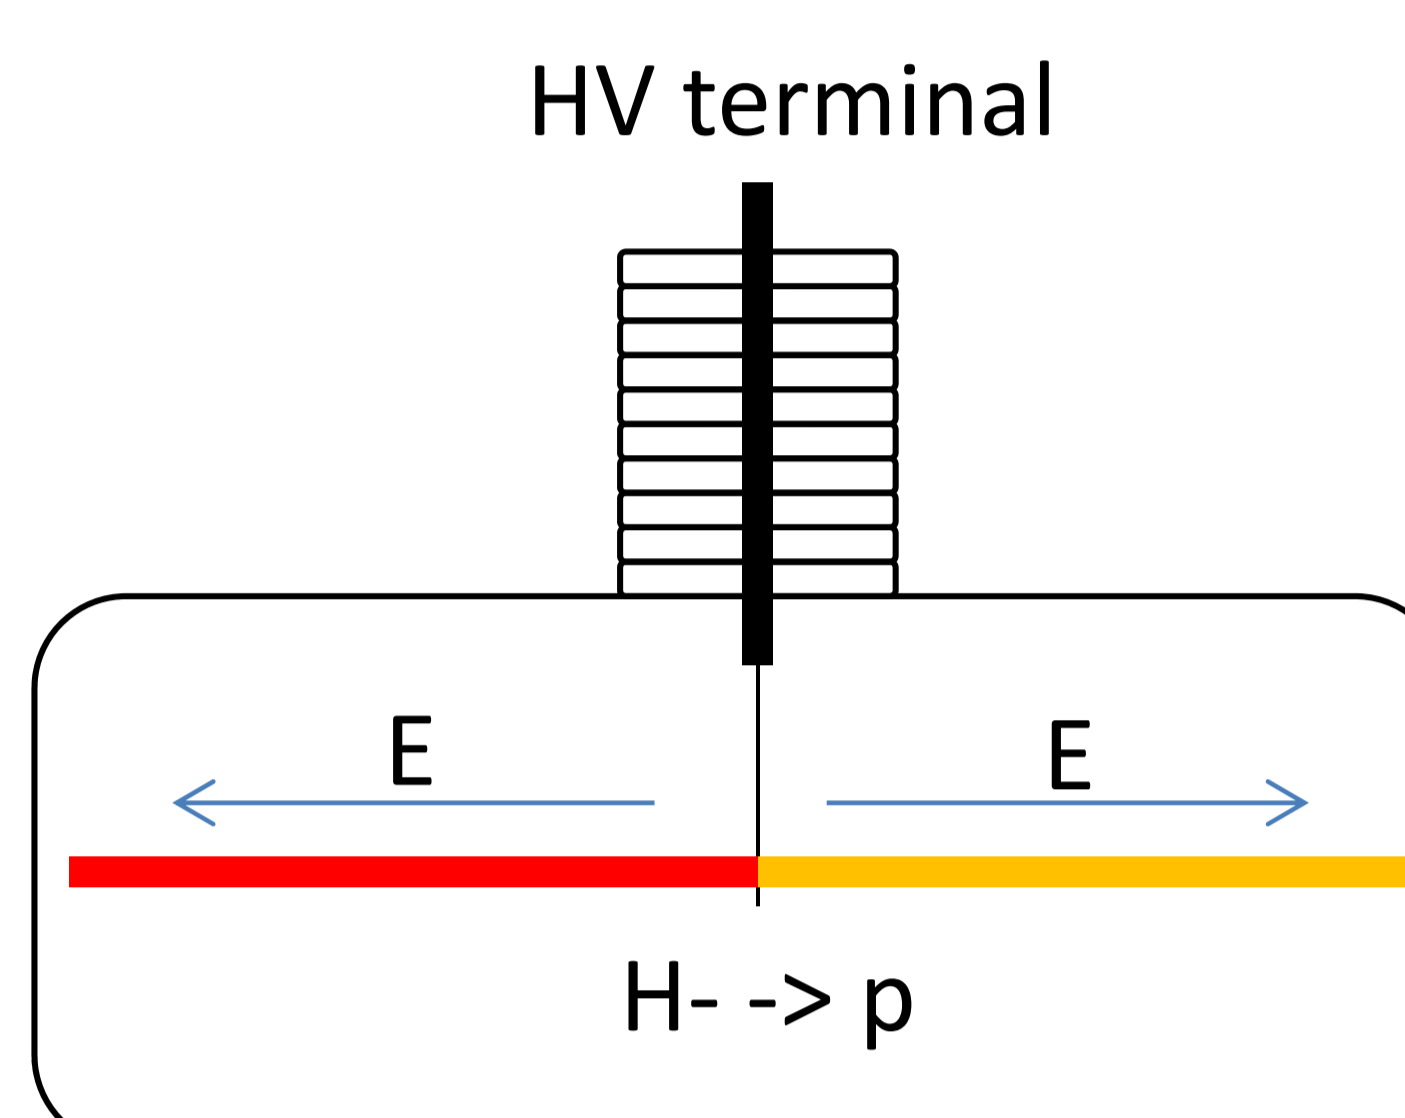


31

Negative ions – Why?


Extraction (from cyclotrons)

- Change the charge in a foil, and the positive ion extracts itself

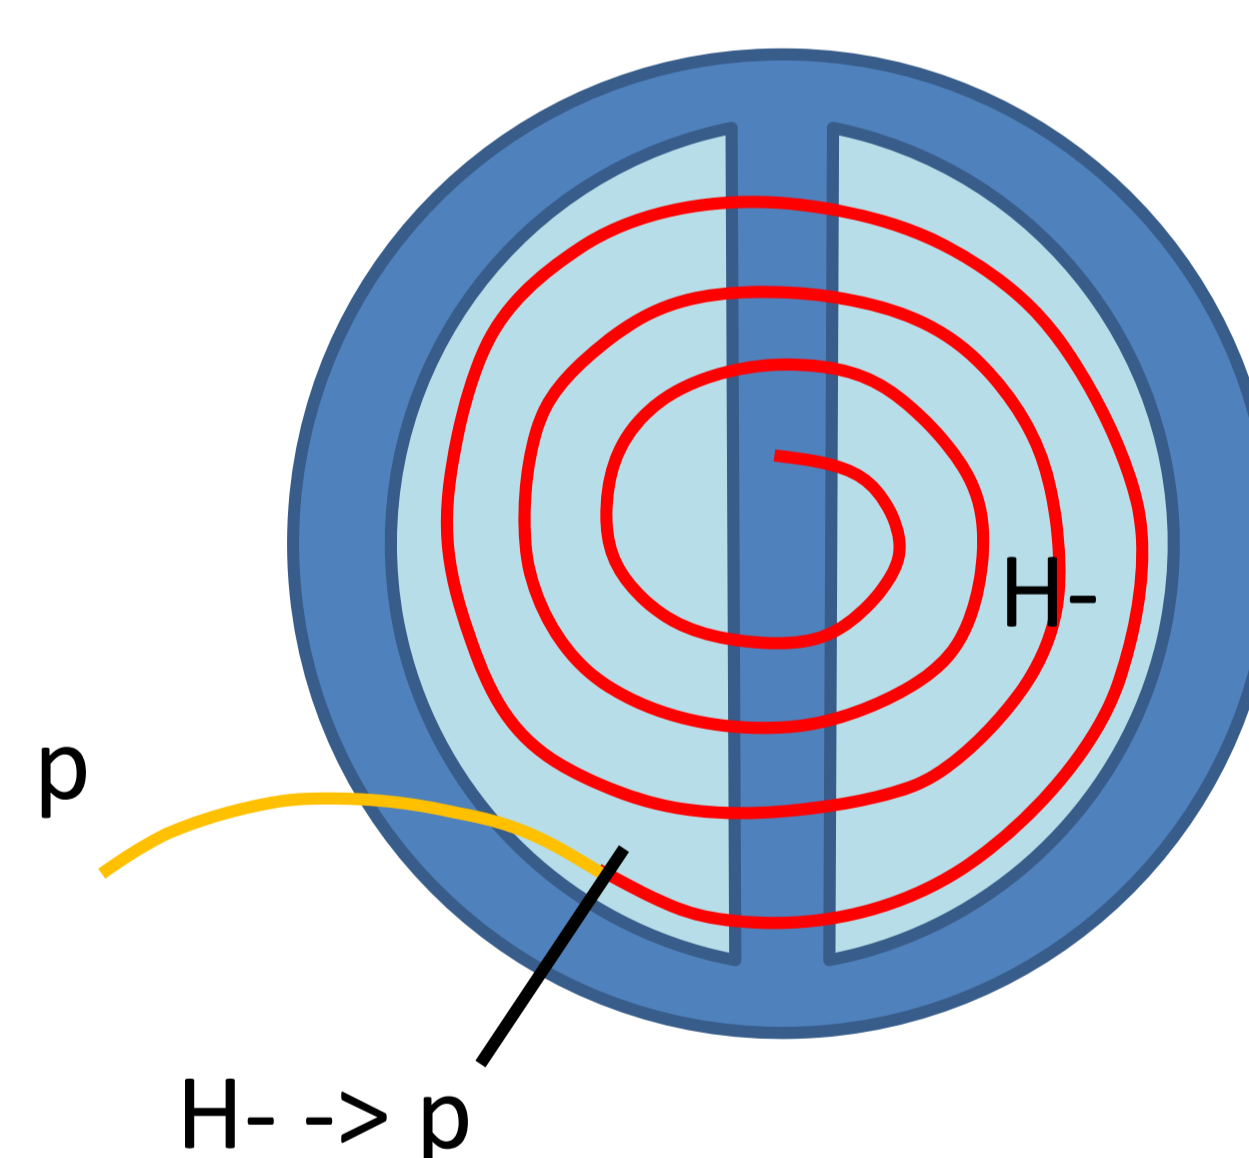


Charge exchange injection (to synchrotron).

- Overlap the negative and (circulating) positive ions – strip to positive – overcome Louville!

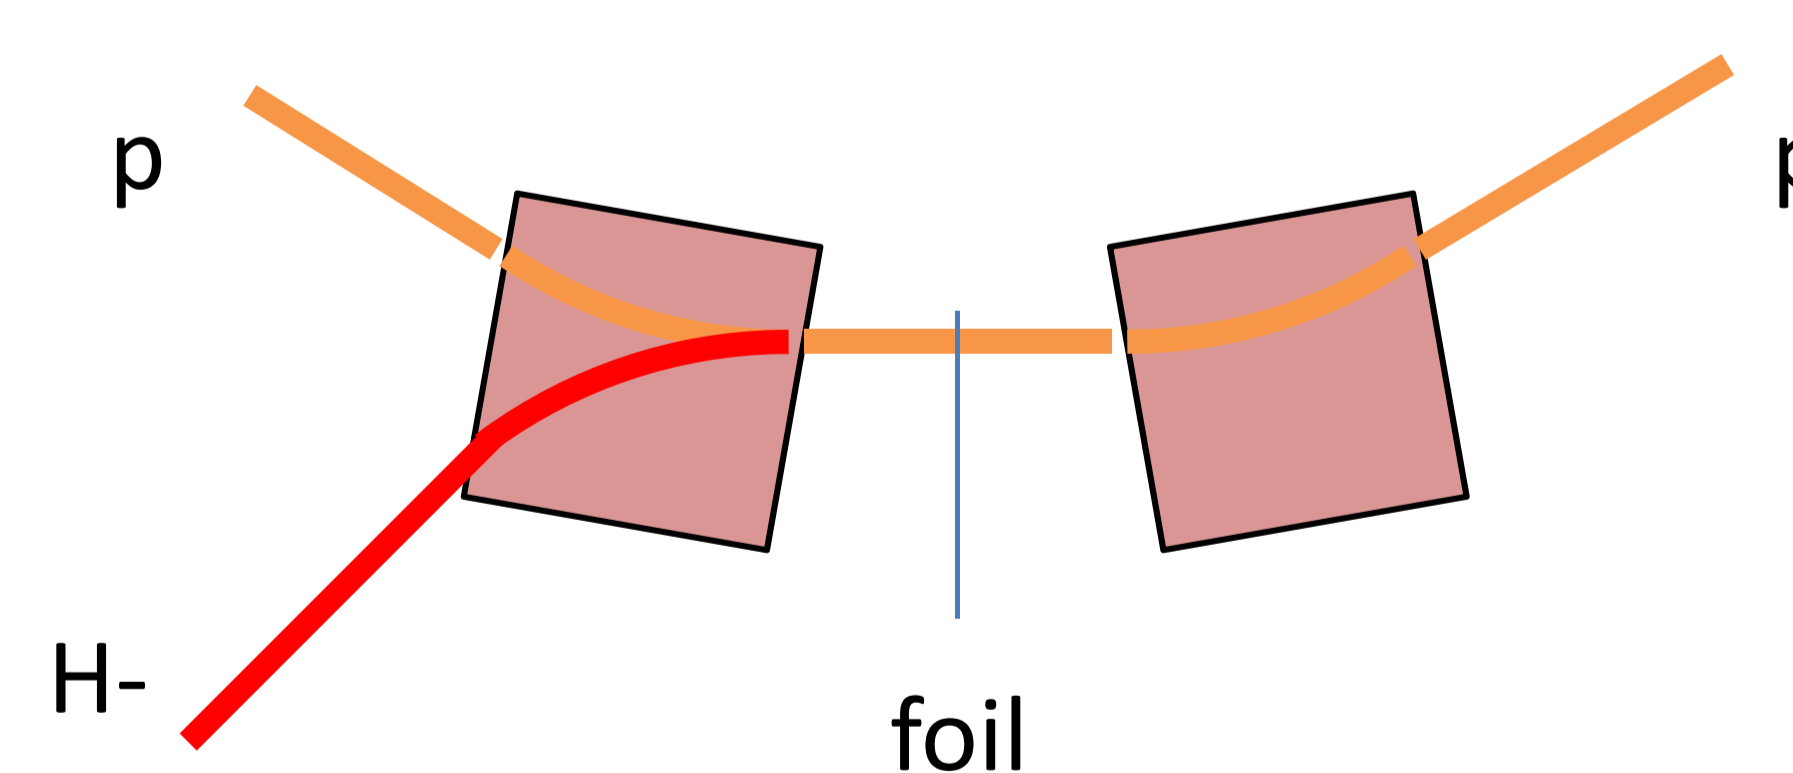

High Energy Neutral Beams (Magnetic Confinement Fusion)

- Efficient stripping to neutrals – to inject through a magnetic field.

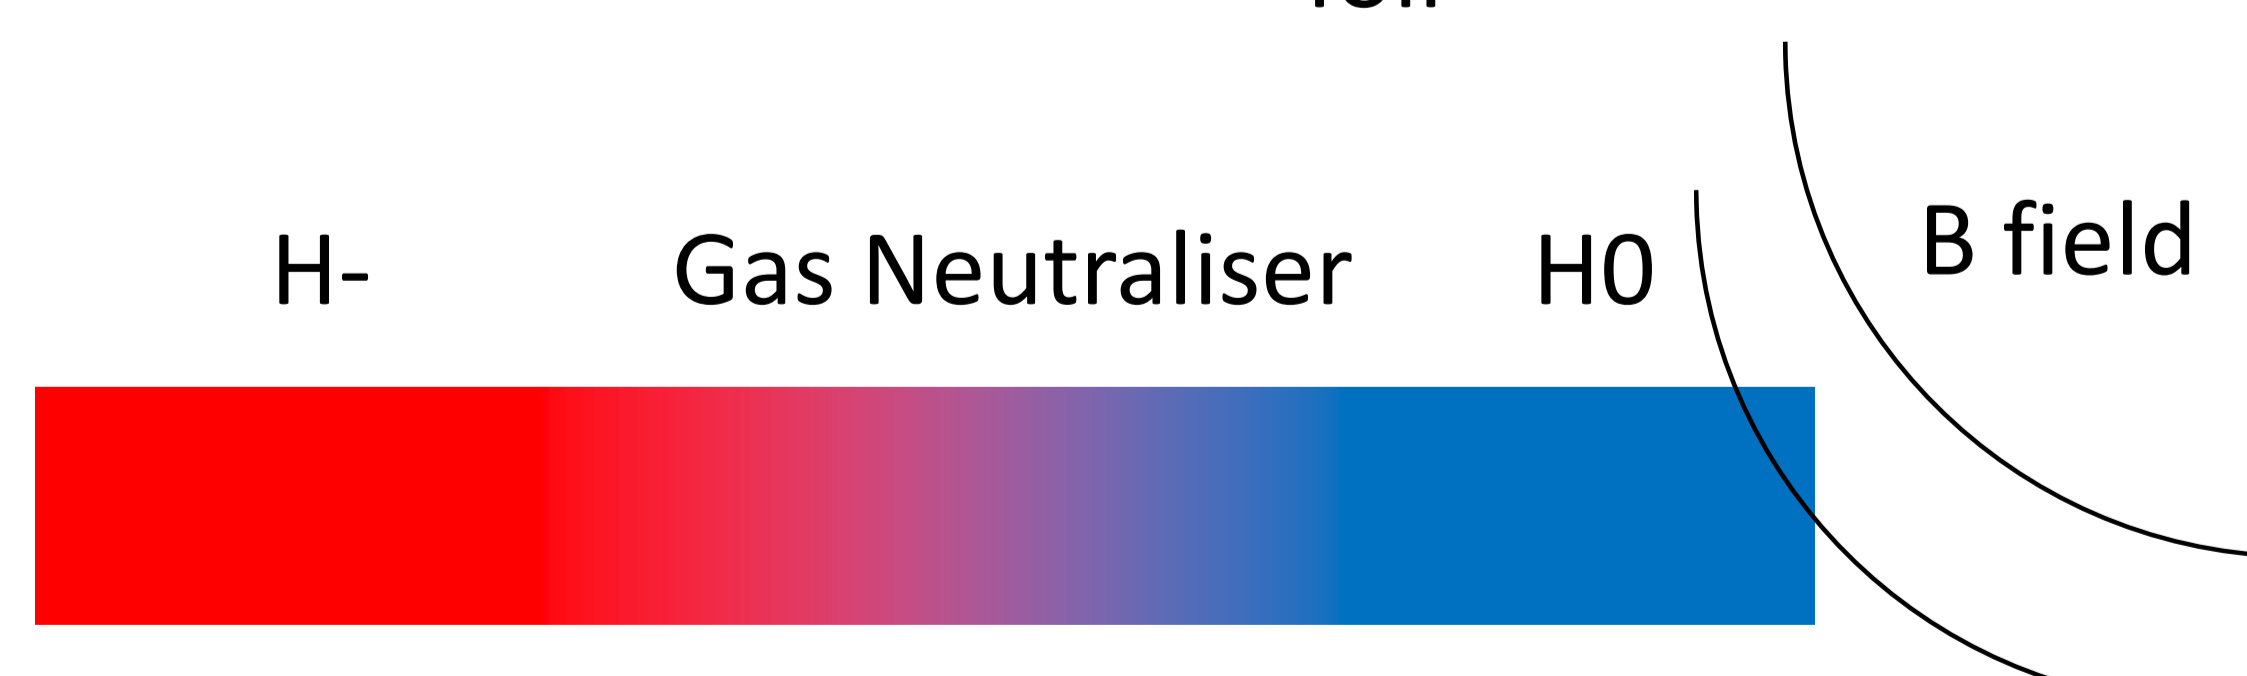

32



Charged Particle and Plasma Basics

Start with a few basic concepts for motion of charged particles in a plasma, that will help to understand how sources are working :

- Charged particles in a magnetic field
- E cross B drift
- Collisional Drift
- Magnetic Mirror

33

Plasma Particle Motion

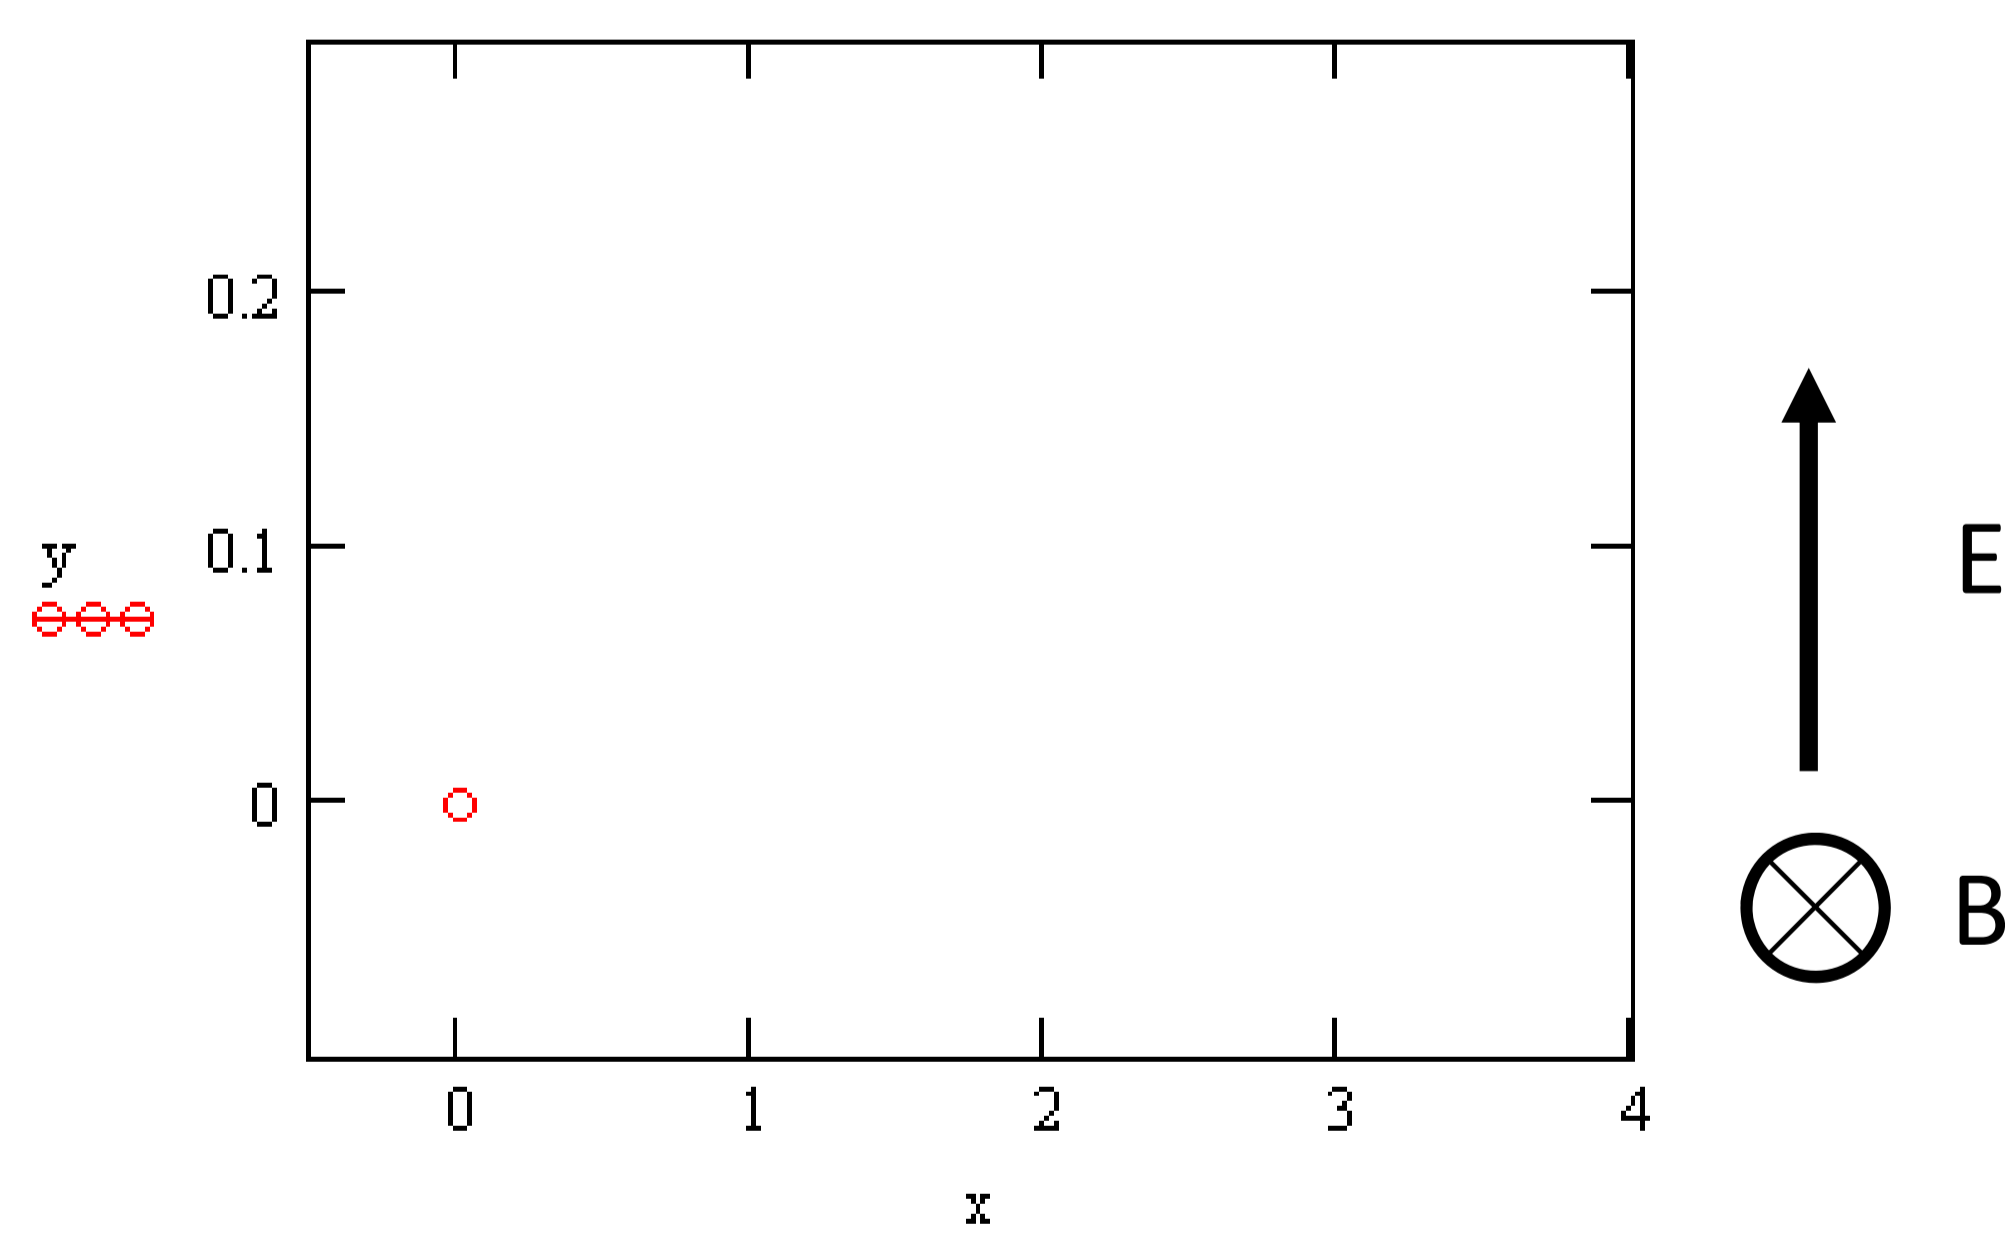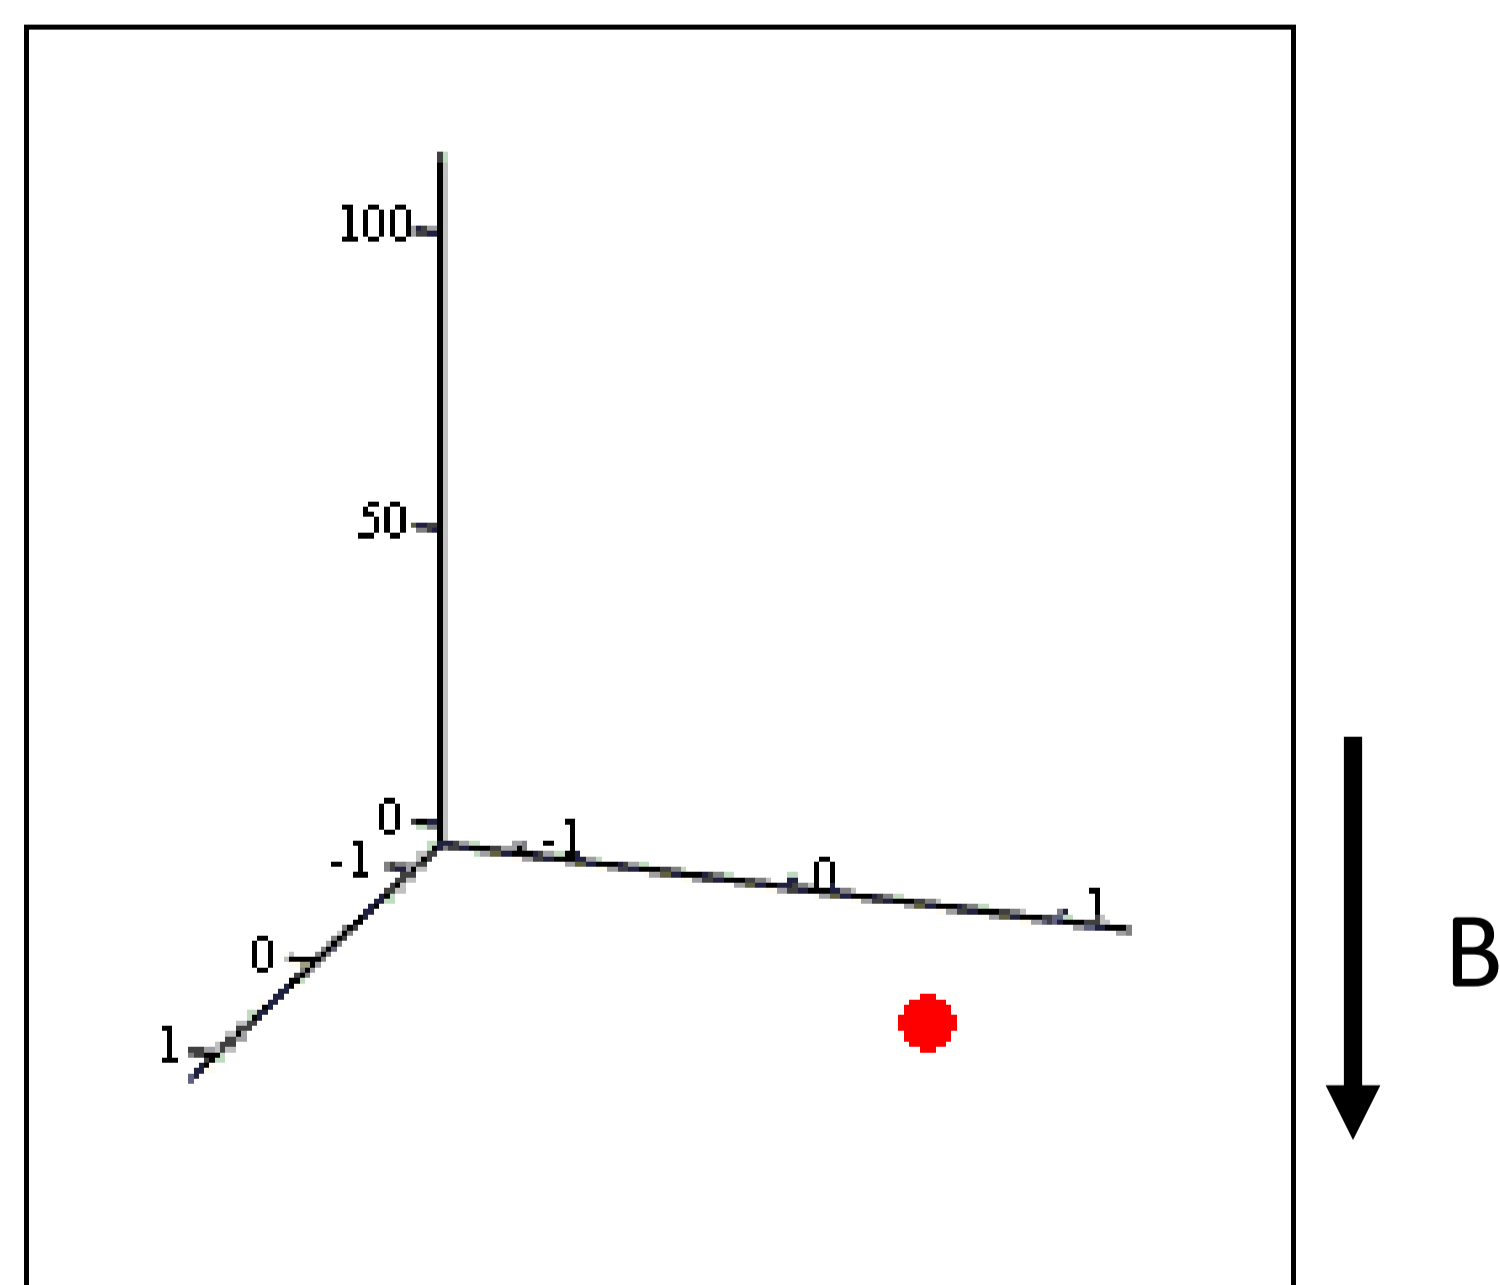


$$\rho_L = \frac{\sqrt{2mE_{\perp}}}{eB}, \omega_L = \frac{eB}{m}$$

$$v_{drift} = \frac{\vec{E} \times \vec{B}}{B^2}$$

34

Collisional Drift

$$D \sim \rho_L^2 v_c \sim \left(\frac{\sqrt{2m_p E_\perp}}{eB} \right)^2 \frac{1}{T^{3/2}} \left(\frac{m_e}{m_p} \right)^{1/2} \sim \frac{m_p^{1/2}}{T^{1/2}}$$

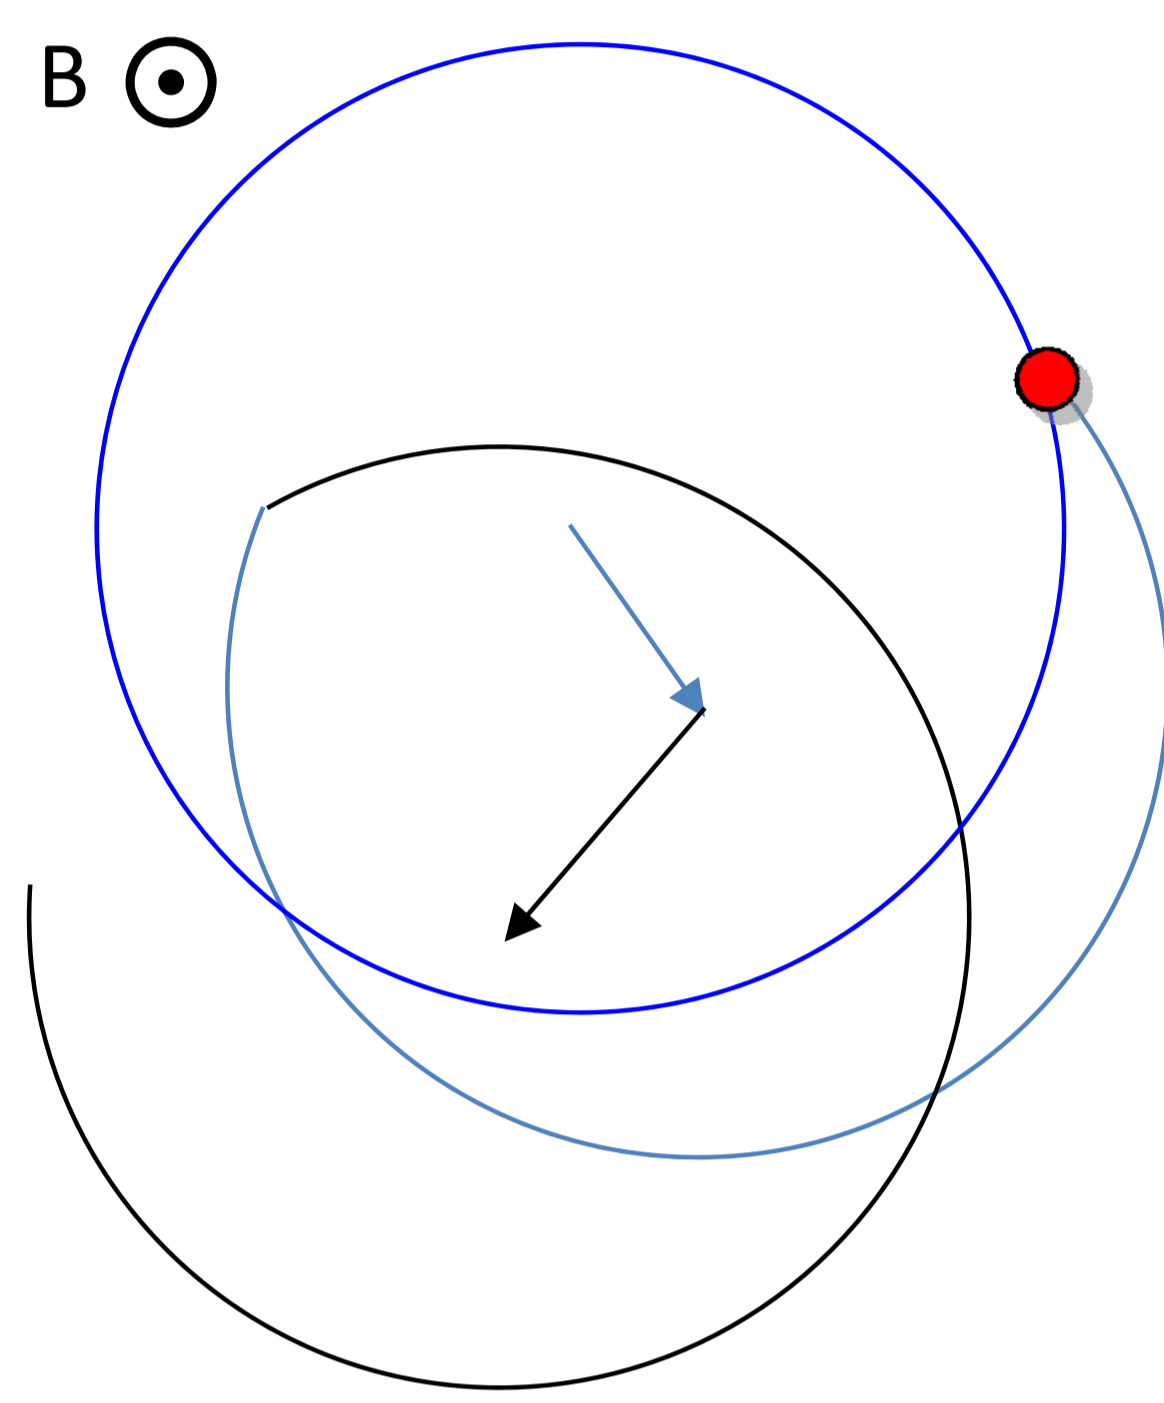


cf: opposite to classical energy – velocity equation !

$$v = \left(\frac{2E}{m} \right)^{1/2}$$

35

Magnetic Mirror

A force acts in the opposite direction to the Increasing B field

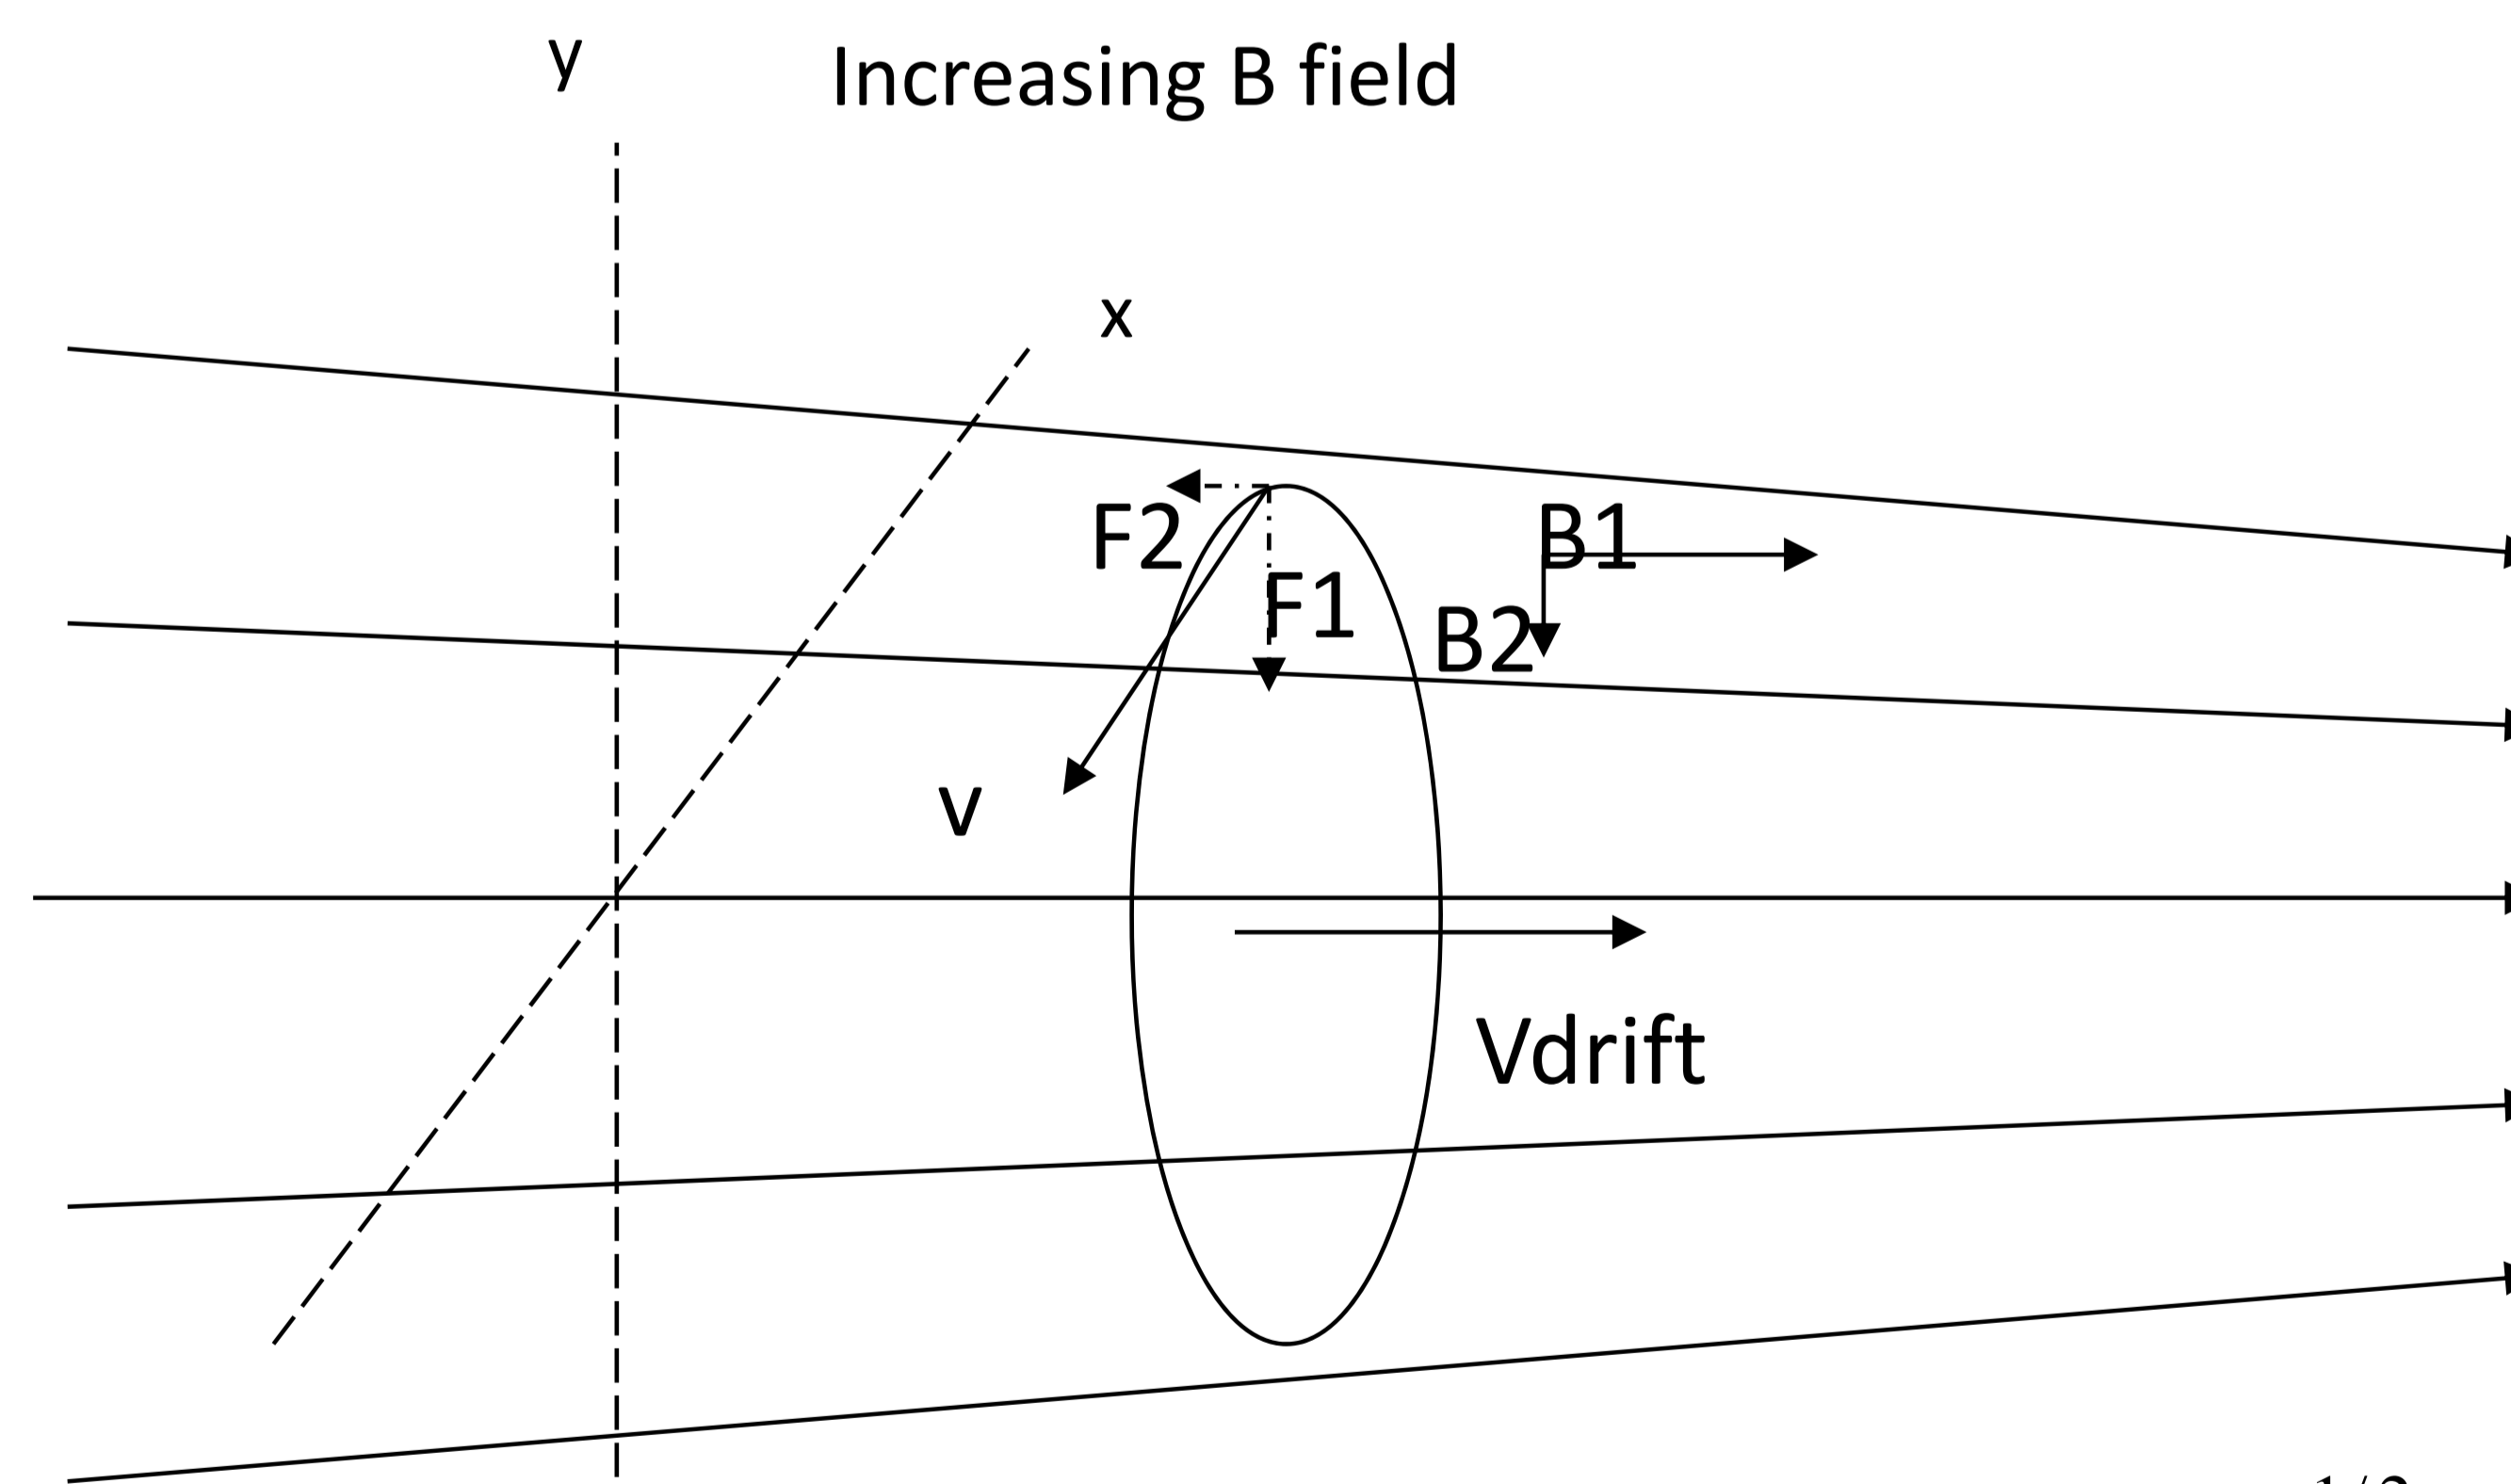

Energy is transferred from v_{drift} to v_{ecr}

$$v_{drift} = \left\{ \frac{2}{m} (K - \mu B) \right\}^{1/2}$$

$$\mu = \frac{mv_\perp^2}{2B} \quad \mu = \text{magnetic moment} \\ K = \text{total kinetic energy}$$

36

What's Next...

- We have seen some of the parameters we have to think about for an ion source.
- In the next lecture we will overview the types of source that exist

37

Symbols

B: Magnetic field
 B_b: Beam Brightness
 d: A distance (gap for example)
 D: Diffusion velocity
 e: Electron charge
 E: Electric field
 J: Current Density
 J_{CL}: Child Langmuir Current Density
 k: Boltzman constant
 m: Mass
 N : Number of particles
 q: Charge State (1..2..3)
 x : Position
 x' : Angle – px/pz
 T: Temperature
 U_d: Voltage applied
 V: Voltage used to accelerate a charge

α_x : Twiss alpha
 β_x : Twiss beta
 β : relativistic beta
 γ_x : Twiss gamma
 γ : relativistic gamma
 ε: Emittance (geometric)
 ε_{rms} : Emittance (geometric , rms)
 ε_{4rms} : 4 x ε_{rms}
 ν_c: Collision frequency
 ρ: Bending radius
 ρ_L: Larmor/cyclotron radius
 ω_L: Larmor/cyclotron frequency

38